

HONDA –	Accessory	Application	Publications No.
INSTALLATION	CIGARETTE LIGHTER	2006 CR-V	All 30572
	P/N 08U96-S9A-100		Issue Date
INSTRUCTIONS			SEP 2005
PARTS LIST	3	. Remove the driver's dashbo turning the knob clockwise,	-
Cigarette lighter		HOLDER	DRIVER'S DASHBOAR UNDER COVER KNOB Turm clockwis 90°.
		 Remove the driver's dashbo Remove the fuse box lid 	
TOOLS AND SUPPLIES REQUIRED		Remove the two self-tapping screws.	
#2 Phillips screwdriver Shop towel Small flat-tip screwdriver INSTALLATION		 Gently pull out on the driver's dashboard lowe cover to release the eight clips. If equipped, unplug the vehicle connector and remove the lower cover. 	
 Customer Information: The information is intended installation instruction is intended skilled technicians who have the equipment, and training to correct equipment to your vehicle. These should not be attempted by "do-it Make sure you have the antiradio, then write down the ract 2. Disconnect the negative cable 	d for use only by proper tools, ctly and safely add procedures -yourselfers." theft code for the lio station presets.	VEHICLE CONNECTOR (If equipped.) POCKET SELF- TAPPING SCREW CLIPS (8)	VEHICLE CONNECTOP (If equipped.) DRIVER'S DASHBOARD LOWER COVER HOOKS (2) FUSE BOX LID RETAINING TABS (2) CLIP


5. Remove the passenger's dashboard under cover (release the three clips and two pins).

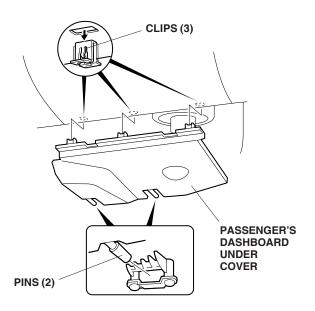


 Open the dashboard pocket lid. Remove the screw cover by releasing the two retaining clips and two retaining tabs, then remove the dashboard pocket (one self-tapping screw, then pull out to release the one clip and three retaining tabs). Unplug the vehicle connector.

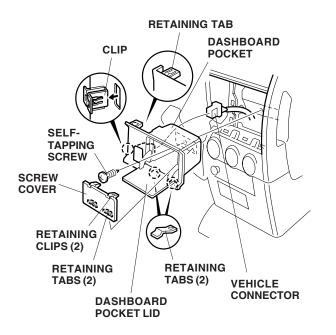


 Remove two self-tapping screws that fasten the heater A/C control panel to the dashboard. Pull the heater A/C control panel out toward you to release the four clips. Unplug the vehicle connector, then remove the heater A/C control panel.

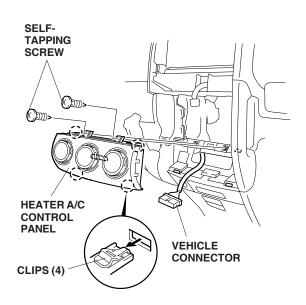


8. On A/T vehicles only, remove the two clips and six self-tapping screws, then pull the dashboard center lower cover out toward you to release the six clips. Unplug the vehicle 2-pin connector from the accessory socket, then remove the cover.

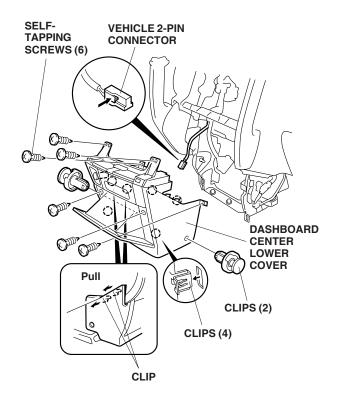


9. On M/T vehicles only, remove the four seat track end covers from the driver's seat, then remove the four bolts that secure the seat.

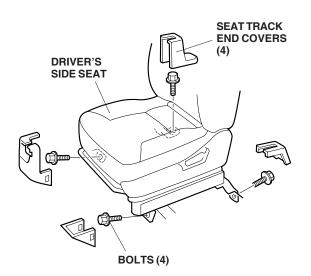


10. On M/T vehicle only, pull the shift boot down while holding the plastic clip. Remove the shift knob from the shift lever by turning it counterclockwise.

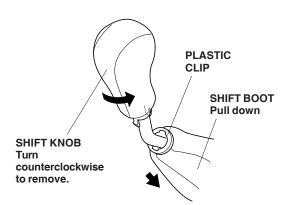


11. On M/T vehicle only, remove the two side covers (four tabs) from the center console.

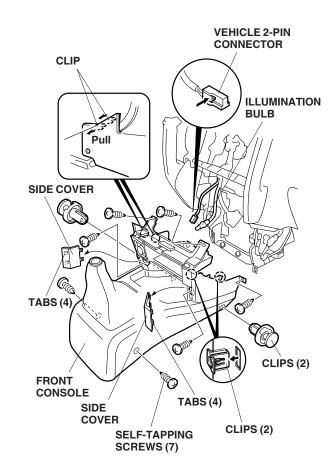

12. On M/T vehicle only, remove the two clips and seven self-tapping screws, and pull the front console out toward you to release four clips. Unplug the 2-pin connector from the accessory socket, then remove the front console. 13. Open the lid on the cigarette lighter. Using a shop towel around a flat-tip screwdriver, gently pry on the socket, then remove the case.

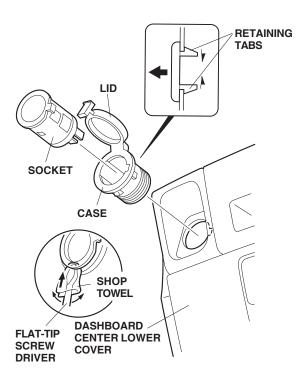


14. Slide the ring into the hole in the dashboard center lower cover in the direction shown.

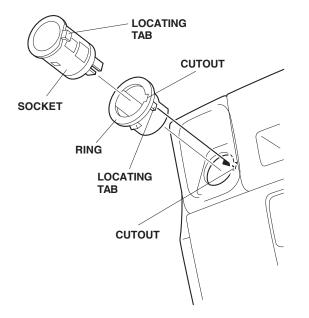


15. Align the locating tab of the socket with the cutout in the ring, then slide the socket of the cigarette lighter into the ring.

16. Connect the vehicle 2-pin connector to the socket of the cigarette lighter assembly.

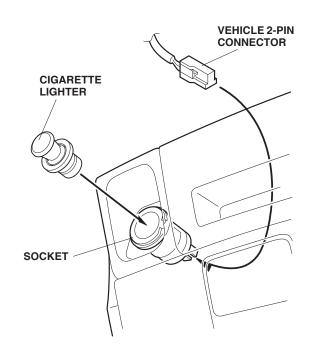

- 17. Reinstall the cigarette lighter into the socket.
- Attach the cigarette lighter fuse label (15A) over the No. 18 spot on the back of the fuse box cover.

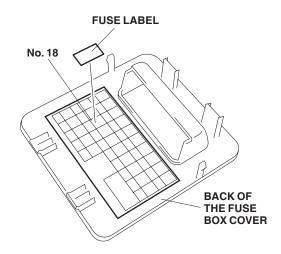

- 19. Reinstall the dashboard center lower cover and push the cigarette lighter into the socket.
- 20. Reinstall all removed parts. Be sure that all retaining clips and tabs are securely fastened.
- 21. Check that all connectors are plugged in.
- 22. Reconnect the negative cable to the battery.
- 23. Reset the clock and the radio station presets.
- 24. Test the cigarette lighter.

NOTE: Whenever the battery is disconnected, the driver's AUTO function is disabled.

- 25. Start the engine. Push down on the driver's window switch until the window is fully open.
- 26. Pull up on the driver's window switch to close the window completely, then hold the switch for a second or two more.
- 27. Test the AUTO window function.