– 🕅 HONDA –			
_	Accessory	Application	Publications No.
INSTALLATION	CIGARETTE LIGHTER P/N 08U96-S9A-100	2006 CIVIC HYBRID	All 30318
INSTRUCTIONS	P/N 00030-33A-100		SEP 2005
PARTS LIST Cigarette lighter	3.	Cover the shift lever with a shop towel to protect it from damage.	
Gigarette lighter		SHOP TOWER	SHIFT LEVER
Fuse label <			
TOOLS AND SUPPLIES REQUIRED Shop towels Small flat-tip screwdriver		4. Shift to "S" or "2." Remove the lid from the dashboard center lower cover (four retaining tabs).	
 INSTALLATION Customer Information: The information instruction is intendered by skilled technicians who have the equipment, and training to correct equipment to your vehicle. These should not be attempted by "do-instruction, then write down the rate of the equipment the negative cables. Disconnect the negative cables. 	d for use only by proper tools, ctly and safely add e procedures t-yourselfers." theft code for the dio station presets.	SHIFT LEVER ("S" or "2" position) DASHBOARD O LOWER COVER OF A	

- Open the accessory socket cover. Using a shop towel around a small flat-tip screwdriver, gently pry on the accessory socket to pop it out. Disconnect the vehicle 2-pin connector from the accessory socket.
- 7. Slide the ring into the hole in the dashboard center lower cover in the direction shown.



10. Push the cigarette lighter into the socket.



11. Attach the 15A fuse label to the No. 29 slot to the left kick panel.

LEFT

KICK



- 12. Reinstall the lid in the dashboard center lower cover.
- 13. Reconnect the negative cable to the battery.
- 14. Enter the customer's radio anti-theft code, and reset the radio station presets.
- 15. Reset the clock.
- 16. If the IMA battery level gauge (BAT) displays zero segments, start the engine and hold it between 3,500 and 4,000 rpm (in Park or neutral) until the IMA level gauge (BAT) displays at least three segments.
- 17. Because the battery was disconnected, you need to enter the Honda multi-matic feedback signal as described in the service manual,
- 18. Test the cigarette lighter.

NOTE: When the battery is disconnected, the driver's window AUTO function is disabled.

19. Start the engine. Push down on the driver's window switch until the window is fully open.

Pull up on the driver's window switch to close the vindow completely, then hold the switch for 2 seconds or more.

bower and raise the driver's window to check the operation of the driver's window AUTO function.