

r 🕅 HONDA -	Accessory	Application	Publications No.
INSTALLATION	ALL SEASON		All 31029
	FLOOR MATS	2006 ELEMENT	Issue Date
INSTRUCTIONS	08P13-SCV-100		OCT 2005
Put this instruction in the glove box with the vehicle owner's manual.			
PARTS LIST		Installing the Anchors	
Front mat		 In front of the driver's and passenger's seats locate the projections on the plastic floor cover. Using a utility knife, cut out the projections to expose the plastic grommets. 	
		Driver's Seat:	PROJECTION
Rear mat		SEAT	
		BRACKET	
		PROJECTION	
3 Floor mat anchors		50 mm	
		(2 in.)	
3 Self-tapping screws			SEAT BRACKET 80 mm
TOOLS AND SUPPLIES REQUIRED		PLASTIC (3 in.) FLOOR COVER	
Phillips screwdriver		PROJECTION (Cut out the plastic floor	
Utility knife			to expose the mets.)
Tape measure		Passenger's Seat:	
INSTALLATION			
NOTE:			\geq
 A floor mat anchor prevents the front floor mat from sliding forward and possibly interfering with the pedals. 			
 If you remove the front floor mat, make sure you re-anchor it when you put it back in your vehicle. 			
 If you replace the floor mat, use factory floor mats designed to be used with the floor mat anchor. 		PROJECTION SEAT BRACKET 80 mm (3 in.)	
 If you use a non-factory floor mat in the driver's foot well, make sure it fits properly and that it can be used with the floor mat anchors. 			
 Do not put additional floor mata anchored mat; the additional m forward and possibly interfere 	nats may slide		TION the plastic floor cover to the grommets.)

2. Install an anchor to each of the three grommets using one self-tapping screw for each anchor.

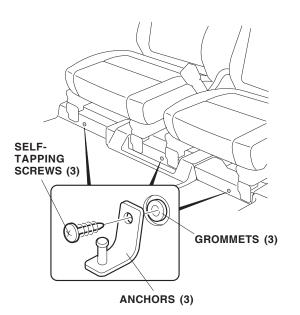


3. On the EX model vehicle, use a utility knife to cut out the center of the front floor mat to fit around the subwoofer.

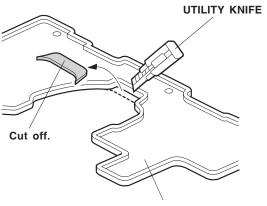

FRONT MAT

Installing the Floor Mats

4. Install the front floor mat by hooking the three floor mat rings over the three anchor pins.

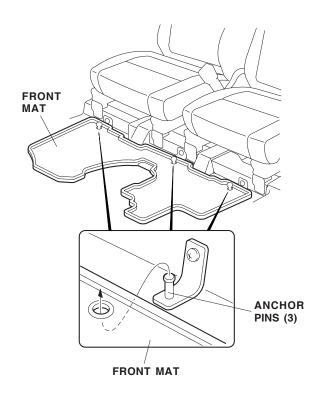

5. Install the rear mat.

