
- (H) HONDA	Accessory	Application Publications No.
INSTALLATION INSTRUCTIONS	SKI ATTACHMENT	All 33083
	P/N 08L03-TA1-100B	Issue Date
		JULY 2006
Put this info	ormation in the glove boy	with the vehicle owner's manual.
PARTS LIST		1. Using a flat-tip screwdriver, push in on the locking
2 Ski attachments		tab and remove the roof rack cover. Remove the roof rack cover from the other roof rack the same way.
4 Knobs	P	ROOF RACK COVER
4 T-bolts		Push
4 Spacers		FLAT-TIP SCREWDRIVER LOCKING TAB
2 Keys	<u>C</u>	ROOF RACK
TOOLS REQUIRED		2. Remove the rubber moldings from the front and rear roof rack crossbars. Retain the rubber moldings to be reinstalled if the ski attachments are removed.
Flat-tip screwdriver		RUBBER
T30 Torx bit		MOLDING
Ratchet		
INSTALLATION		
NOTE:		CROSSBAR
<ul> <li>The ski attachments are desexclusively with a Honda ro separately. If the vehicle is r rack, install a roof rack befor attachments.</li> </ul>	of rack, which is sold not equipped with a roof	RUBBER MOLDING


• The ski attachments may be installed either with both on the driver's side or with both on the passenger's side.

RUBBER MOLDING


3. Slide two T-bolts into each crossbar.

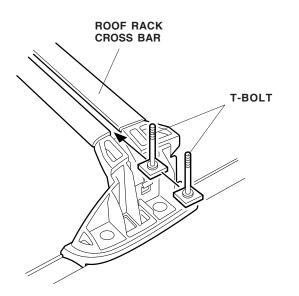


- 4. Reinstall the roof rack covers.
- 5. Insert the key, and turn it clockwise to unlock the front ski attachment. Press the button and open the top frame completely.

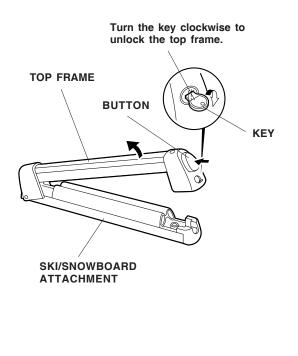

6. Position the spacers and the front ski attachment onto the T-bolts, and install the two knobs. Tighten the knobs securely.

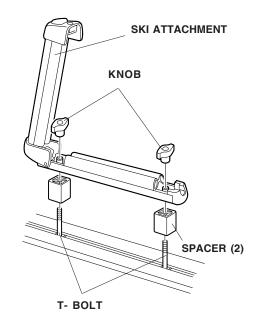


- 7. Repeat steps 5 and 6 to install a ski attachment to the rear crossbar.
- 8. Close the top frame, and listen for it to click into position, then turn the key counterclockwise to lock the top frame.
- 9. Rock the ski attachment in all directions to make sure it is installed securely. If necessary, retighten the T-bolts, or reinstall the ski attachment.
- 10. Tell the customer to write down the key number, and put the number in a safe place in case the key is lost or stolen.
- 11. To prevent excess wind noise, cut each rubber molding, and install the cut pieces into the grooves in the crossbars.

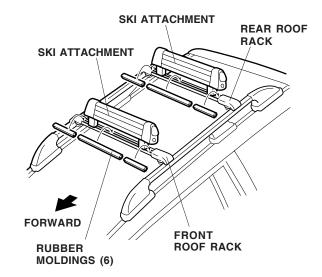


## Loading Skis on the Attachment


1. Insert the key, and turn it clockwise to unlock the top frame. Push the button and raise the top frame completely.

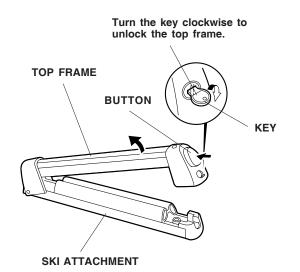


- 2. Position the skis on the attachment:
  - Load with the rear of the skis facing forward, and the bindings between the front and rear attachments.

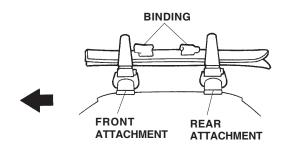


• If the bindings cannot be positioned between the front and rear attachments, install the skis with one of the bindings positioned behind the rear attachment.

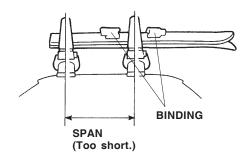


3. Close the top frame and listen for it to click into position. Depending on the thickness of the ski you may need to attach the hook in the second position.

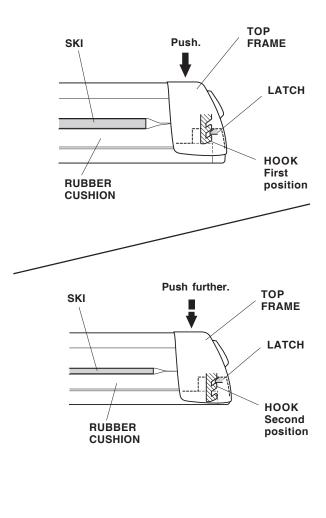

4. Lock the top frame by turning the key counterclockwise. Remove the key.

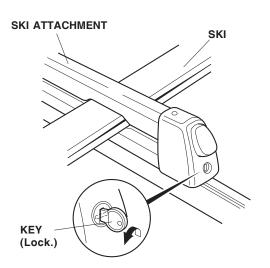

5. With the ski attached, rock the attachment in all directions to make sure it is installed securely. Adjust as necessary.

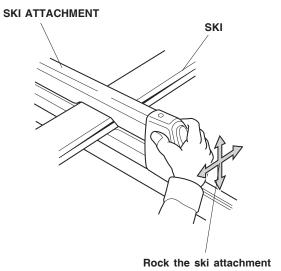

in all directions to make sure it is installed securely.