

INSTALLATION INSTRUCTIONS ARMREST WITH STORAGE COMPARTMENT P/N 08U89-SCV-112 2008 ELEMENT (WITH A/T ONLY) All 36515 Issue Date MAY 2007 PARTS LIST If the vehicle is equipped with an armrest, continue with step 1, otherwise go to step 5.		Accessory	Application	Publications No.
INSTRUCTIONS COMPARTMENT P/N 08U89-SCV-112 (WITH A/T ONLY) Issue Date MAY 2007 PARTS LIST If the vehicle is equipped with an armrest, continue with step 1, otherwise go to step 5. If the vehicle is equipped with an armrest, continue with step 1, otherwise go to step 5. Armrest box If the vehicle is equipped with an armrest, continue with step 1, otherwise go to step 5. Base Image: Comparison of the difference of the di		-	2008 ELEMENT	
Armrest box Armrest box Base 2 Socket bolts Armrest box With step 1, otherwise go to step 5. 1. Zip open the existing armrest cover on the driver seat, and pull back the cover as shown. EXISTING ARMREST COVER WASHER (arge) WASHER (arge) WASHER (small) SELF LOCKING				
Base 2 Socket bolts 2 Socket bolts Seat, and pull back the cover as shown. Seat, and pull back the cover a	PARTS LIST		If the vehicle is equipped with an armrest, continue with step 1, otherwise go to step 5.	
Base 2 Socket bolts ARMREST COVER WASHER (small) SELF LOCKING COVER WASHER (small) SELF LOCKING	Armrest box		1. Zip open the existing armrest cover on the driver's	
2 Socket bolts			ARMREST COVER DRIVER'S	
2 Socket bolts WASHER (small) SELF LOCKING	Base			
	2 Socket bolts		WASHER (small) SELF LOCKING	
Owner's manual 2. Remove the hex nut, small washer, and large washer that secures the existing armrest, and	Owner's manual			
TOOLS AND SUPPLIES REQUIREDremove the armrest.Ratchet				
10 mm and 17 mm Sockets	10 mm and 17 mm Sockets			
5 mm Hex wrench				
	Utility knife Tape measure			
Felt-tip pen	-			
INSTALLATION				
NOTE: Be careful not to damage the seat-back when installing the armrest with storage compartment.				


3. Remove the base (two bolts). Set the armrest and the base with bolts aside; they will not be reused.

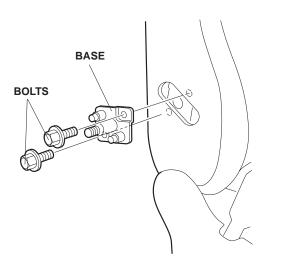


4. Using a tape measure and a felt-tip pen, measure and mark the seat-back cover in the area shown. Cut out the marked area on the seat-back cover with a utility knife, then go to step 7.

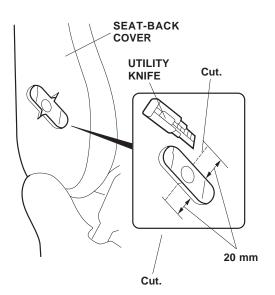


5. Using a felt-tip pen and tape measure, measure and mark the seat-back cover as shown. Push in on the mark, and confirm that the mark is centered over the hole in the seat base.

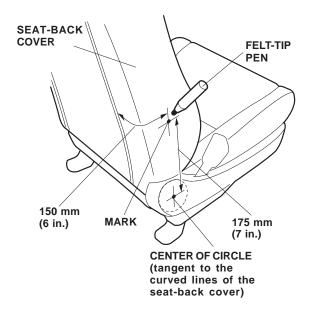


6. Using a utility knife, make two 70 mm (3 in.) cuts in the seat-back cover. Using these 70 mm (3 in.) cuts as a guide, cut out the seat urethane to expose the seat base.

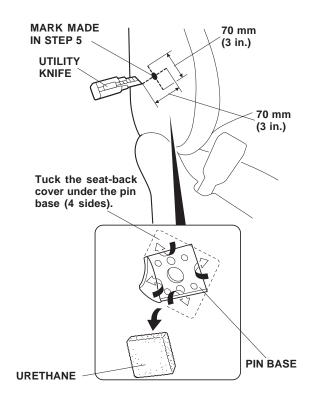

 Get the new base from the kit, and position it on the seat's pin base. Install the two socket bolts. Torque the socket bolts to 10-12 N-m (7-9 lbf-ft).

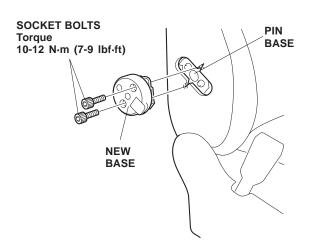

8. Insert the armrest into the holes in the base and push on it until it clicks into position. The white recessed portion of the push knob should be visible.

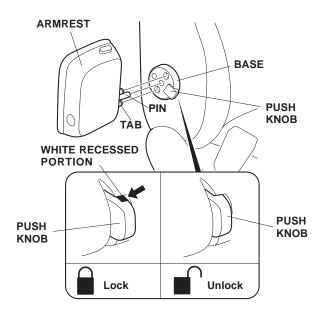

- 9. Check that the armrest operates properly by moving it up and down with your hand.
- 10. To release the armrest, press on the push knob and pull out on the armrest.
- 11. Put the armrest owner's manual in the glove box.