


2. If equipped, remove the right roof rack side rail. Remove the six screws from the right side rail, then remove the four self-tapping Torx screws and washers, and remove the side rail.




- 6 SCREWS **RIGHT SIDE RAIL** REAR CROSSBAR FRONT CROSSBAR **RIGHT SIDE** RAIL **4 WASHERS** 4 SELF-TAPPING TORX SCREWS
- 3. Remove the rubber moldings from the front and rear roof rack crossbars. Retain the rubber moldings to reinstall later.

Odyssey (EX):

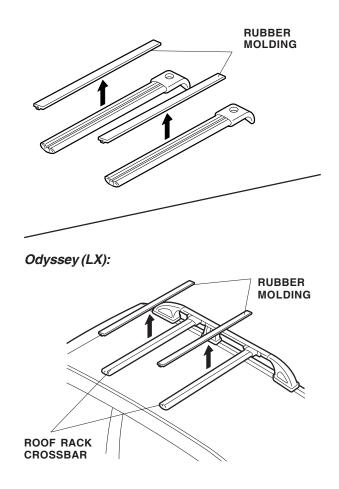


4. Slide the two long bolts into each crossbar.


Odyssey (EX):

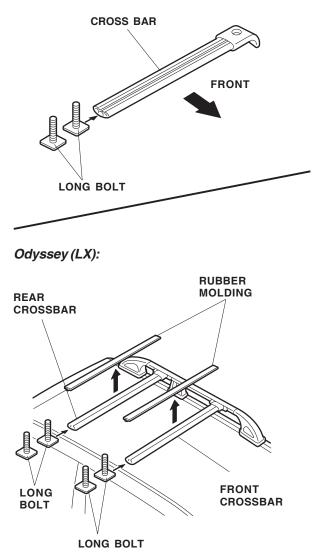

 Reinstall the right side rail to the crossbars (if equipped), and torque the screws to 5 to 7 lb-ft (7 to 10 N·m). Reinstall the caps and crossbars (if equipped), and torque the TORX bolts to 7 lb-ft (10 N·m). Reinstall the roof rack cover (if equipped). 6. Insert the key, and turn it clockwise to unlock the front ski attachment. Press the button, and open the top frame completely.

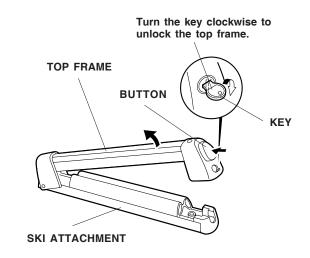


 Position the spacers and the front ski attachment onto the T-bolts, and install the two knobs. Tighten the knobs securely.

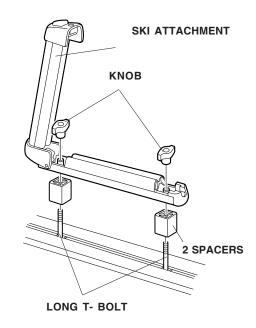

- 8. Repeat steps 6 and 7 to install a ski attachment to rear crossbar.
- 9. Close the top frame and listen for it to click into position, then turn the key counterclockwise to lock the top frame.
- 10. Rock the ski attachment in all directions to make sure it is installed securely. If necessary, retighten the T-bolts or reinstall the ski attachment.


11. To prevent excess wind noise, cut each rubber molding and install the cut pieces into the grooves in the crossbars.

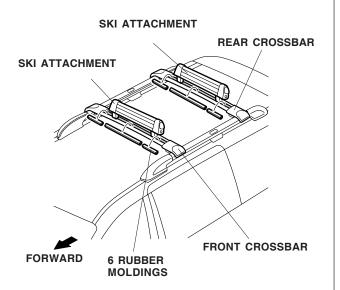


12. Write down the key number, and put it in a safe place in case the key is lost or stolen.

Loading the Skis on the Vehicle


1. Insert the key, and turn it clockwise to unlock the top frame. Push the button, and raise the top frame completely.

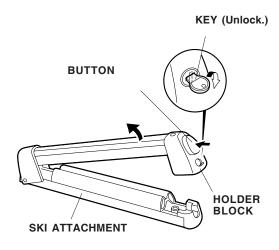


2. Position the skis on the attachment with the rear of the skis facing forward, and the bindings between the front and rear attachments.

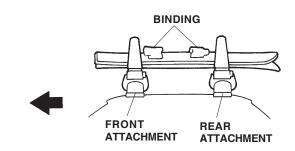


• If the bindings cannot be positioned between the front and rear attachments, install the skis with one of the bindings positioned behind the rear attachment.

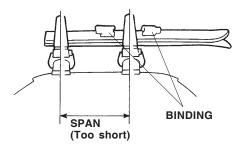


3. Close the top frame, and listen for it to click into position. Depending on the thickness of the skis, you may need to attach the hook in the second position.

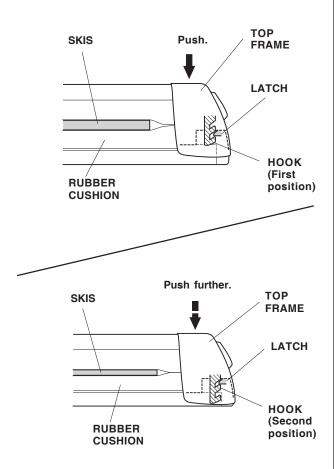

4. Lock the top frame by turning the key counterclockwise. Remove the key.

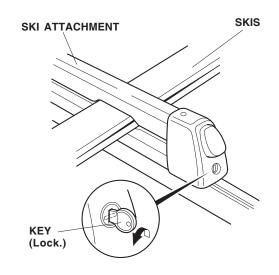

5. With the skis attached, rock the attachment in all directions to make sure it is installed securely. Adjust as necessary.

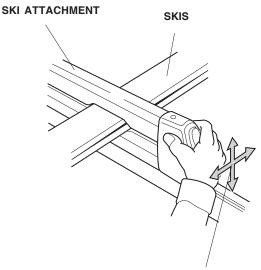

Rock the ski attachment in all directions to make sure it is installed securely.