



INSTALLATION INSTRUCTIONS

Accessory
17" SPARE WHEEL
P/N 08W17-SJC-101A

Application
2009 RIDGELINE

Publications No.
All 40360
Issue Date
AUG 2008

PARTS LIST

 
Spare wheel
(The illustration may differ from the actual wheel.)



3 Tire pressure information labels



Valve



TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

SPECIFICATIONS

RIDGELINE:

Vehicle grade	Tire pressure information label ID code
RT, RTS	JC1SA
RTL	JC1SC

PILOT:

Vehicle grade	Tire pressure information label ID code
4WD, 2WD	JC1SD

 
INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Before attaching the tire pressure information label, check the grade of the vehicle and the ID code on the tire pressure information label.
 - Be sure to install the tires of the correct size.
 - Please refer to the vehicle owner's manual for the spare wheel installation.
 - Use a tire changer to install and remove the tires as described in the Operation Manual furnished with the tire changer. Do not use a tire lever to install and remove the tires as it may cause damage to the tire and spare wheel.
1. Open the driver's door. Using an isopropyl alcohol, thoroughly clean the area where the Tire Pressure Information Label will attach. Remove the adhesive backing from the label, and attach it on the standard tire pressure information label as shown. Attach the tire pressure information label to prevent mistaking specification.

TIRE PRESSURE INFORMATION LABEL ID CODE

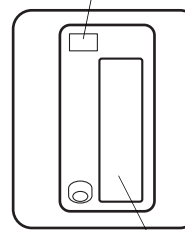

TIRE PRESSURE INFORMATION LABEL

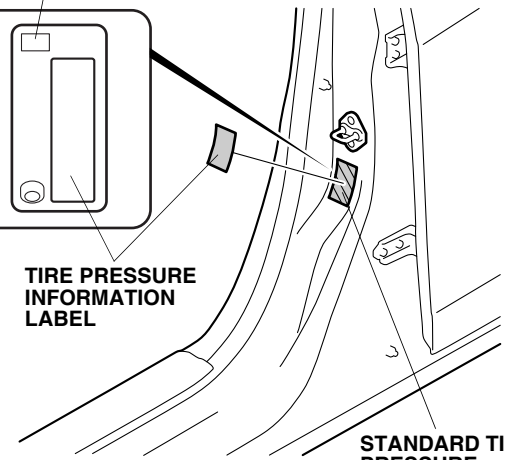 

STANDARD TIRE PRESSURE INFORMATION LABEL