



INSTALLATION INSTRUCTIONS


Accessory
FOG LIGHTS
P/N 08V31-TE0-100A

Application
2011 ACCORD
2-DOOR
EX, EX-L


Publications No.
All 44004
Issue Date
AUG 2010

PARTS LIST


Left fog light

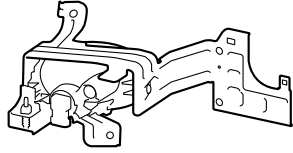


Right fog light

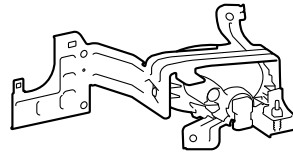


2 Fog light cords

 


2 Fog light harnesses

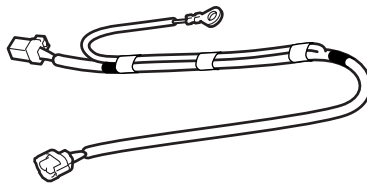


4 Wire ties

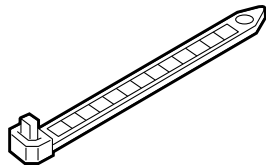


2 Wire ties with clip

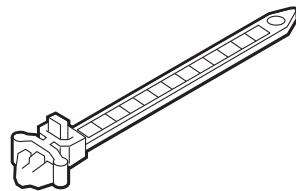

Ground bolt

 

Lighting switch

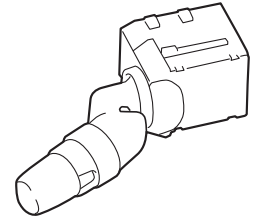

2 Self-tapping screws



2 Clips



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Diagonal cutters

Ratchet

10 mm Socket


10 mm Open end wrench

Tape

Trim Tool Set (T/N SOJATP2014)

Blanket

Illustration of the Fog Lights Installed on the Vehicle

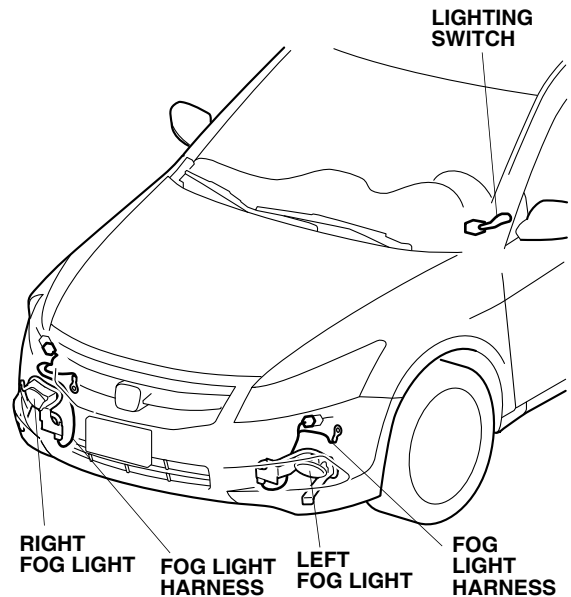


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


1. Make sure you have the anti-theft code for the audio and navigation system (if equipped).
2. Disconnect the negative cable from the battery.

Removing Parts (Vehicle Exterior)

3. Remove the front bulkhead cover (seven clips).

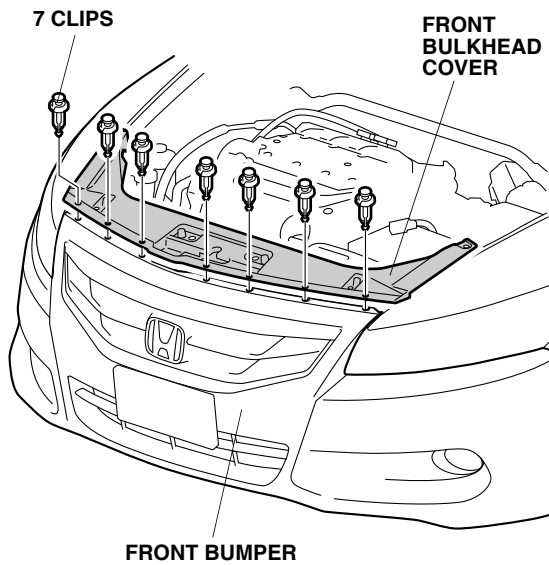


4. Attach tape to the front bumper as shown.

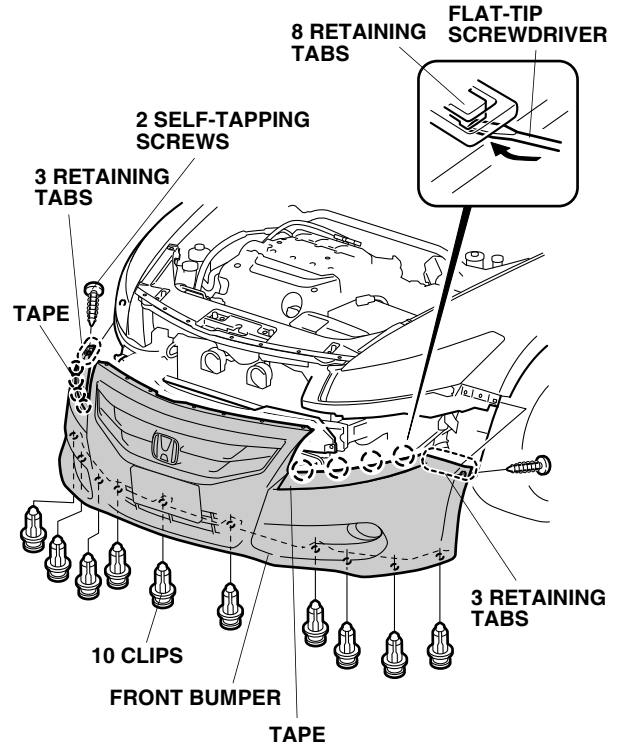


5. Remove two self-tapping screws and ten clips.
6. Remove the front bumper (fourteen retaining tabs). **NOTE:** Have an assistant help you when removing the front bumper. Place the front bumper on a blanket after removal.

Routing the Fog Light Harness


7. On the passenger's side of the vehicle, locate the 1-pin connector blue taped to the vehicle harness. Remove the tape to release the connector.

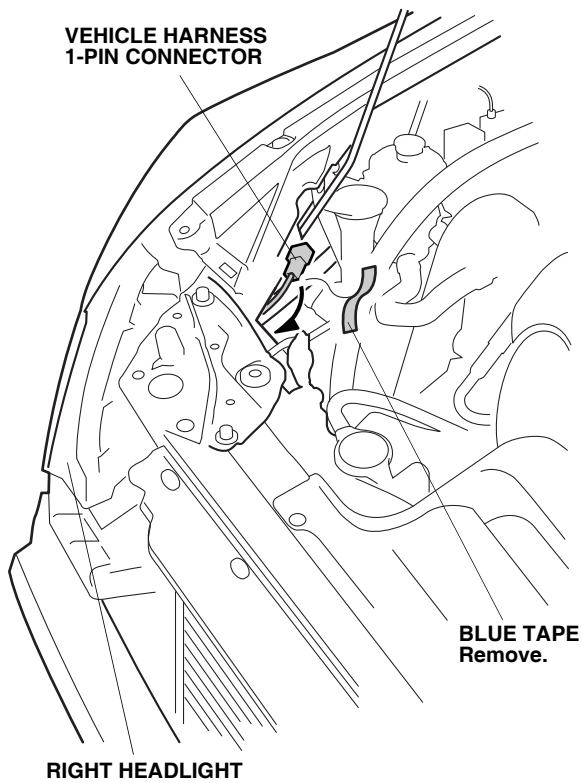


8. Plug the fog light harness 1-pin connector into the vehicle harness 1-pin connector.

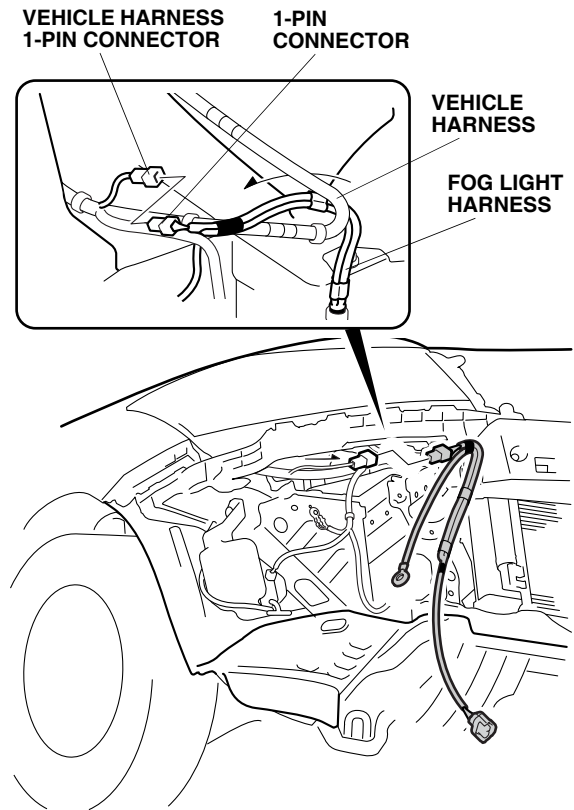


9. Secure one wire tie with clip to the fog light harness at the green tape. Secure the wire tie with clip to the hole in the vehicle frame.

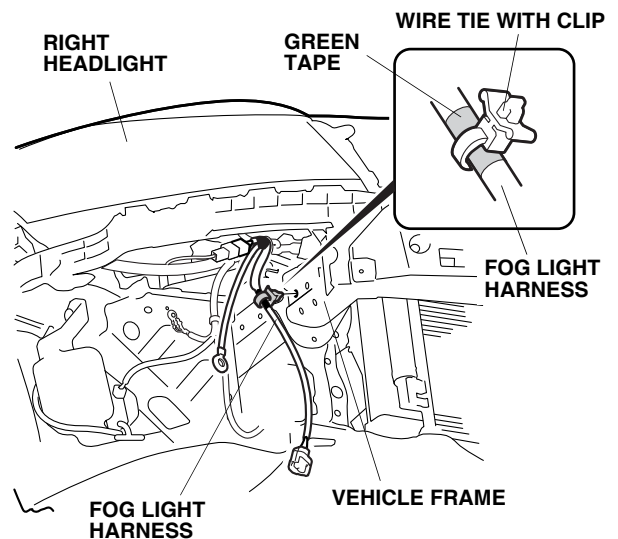


- Near the 1-pin connector, secure the fog light harness to the vehicle harness with two wire ties at the green tape.

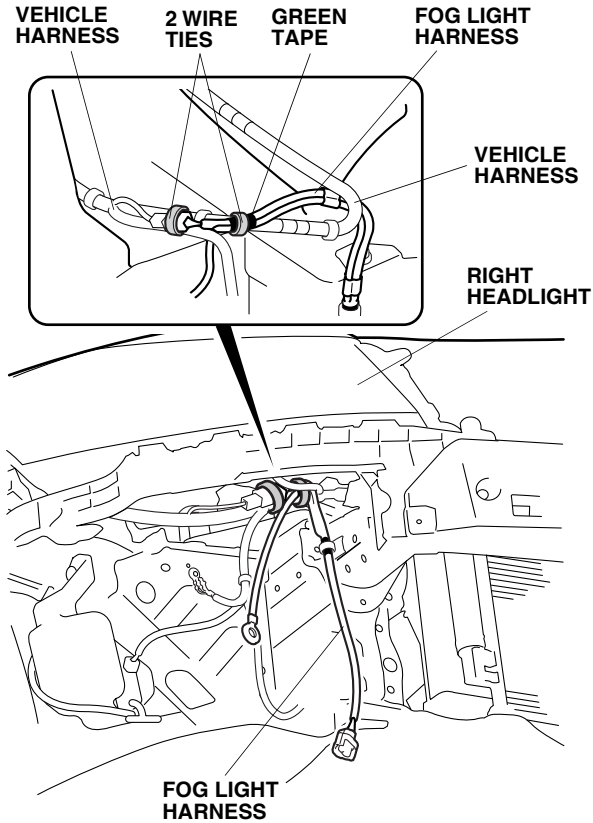


- Secure the fog light harness ground terminal to the vehicle frame with the supplied ground bolt.

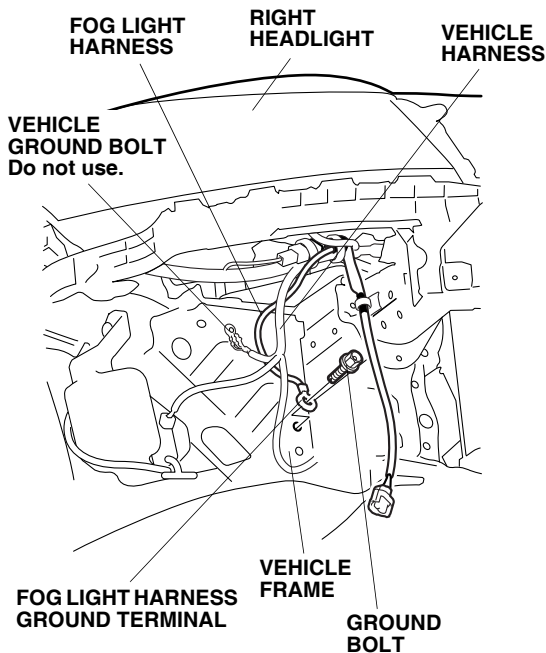


- On the driver's side of the vehicle, locate the vehicle harness 1-pin connector. Plug the fog light harness 1-pin connector to the vehicle harness 1-pin connector.

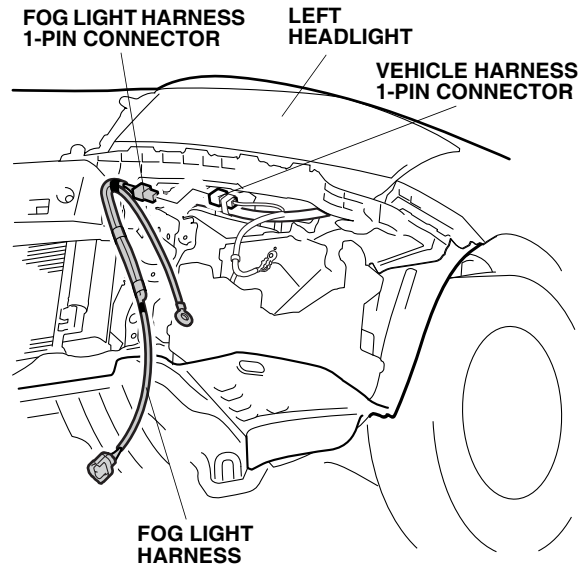


- Secure one wire tie with clip to the fog light harness at the green tape. Secure the wire tie with clip to the hole in the vehicle frame.

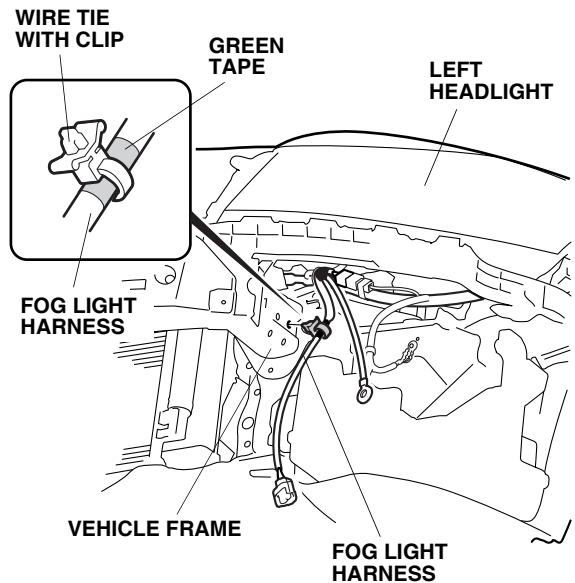

- Near the 1-pin connector, secure the fog light harness to the vehicle harness with one wire tie at the green tape.

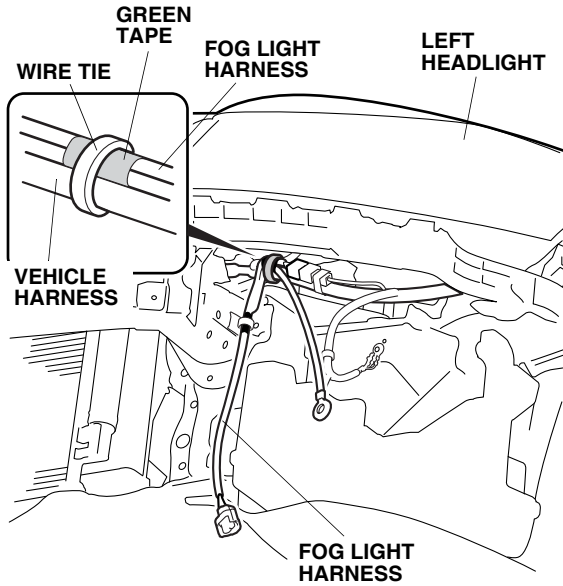


- Locate and remove the vehicle ground bolt. Secure the fog light harness ground terminal and vehicle ground terminal to the vehicle frame with the vehicle ground bolt just removed.

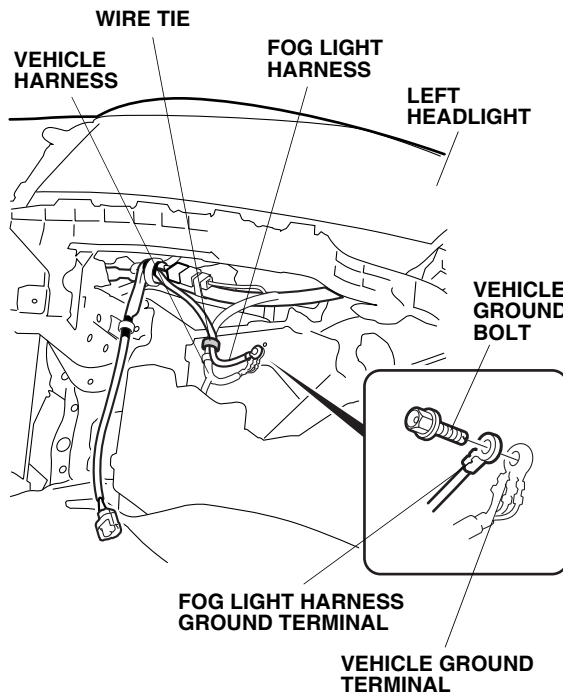


- Near the ground terminal, secure the fog light harness to the vehicle harness with one wire tie.

Install the Fog Light

- Secure three clips on the fog light cord to the left fog light.

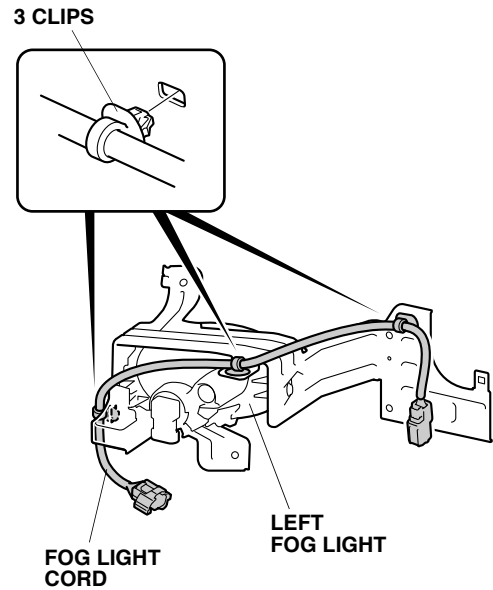


- Plug the fog light cord 2-pin connector into the left fog light.

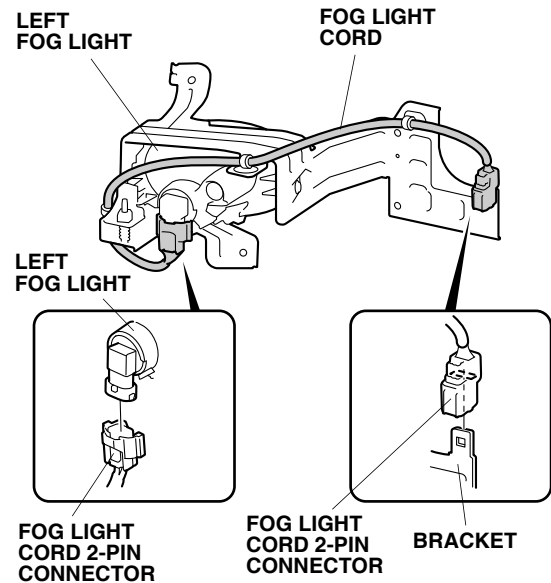


- Secure the fog light cord 2-pin connector to the bracket.

20. Remove the left fog light cover (three self-tapping screws).

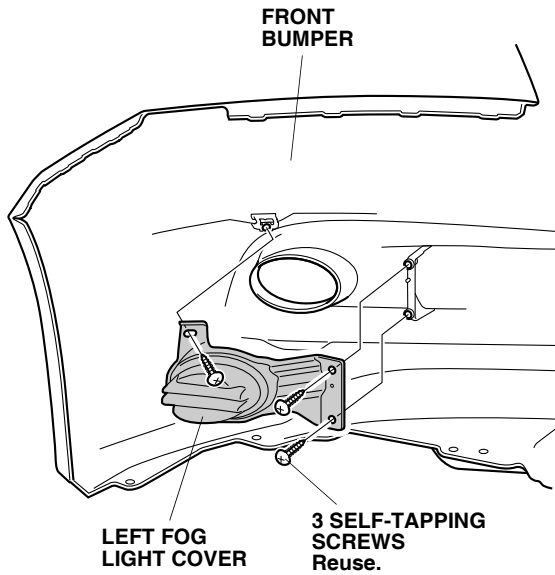


21. Install one clip to the front bumper.

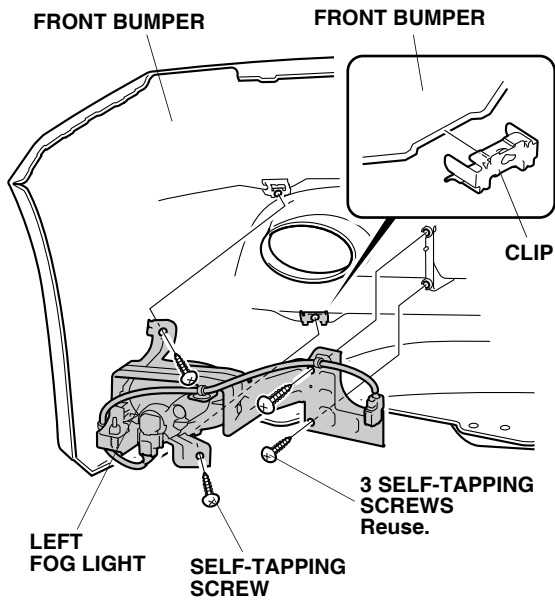

22. Install the left fog light to the front bumper with one self-tapping screw and three self-tapping screws removed in step 20.
23. Repeat steps 17 through 22 to install the right fog light.


24. Plug the fog light harness connectors into the fog lights.

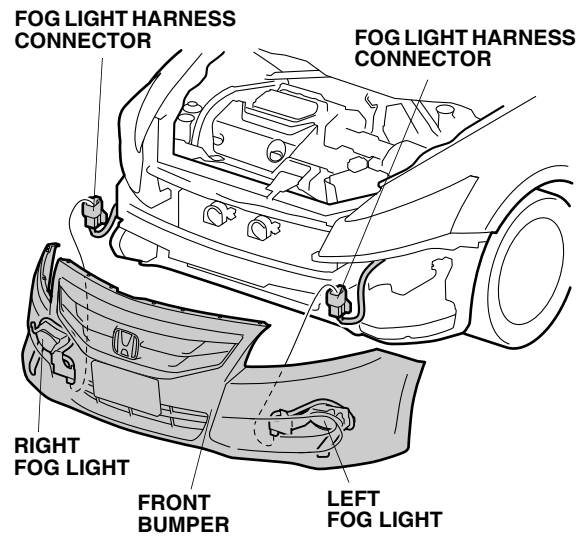

25. Reinstall the front bumper.
NOTE: Have an assistant help you when installing the front bumper.

Installing the Lighting Switch


26. Lower the tilt lever and pull the steering wheel out.

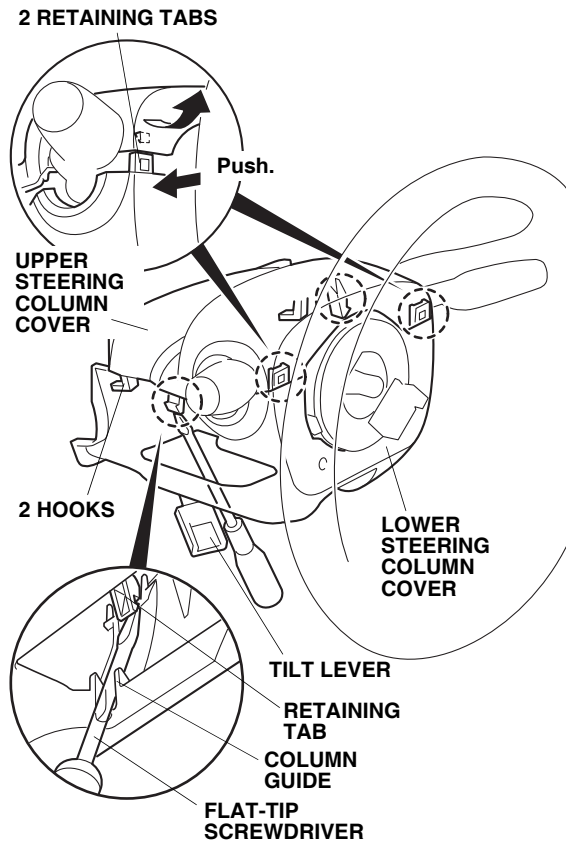


27. Remove the upper steering column cover:

- Insert a flat-tip screwdriver along the column guide inside the lower cover, and gently pry out on the retaining tab on the upper column cover.
- Push the lower cover to release two retaining tabs, and pull up on the upper cover to release two hooks.


28. Remove the lower steering column cover (three screws). The upper screws are self-tapping screws.

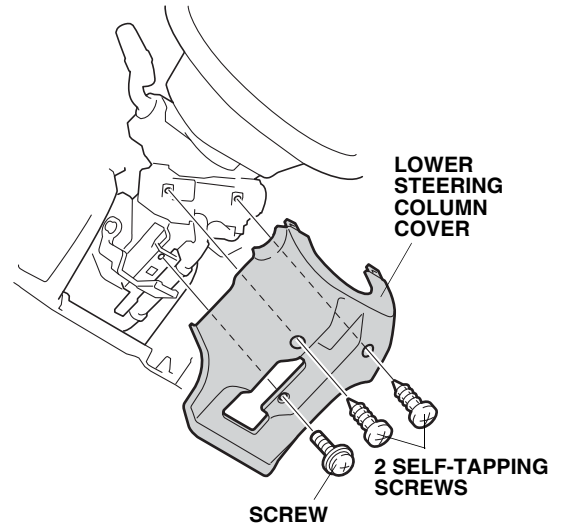


29. Turn the steering wheel 90° counterclockwise, and unplug the vehicle connector from the lighting switch.

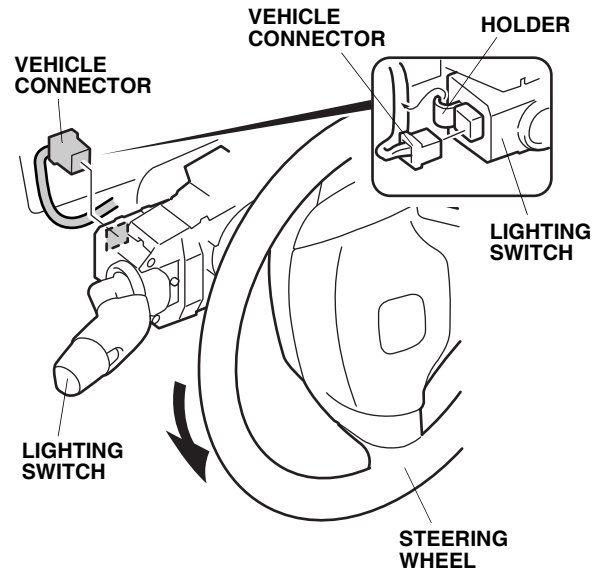


30. Remove two self-tapping screws from the lighting switch. While pushing the retaining tab, slide the lighting switch out of the bracket, and remove it from the steering column.
 - Do not pull on the lever when removing the switch. Do not damage the tab hole in the steering column.

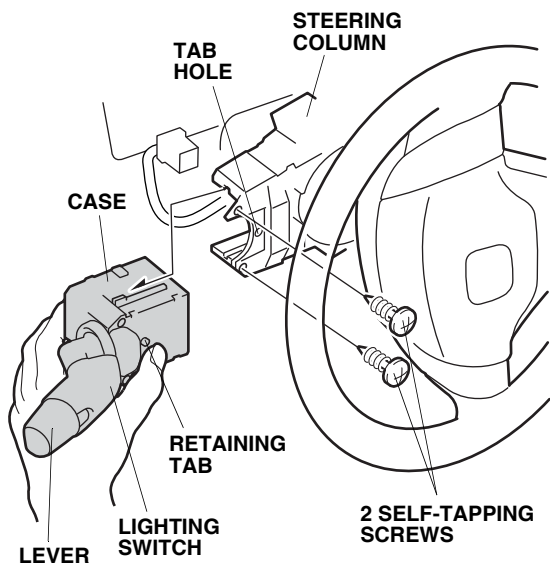

31. Holding the case by hand, install the new lighting switch into the steering column. Install the two self-tapping screws.
 - Do not push on the lever when installing the case. Push the case into the bracket and set the retaining tab into the tab hole.

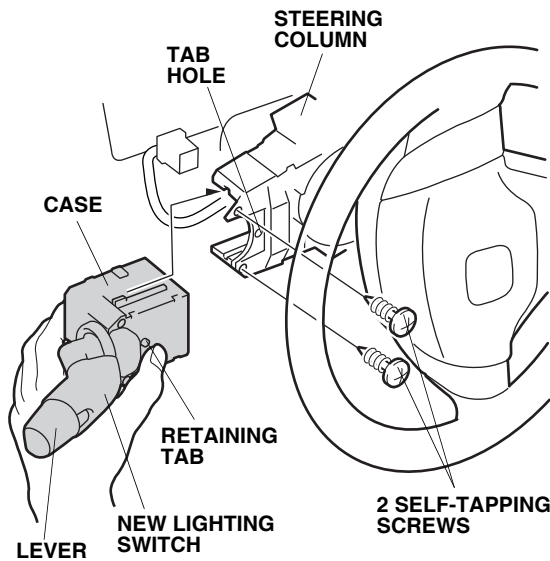

32. Plug the vehicle connector into the new lighting switch.


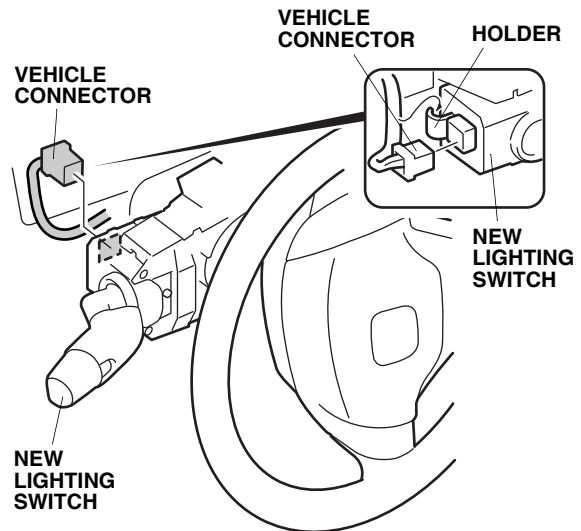


33. Check that all wire harnesses are routed properly and all connectors are plugged in.
34. Reinstall all removed parts.
35. Enter the anti-theft codes for the customer's audio and navigation system if equipped, and reset the radio station presets.
36. Reconnect the negative cable to the battery.
37. Reset the clock.

USE AND CARE

How to Operate the Fog Lights

 - Turn the headlight switch to the “**☰D**” position (headlights on low beam).
- Turn the fog light switch on (indicator is on).

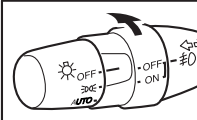		HEADLIGHT SWITCH			
		OFF	☰☿	AUTO/ ☰D	
				Low	High
FOG LIGHT SWITCH	OFF	-	-	-	-
	ON	-	-	ON	-


NOTE: The fog light lenses can cloud when the outside temperature is cold; this is normal and should go away in warm weather.

- If the fog lights do not turn on, check the fuse and all the connectors, including the ground cable.

Fog Light Aiming Adjustment

38. Adjust the fog lights:

- Adjust the aim according to local laws and regulations.
- To adjust, turn the aiming adjustment knob in or out until the correct aim is obtained.

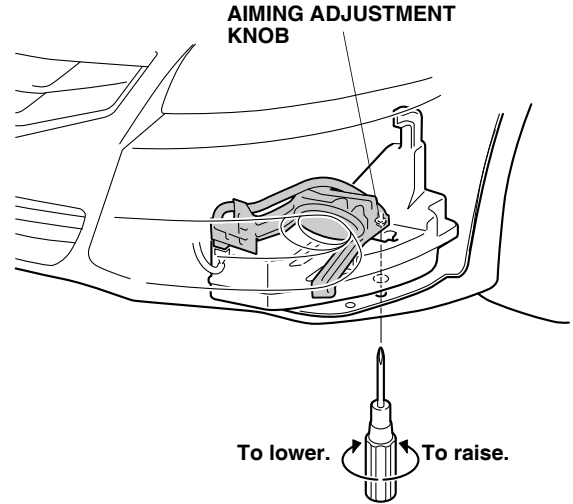


BULB REPLACEMENT



1. Turn the steering wheel counterclockwise. Remove two clips, and pull down the inner fender.



2. Insert your hand inside of the inner fender pulled down in step 1. Unplug the connector from the fog light, and remove the bulb by turning it counterclockwise.

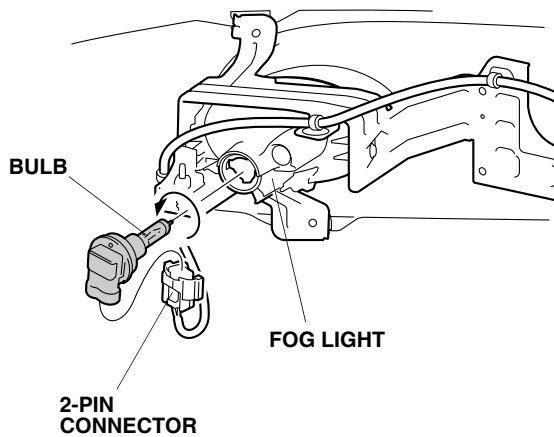

3. Install the new bulb and socket into the fog light.
 - Use only a genuine Honda halogen light bulb of specified wattage.
Rating: 12V 55W H11 Halogen Light Bulb
P/N33165-S5A-003
 - Do not touch the bulb. Oily or greasy substances on the bulb can shorten its service life due to the heat produced when the bulb is turned on. If the bulb is accidentally touched, wipe it clean with a soft cloth that has been dampened with a denatured alcohol or a mild detergent solution.
 - When installing the new bulb, align the cutout on the fog light with the tab on the new bulb and turn the new bulb in completely. If not properly aligned, the fog light may affect the oncoming driver's view.

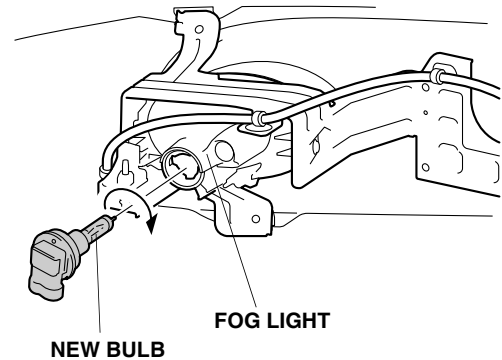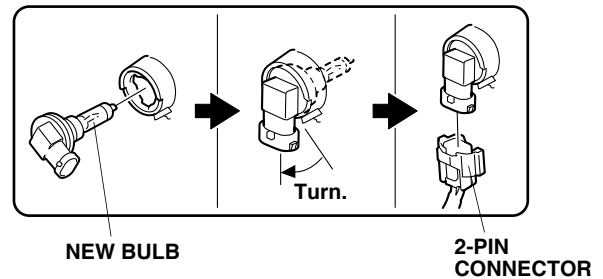

4. Reinstall the removed parts. Check that the wire harnesses are not pinched. Be sure to install the clips securely.
5. Check the operation of the fog lights; adjust the aim if necessary.