 


PARTS LIST

Engine Block Heater Kit P/N 08T44-SNA-101


Engine block heater




Aluminum washer




Heater harness

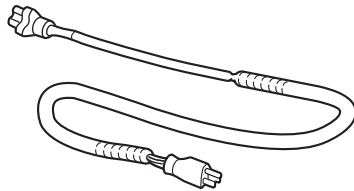


Protective cap

 


12 Black wire ties
(4 Not used)

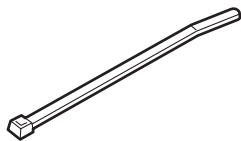

7 Wire ties with clip
(4 Not used)

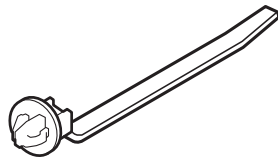

5 Wire ties (Natural)
(Not used)

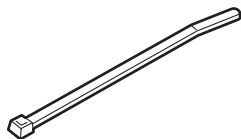


Engine Block Heater Bracket Kit P/N 08T44-TK6-100

Engine block heater bracket



 6 x 12 mm Washer-bolt



TOOLS AND SUPPLIES REQUIRED

Ratchet

12 mm, 19 mm, and 24 mm Sockets

10 mm Open end wrench

Torque wrench

Diagonal cutters

Heavy gloves

Drain pan

Tape measure

White marker

Coolant (Honda All-Season Antifreeze/Coolant Type 2)

Fender cover

Phillips screwdriver


Masking tape

Blanket

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)

Illustration of the Engine Block Heater in the Vehicle

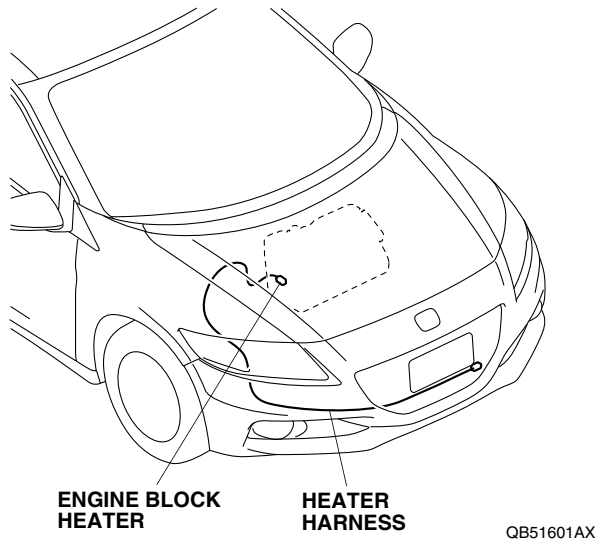


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE:

- Always use, Honda All-Season Antifreeze/Coolant Type 2. Using a non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail.
 - To avoid burning out the element, do not operate the engine block heater until it is installed in the vehicle and you have added coolant.
1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
 2. Disconnect the negative cable from the battery.
 3. Allow the engine and all cooling system components to cool down.
 4. Place the vehicle on a hoist and raise the vehicle off the ground.


5. Attach masking tape to the front bumper, headlights and front fenders as shown.

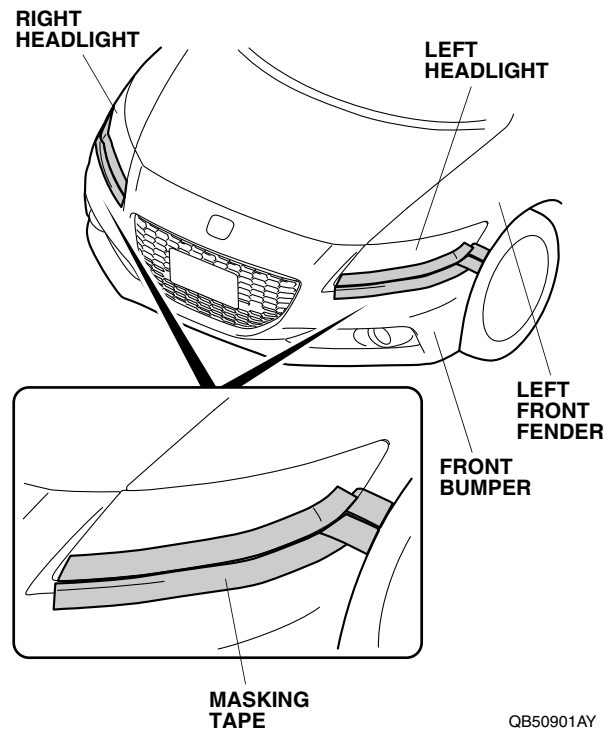


6. Remove the front bumper.
 - Remove the front bumper molding (six clips).

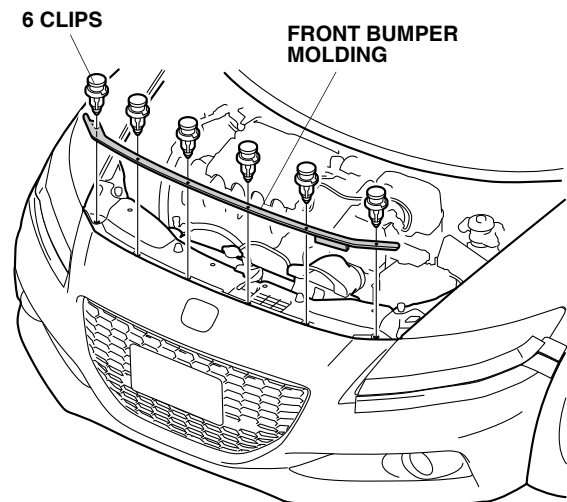


- Remove eleven clips, four self-tapping screws, and two washer-screws.

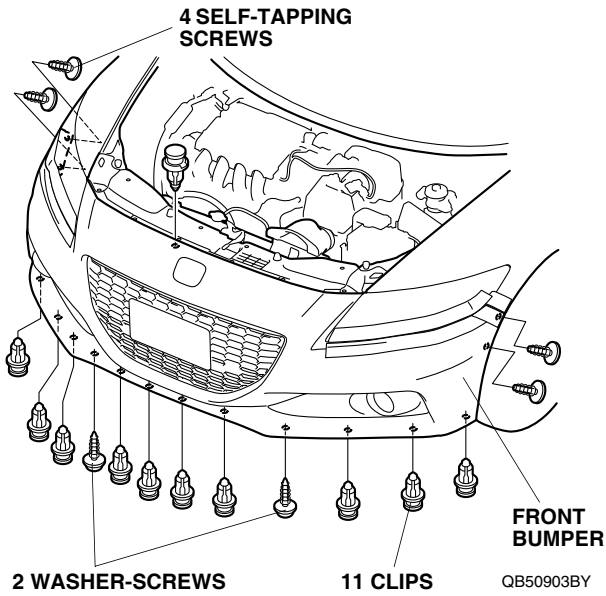


- Release two retaining tabs on each side of the bumper.

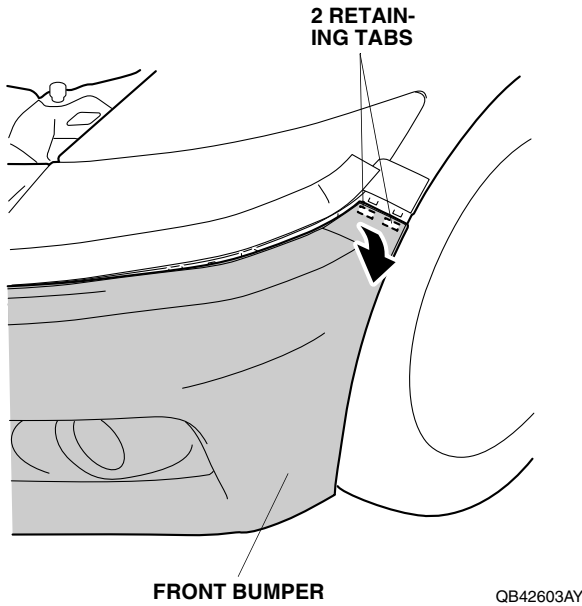


- Release four retaining tabs on each side of the bumper.

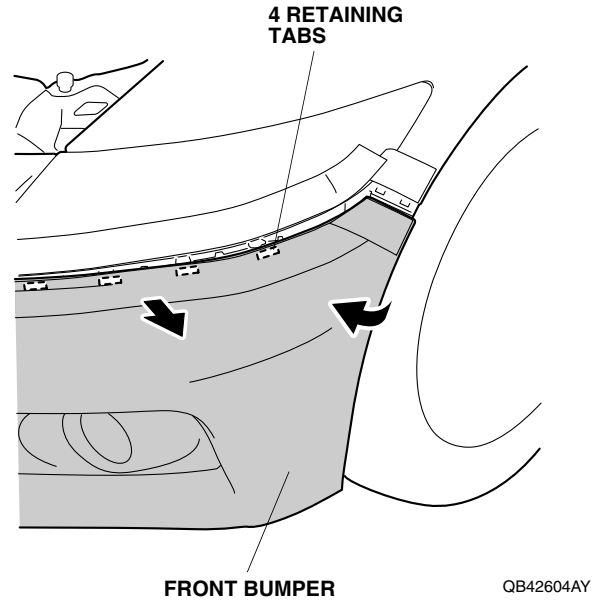

- With the help of an assistant, remove the front bumper.
- If the vehicle is equipped with fog lights, unplug the vehicle connectors.
- Place the front bumper on a blanket.

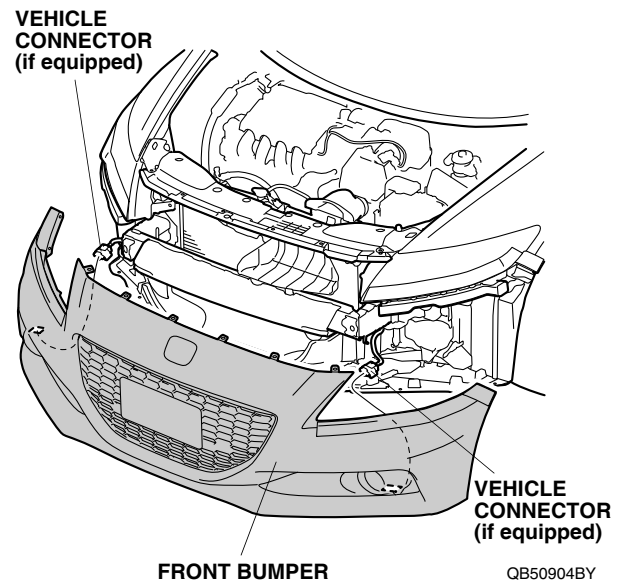


- Remove the front bulkhead lower cover (four self-tapping screws and seven clips).

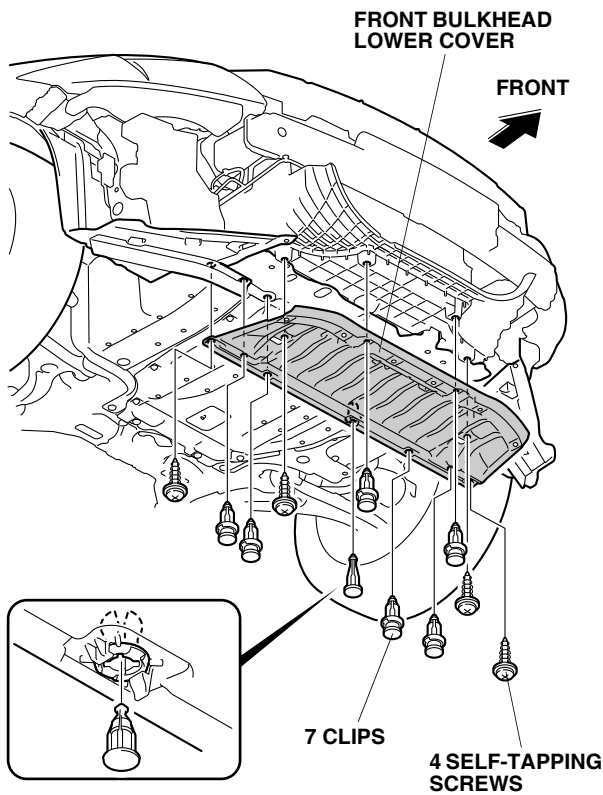

030502AE

- Remove the engine under cover (six self-tapping screws and four clips).

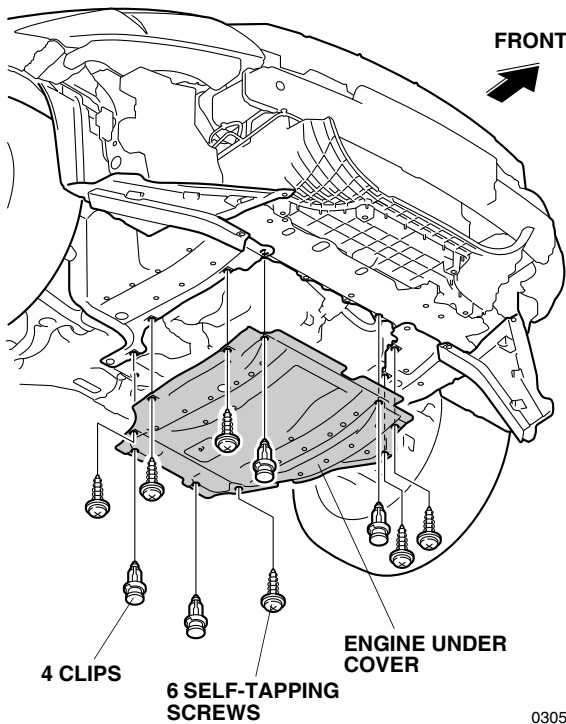

030503AE


- Remove the right under cover (three clips).



030403AE


- Place a clean drain pan under the radiator drain plug, then remove the radiator drain plug from the bottom of the radiator to drain the coolant. Remove the radiator cap to increase the flow.

NOTICE: Radiator coolant will damage the body paint. Quickly rinse any spilled coolant from body paint finish.

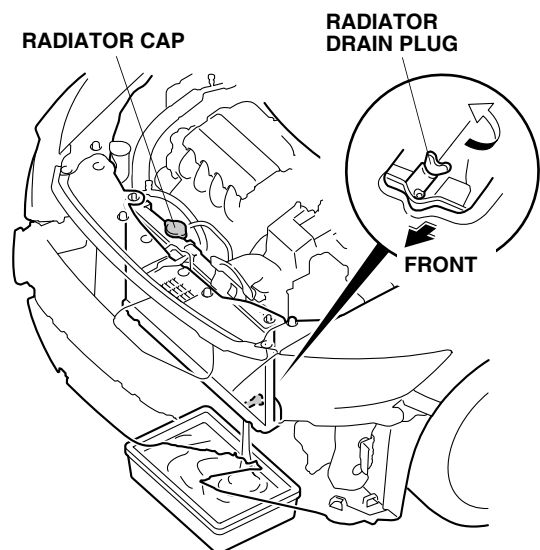


9N0601BE

11. Locate and remove the engine block drain bolt and washer. Coolant remaining in the engine jackets will flow out of the bolt hole when the bolt is removed. Retain the bolt; it will be used if the block heater is removed.

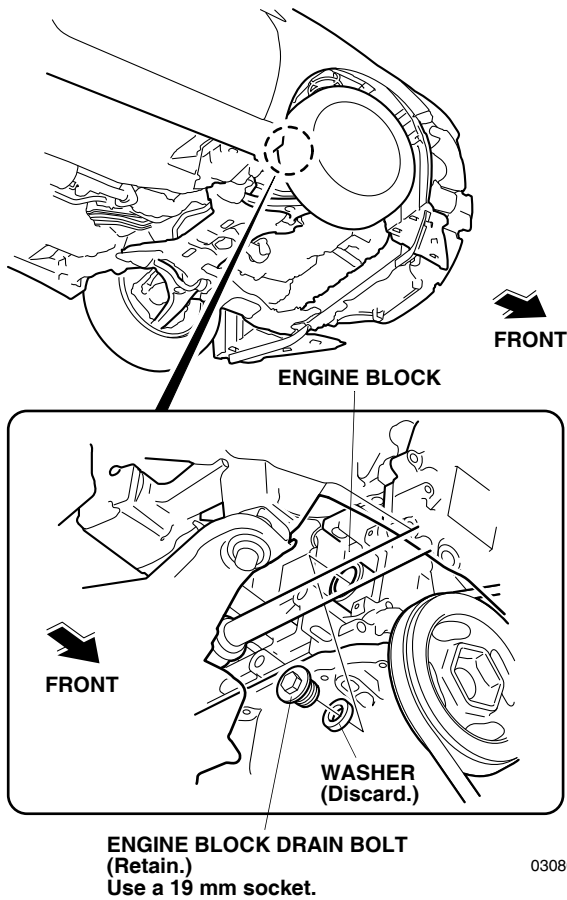


12. Install the engine block heater and aluminum washer into the engine block using a 24 mm socket and a torque wrench. Torque the engine block heater to 80 N·m (59 lbf-ft).

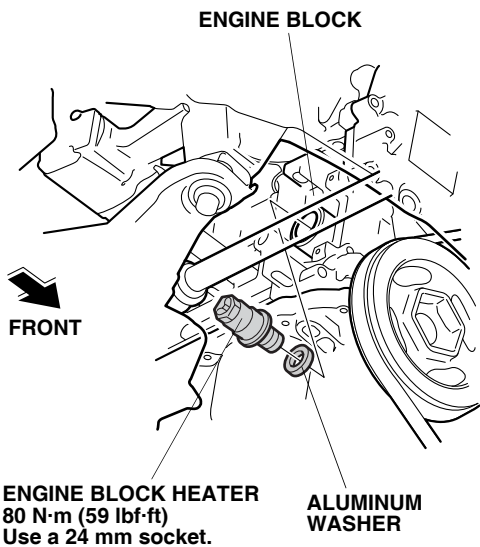


872606AE

13. Install the engine block heater bracket to the engine block with one 6 x 12 mm washer-bolt.

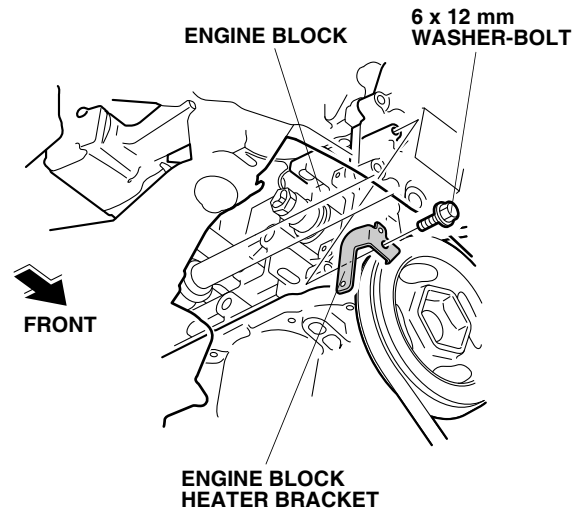


872608BE

14. Get the heater harness. Using a tape measure, install three wire ties with clip to the heater harness at the measurements (A), (B), and (E).

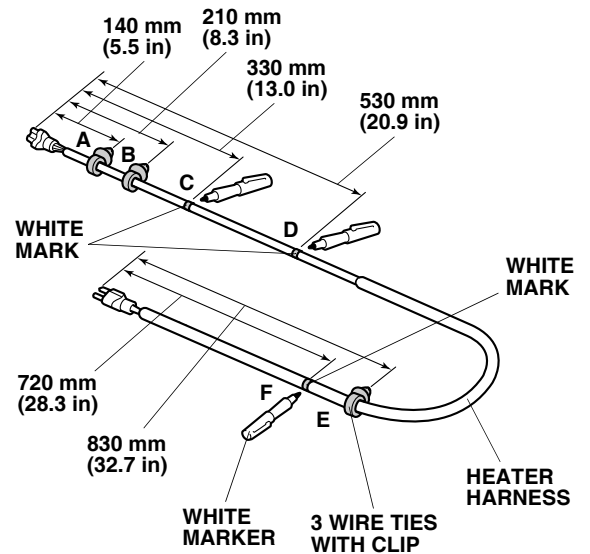


15. Using a white marker, mark the heater harness at the measurements (C), (D), and (F).


16. Plug the heater harness connector into the engine block heater. Make sure the heater harness connector is fully seated in the engine block heater.

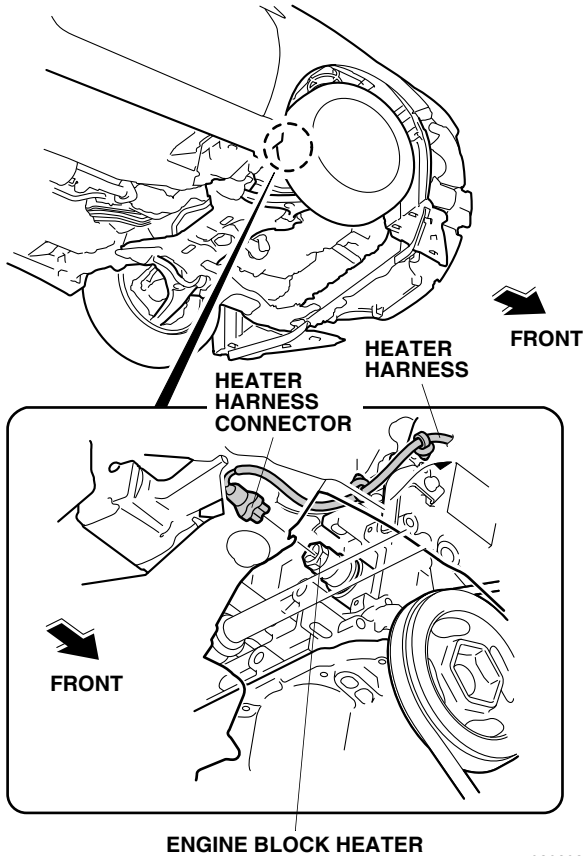

17. Route the heater harness along the engine block, and secure it to the engine block heater bracket with two wire ties with clip at point A and point B.

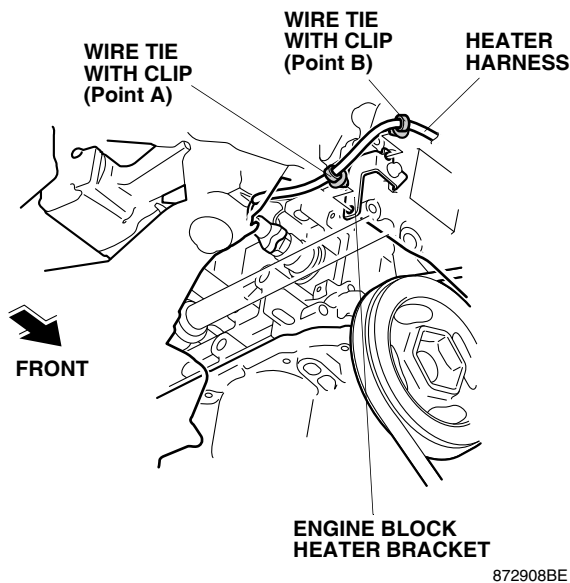


18. Route the heater harness through the engine compartment as shown.

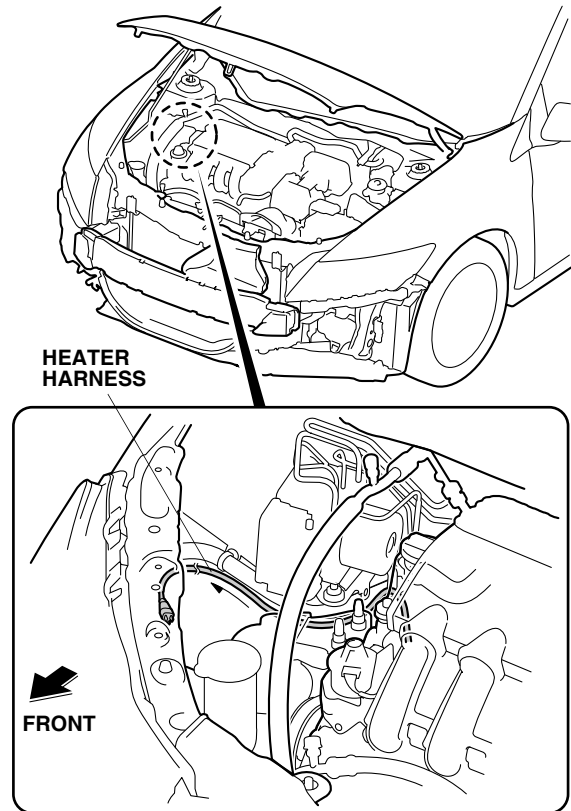


9N2601BE

19. Secure the heater harness to the vehicle frame with one black wire tie at point C.

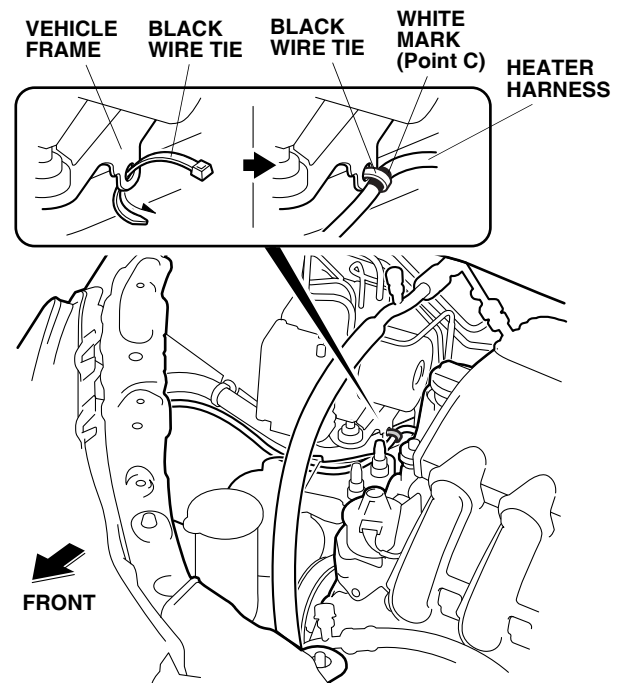


030305AE


20. Align the white mark at point D with the vehicle clip, and secure the heater harness to the vehicle harness with two black wire ties.

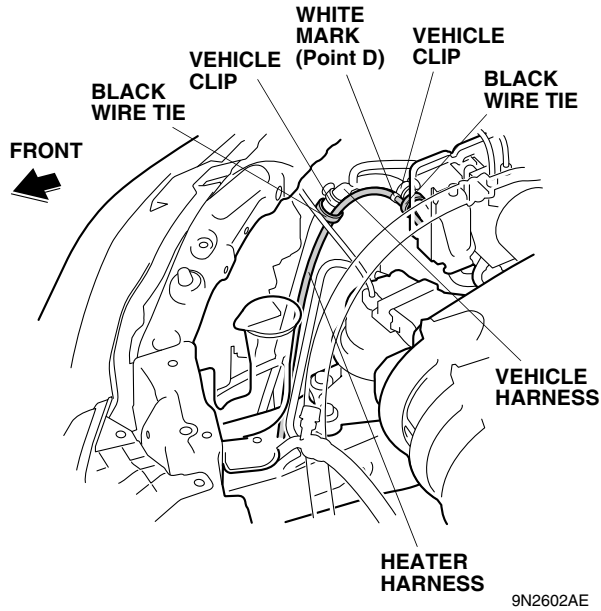


21. Route the heater harness forward, and secure it to the vehicle harness with one black wire tie.
NOTE: Do not secure the heater harness to the SRS harness.

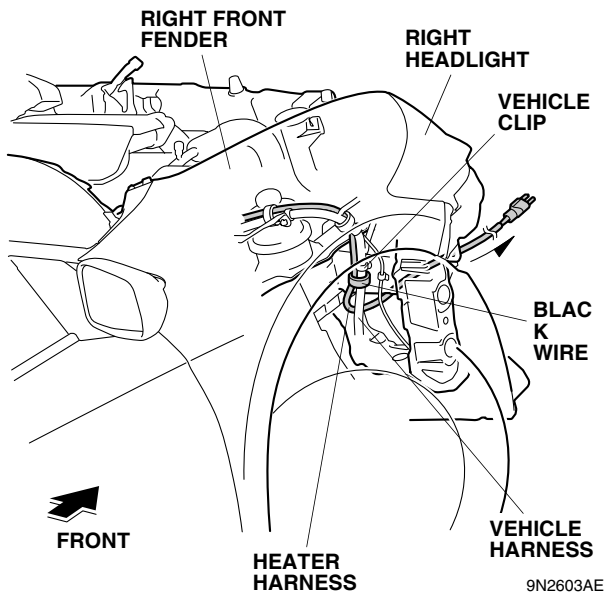


22. Route the heater harness along the front of the vehicle, and secure it to the vehicle frame with one wire tie with clip at point E.

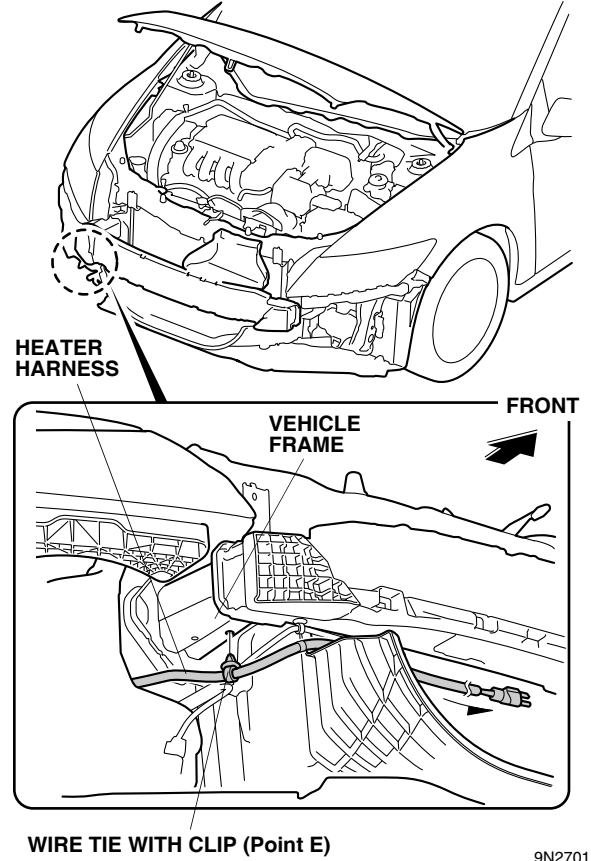

23. Secure the heater harness to the slot in the washer reservoir.

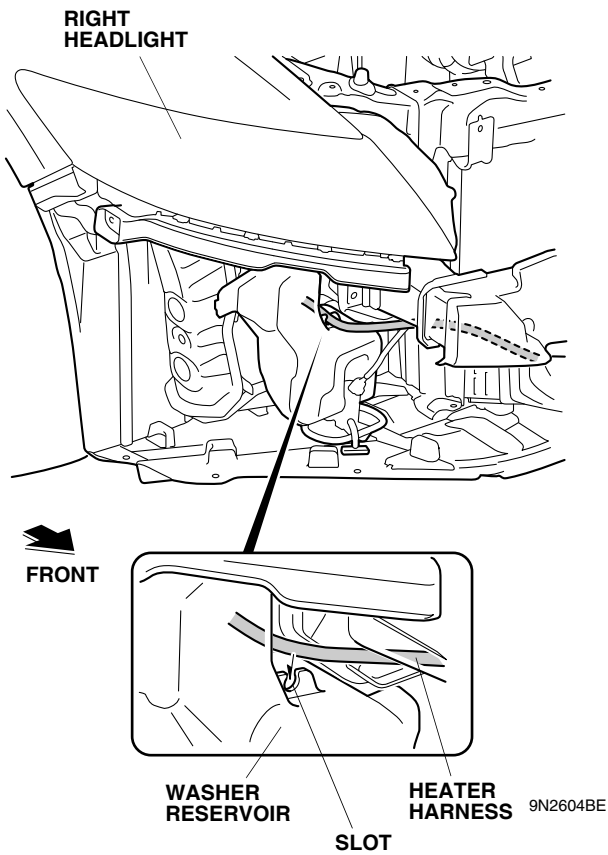


24. Align the white mark at point F to the vehicle clip on the front bumper beam cover, and secure the heater harness to the vehicle harness with one black wire tie.

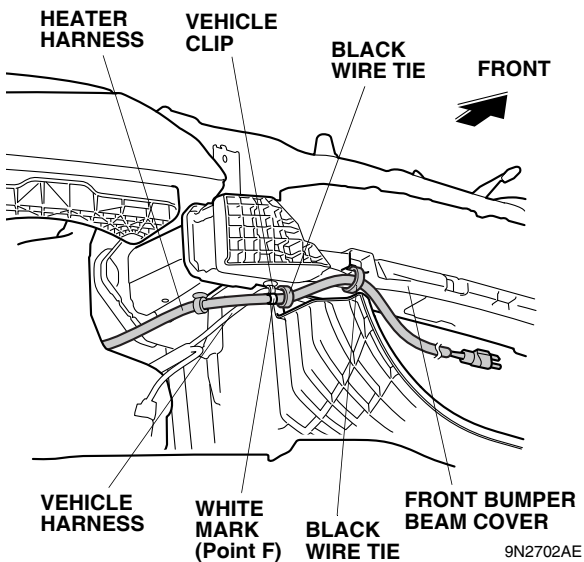


25. Secure the heater harness to the front bumper beam cover with one black wire tie.

26. With the help of an assistant, loosely place the front bumper in its original position.

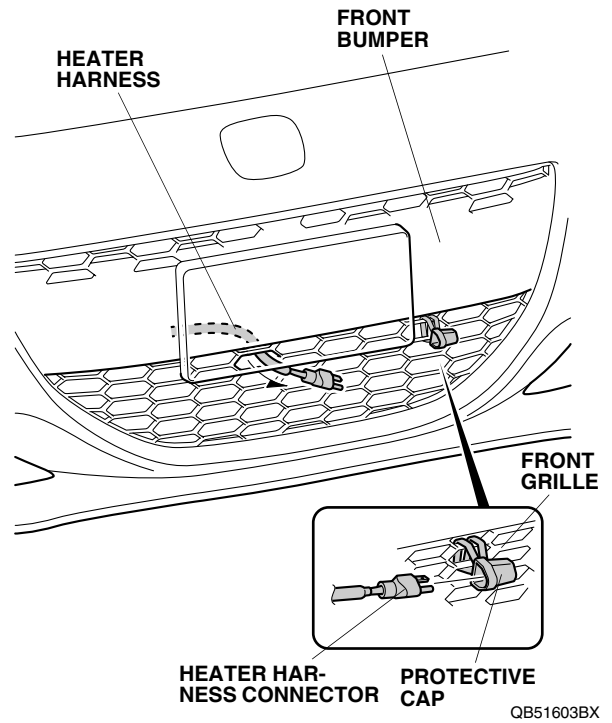

27. Install the protective cap to the front grille, and plug the heater harness connector into the protective cap.
28. Secure the heater harness to the front grille with two black wire ties.

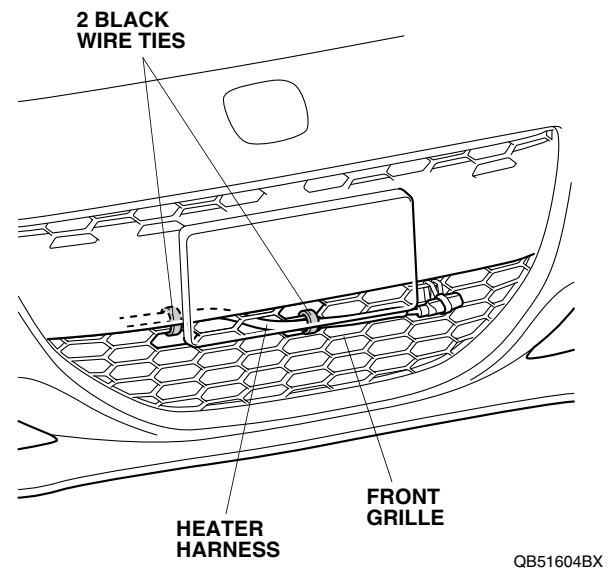

29. Reinstall all removed parts.

30. Remove the radiator cap and fill the system with the recommended coolant. Follow the instructions in the service manual to fill the cooling system and check for leak. Particularly check that there is no leak around the engine block heater.
31. Reinstall the radiator cap.
32. Check that the heater harness is routed properly and all connectors are plugged in.
33. Store the drain bolt (removed in step 11) in the glove box.
34. Reconnect the negative cable to the battery.
35. Enter the customer's audio and navigation system (if equipped) anti-theft codes, and reset the radio station presets.
36. Reset the clock on vehicles without a navigation system.
37. If the IMA battery level gauge display is at zero, start the engine, and hold it between 3,500 rpm and 4,000 rpm (without load) in P or N position until the IMA battery level gauge display is at least half charged level.