



# INSTALLATION INSTRUCTIONS

Accessory  
17" SPARE WHEEL  
P/N 08W17-SJC-103A

Application  
2013 PILOT

Publications No.  
All 13292  
Issue Date  
AUG 2012

## PARTS LIST

Spare wheel  
(The illustration may differ from the actual wheel.)



3 Tire pressure information labels



Valve



## TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol  
Shop towel

## SPECIFICATIONS

| Vehicle grade            | Tire pressure information label ID code |
|--------------------------|---|
| LX                       | JC1SG                                   |
| EX, EX-L, EXL-N, Touring | JC1SH                                   |

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:

- Before attaching the tire pressure information label, check the grade of the vehicle and the ID code on the tire pressure information label.
- Be sure to install the correct size tire.
- Please refer to the vehicle owner's manual for the spare wheel installation.
- Use a tire changer to install and remove the tire as described in the operation manual furnished with the tire changer. Do not use a tire lever to install the tire as it may cause damage to the tire and spare wheel.

Open the driver's door. Using isopropyl alcohol, thoroughly clean the area where the Tire Pressure Information Label will attach. Remove the adhesive backing from the label, and attach it on the standard tire pressure information label as shown.

