
- (H) <b>HONDA</b> - INSTALLATION INSTRUCTIONS	Accessory	Application <sup>····</sup> &\$% CIVIC 4-DOOR	Publications No. All ) \$* - %
	DOOR EDGE GUARDS		Issue Date NOV &\$%
PARTS LIST		STALLATION	
Left front door edge guard	in te tra ve	ustomer Information: The inf stallation instruction is intender chnicians who have the prope aining to correctly and safely a chicle. These procedures shou lo-it-yourselfers."	d for use only by skilled r tools, equipment, and dd equipment to your
Right front door edge guard	•	DTE: Door edge guards cannot be in already equipped with body sid If your customer also wants bo separately), install them after y guards. These instructions show the ri	de moldings. ody side moldings (sold you install the door edge
Left rear door edge guard	•	being installed. The same pro- installing the left door edge gu Be careful not to damage the l Clean and wax the areas to be quality paste wax. Identify each door edge guard door and matching its contour	cedure applies to ards. body paint finish. covered with a high- by holding it up to the
Right rear door edge guard			
Seam sealant cutting tool			
TOOLS AND SUPPLIES REQUIRE Rubber mallet Felt-tip pen Touch-up paint High-quality paste wax	D		


## Installing the Front Door Edge Guards

1. Gently place the right front door edge guard on the right front door in the position shown.

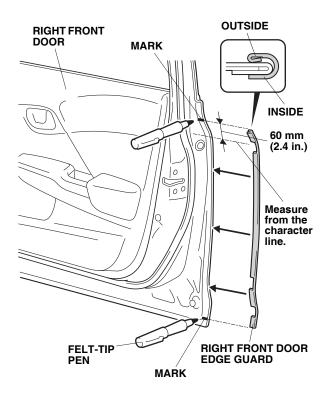


- 2. Using a felt-tip pen, mark the sealant at the top and bottom ending point of right front door edge guard.
- 3. Remove the right front door edge guard.


4. Position the cutting edge of the seam sealant cutting tool against the right front door edge, and trim the seam sealant from mark to mark. The cutting tool only cuts in one direction.

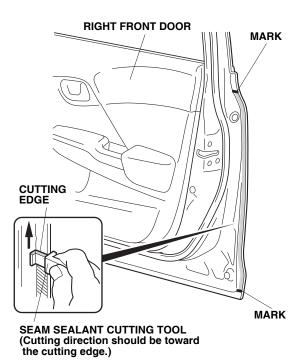

- 5. Apply touch-up paint to the cut seam sealant area, and let it dry.
- 6. Position the right front door edge guard on the right front door edge, and align it to the marks made in step 2.

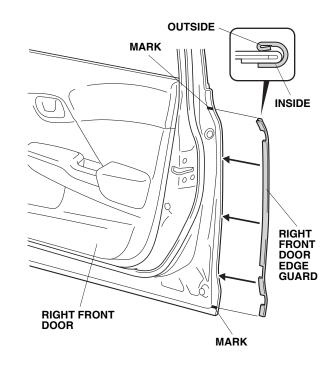


7. Starting at the character line, gently tap the right front door edge guard into position with a series of light taps using a rubber mallet, then work up and down. Make sure the position of the right front door edge guard is correct. Once in place, do not remove, reposition, or reinstall the right front door edge guard or it will not hold securely.

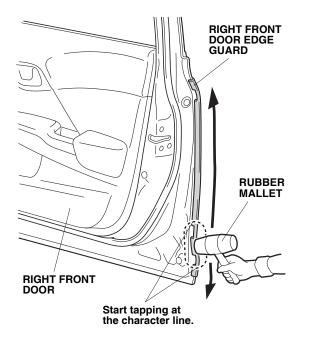

8. Repeat steps 1 through 7 to install the left front door edge guard on the left side of the vehicle.


## Installing the Rear Door Edge Guards

9. Gently place the right rear door edge guard on the right rear door in the position shown.

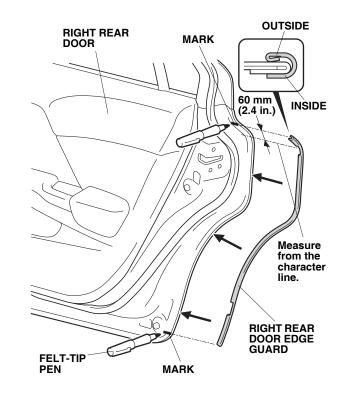


- 10. Using a felt tip pen, mark the sealant at the top and bottom ending point of right rear door edge guard.
- 11. Remove the right rear door edge guard.


12. Position the cutting edge of the seam sealant cutting tool against the right rear door edge, and trim the seam sealant from mark to mark. The cutting tool only cuts in one direction.

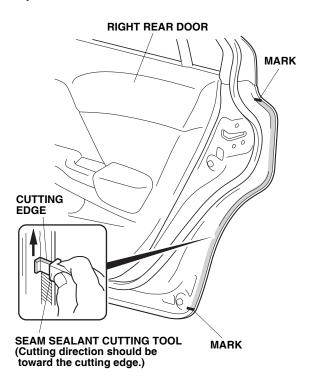

- 13. Apply touch-up paint to the cut seam sealant area, and let it dry.
- 14. Position the right rear door edge guard on the right rear door and align it to the marks made in step 10.

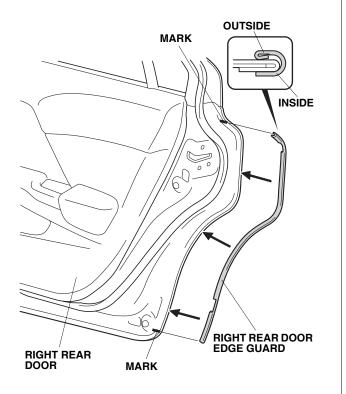

15. Starting at the character line, gently tap the right rear door edge guard into position with a series of light taps using a rubber mallet, then work up and down. Make sure the position of the right rear door edge guard is correct. Once in place, do not remove, reposition, or reinstall the right rear door edge guard or it will not hold securely.

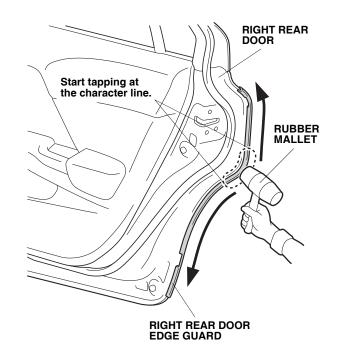

16. Repeat steps 9 through 15 to install the left rear door edge guard on the left side of the vehicle.