



INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
ENGINE BLOCK HEATER P/N 08T44-SNA-102	2017 CR-V 1.5L Model	VERSION 1
		Issue Date DEC 2016

PARTS LIST


Engine block heater



Aluminum washer



Heater harness

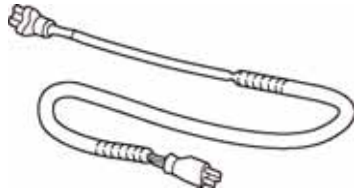

Protective cap



12 Black wire ties
(6 Not used)



7 Wire ties with clip
(Not used)



5 Brown wire ties



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Ratchet

10 mm, 19 mm, and 24 mm Sockets

10 mm Open end wrench

Torque wrench

Diagonal cutters

Utility knife

File

Heavy gloves

Drain pan

Tape measure

White marker

Coolant (Honda Genuine Long Life Antifreeze/Coolant Type 2)

Blanket

Fender cover


Masking tape

Shop towel

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Trim Tool Set (T/N SOJATP2014)

Illustration of the Engine Block Heater in the Vehicle

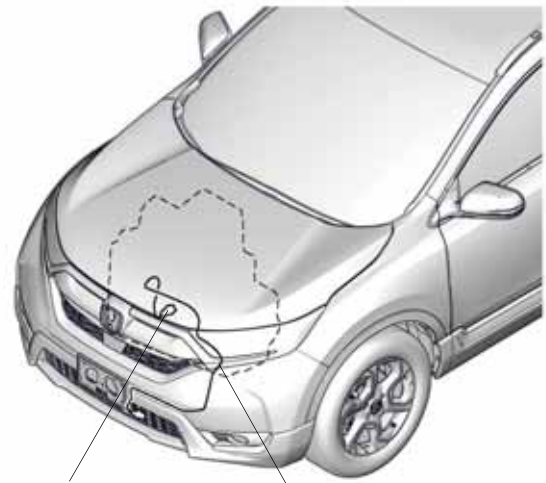

ENGINE BLOCK HEATER

HEATER HARNESS

QF32215AG

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTICE:

- Always use, Honda Genuine Long Life Antifreeze/ Coolant Type 2. Using a non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail.
 - To avoid burning out the element, do not operate the engine block heater until it is installed in the vehicle and you have added coolant.
1. Disconnect the negative cable from the battery.
 2. Allow the engine and all cooling system components to cool down.


3. Place a clean drain pan under the radiator drain plug, then remove the radiator drain plug from the bottom of the radiator to drain the coolant. Remove the radiator cap to increase the flow.

NOTICE: Radiator coolant will damage the paint. Quickly rinse any spilled coolant from the paint.

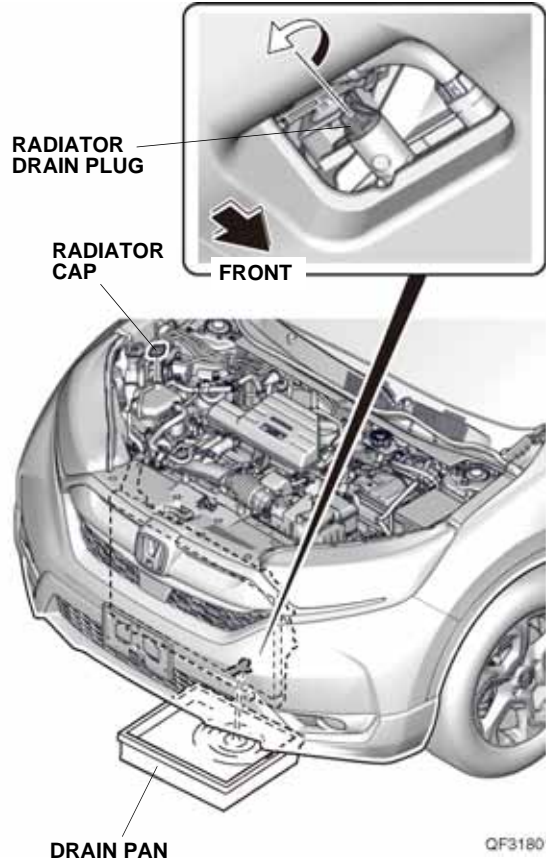


4. Drain the coolant completely, then install the radiator cap.

- Remove the self-tapping screws, and clips from the left front wheel arch protector as shown.

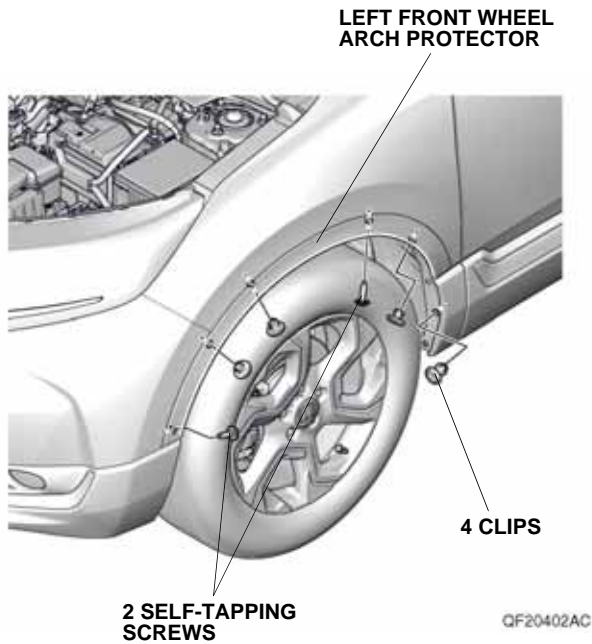


- Remove the left front wheel arch protector as shown.


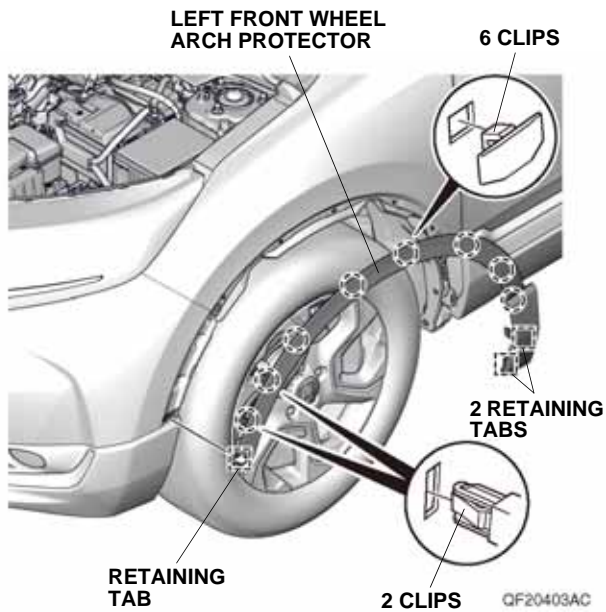


- Repeat steps 5 and 6 on the right side of the vehicle.
- Remove the front bumper:

- Apply masking tape on each side as shown.

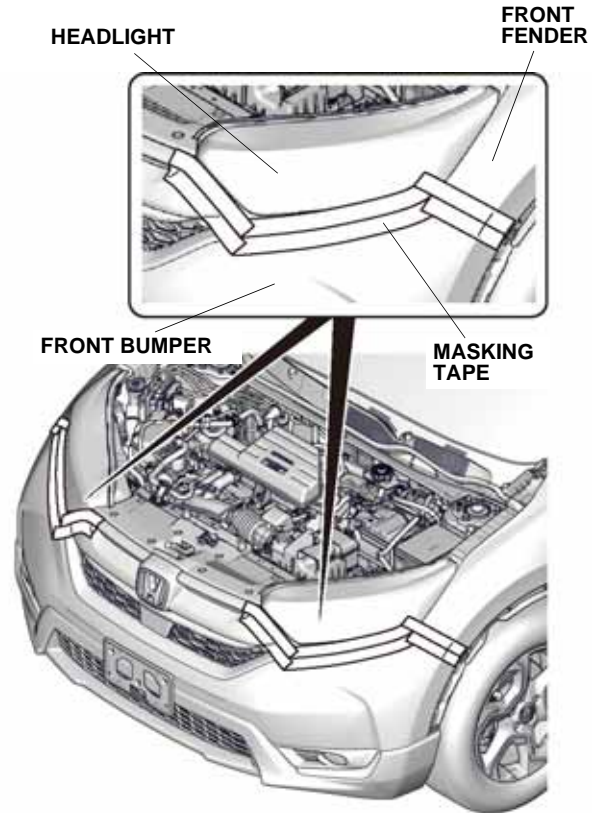


- Remove the self-tapping screws and clips as shown.

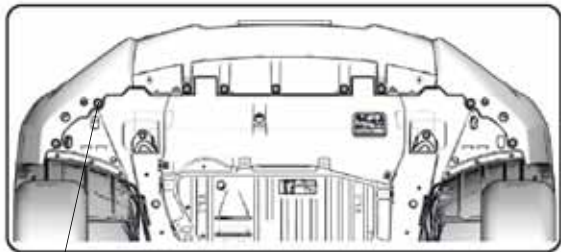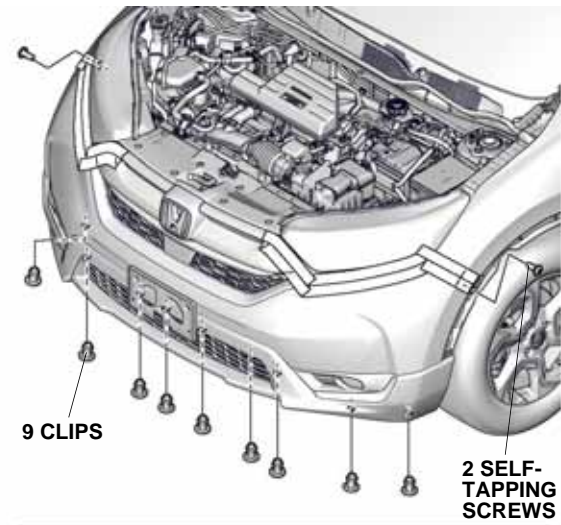


QF20405AC

- With the help of an assistant, release the seven retaining tabs on each side.

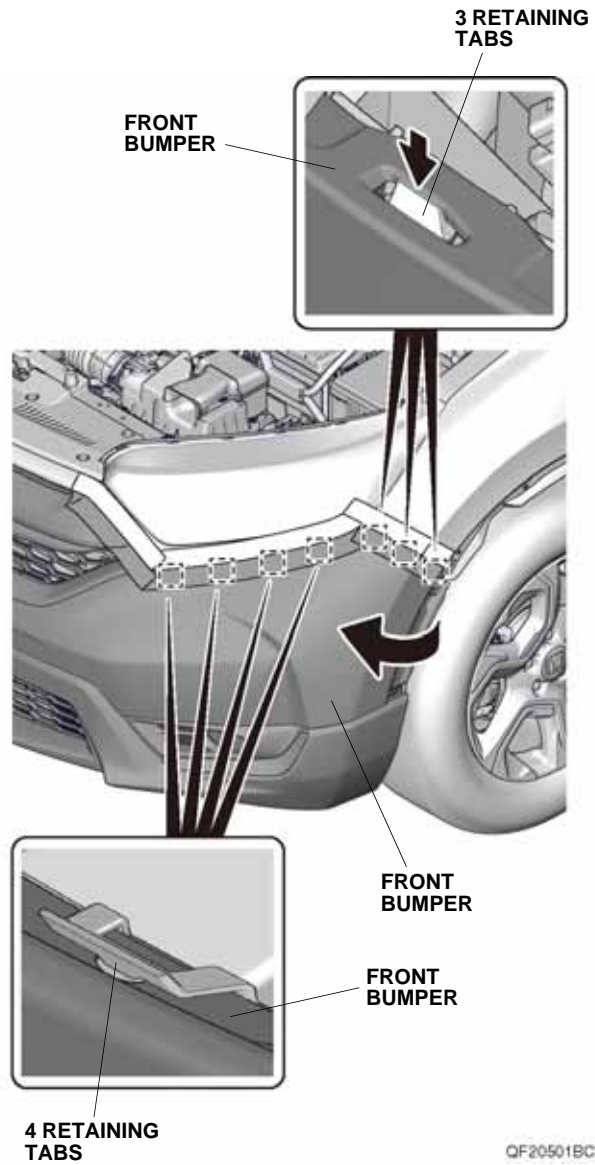


QF20501BC


- With the help of an assistant, remove the front bumper and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

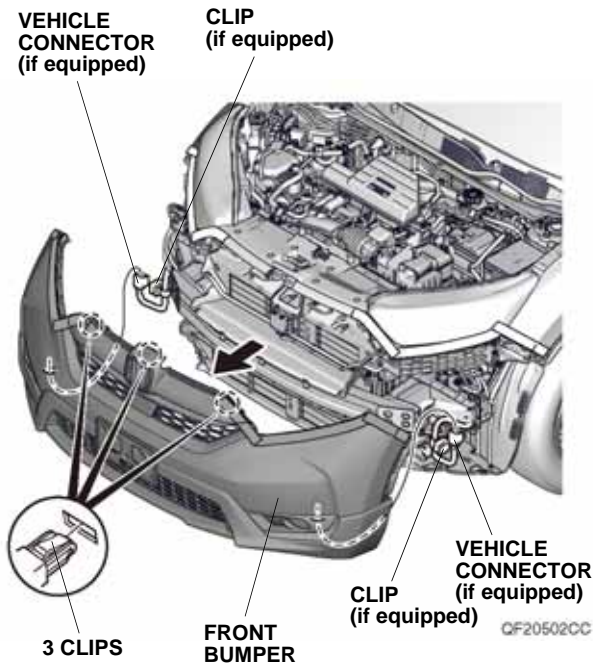


9. Pull away the upper shutter grille duct, and remove the lower shutter grille duct.

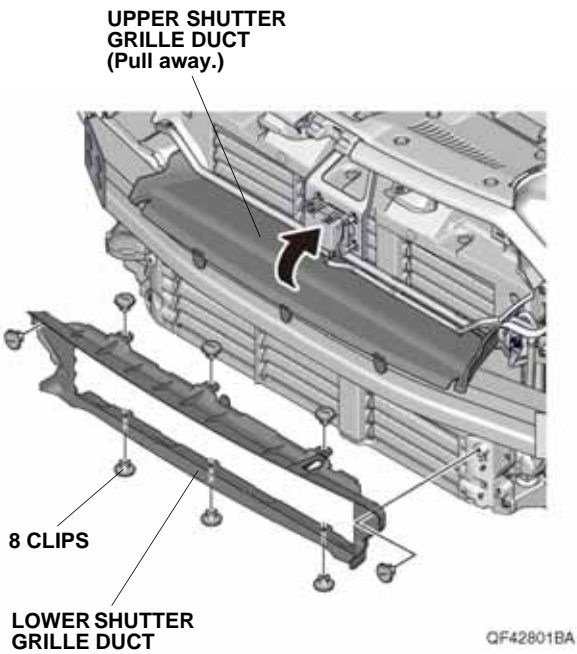


10. Remove the intake air duct.

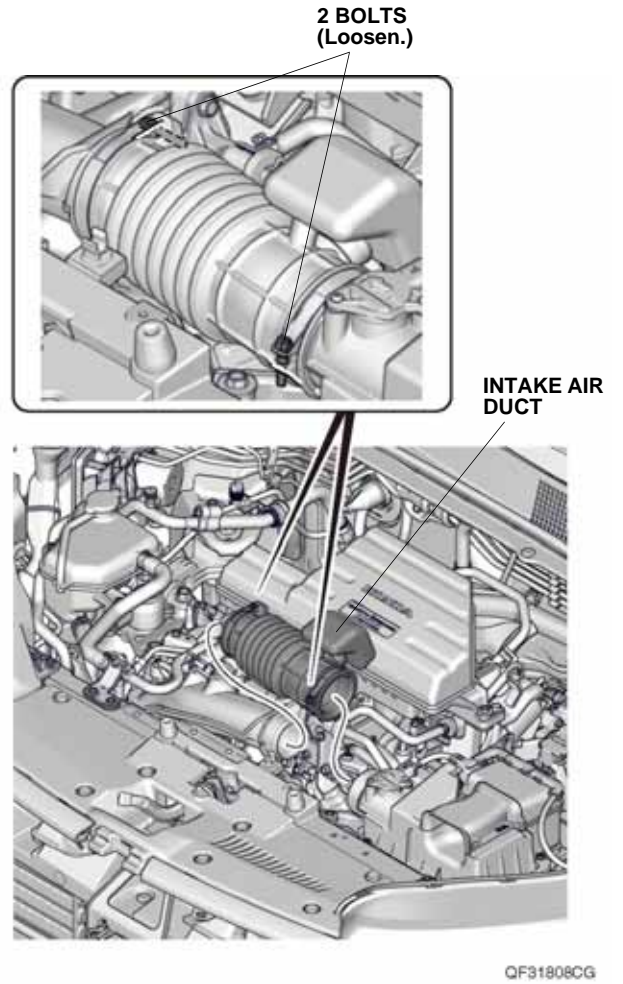


11. Remove the air cleaner:
 - Unplug the vehicle connector, and release the harness holder.
 - Remove the two washer-bolts.

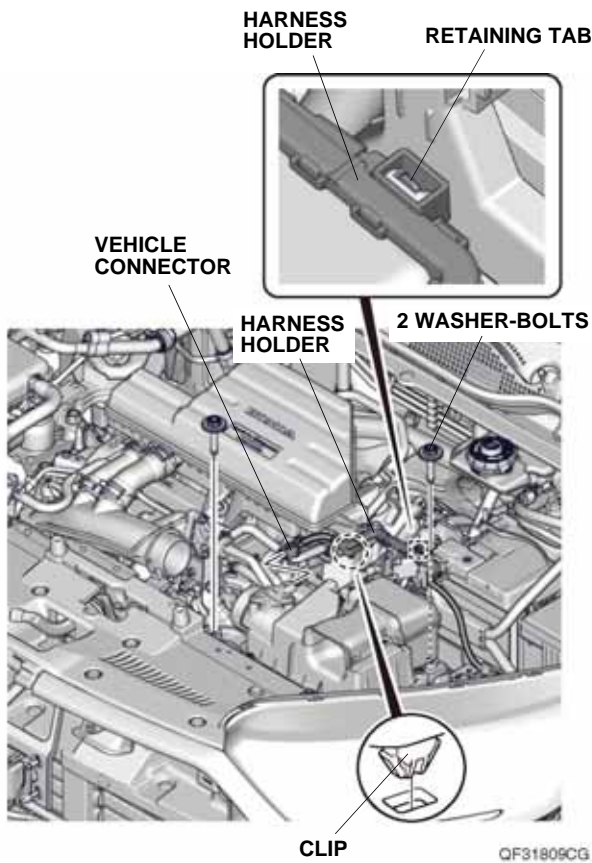


- Remove the air cleaner.

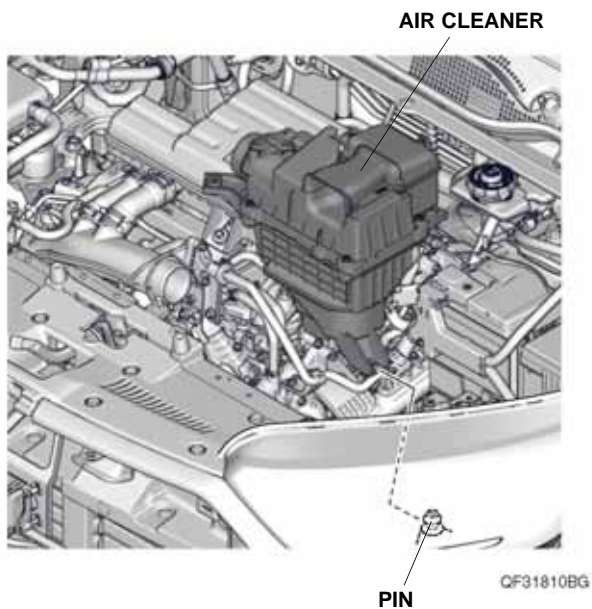



12. Using a utility knife, cut out the lower shutter grille duct as shown. Remove any burrs.

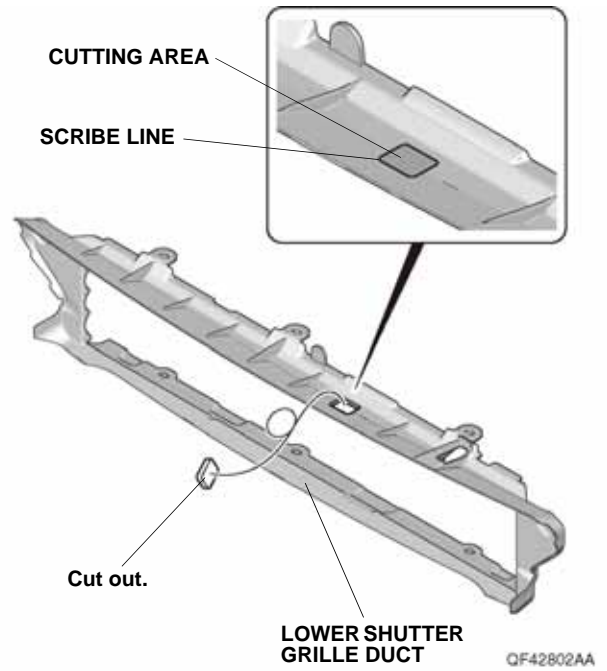

13. Install the lower shutter grille duct.
14. Using a tape measure, measure and mark the heater harness as shown. **A**, **B**, **C**, **D**, and **E**.

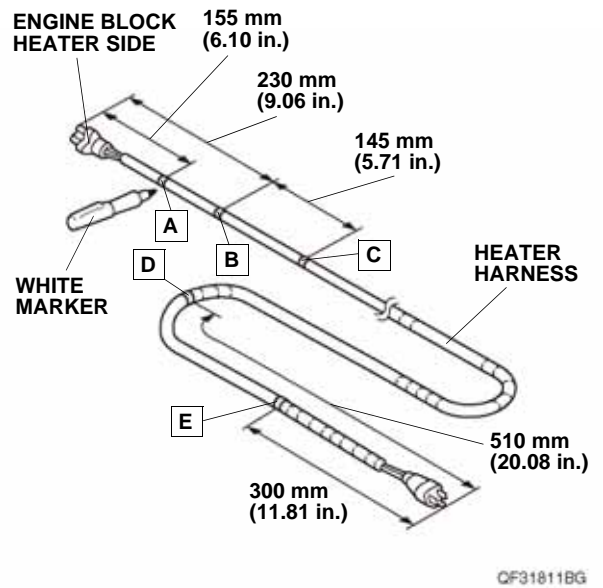


15. Locate and remove the drain bolt and washer. Coolant remaining in the engine jackets flows out of the hole when the drain bolt is removed. Retain the drain bolt; it will be used if the engine block heater is removed.
NOTE: Use a new washer if the drain bolt is installed.

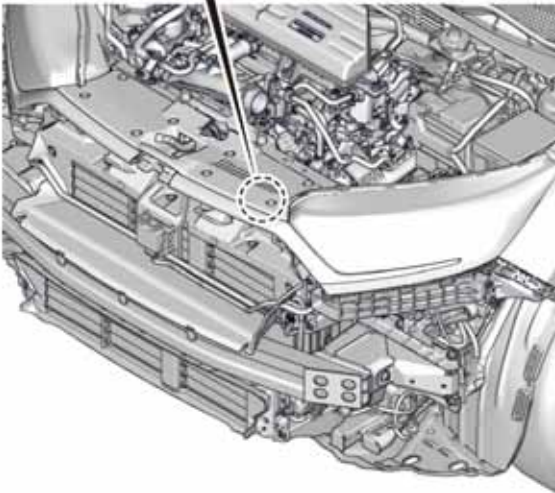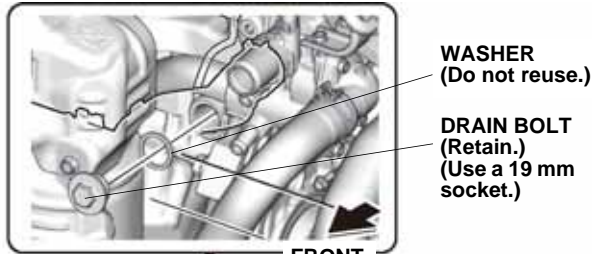

QF32201BG

16. Install the engine block heater with the aluminum washer into the bolt hole using a 24 mm socket. Torque the engine block heater to 80 N·m (59 lb·ft).

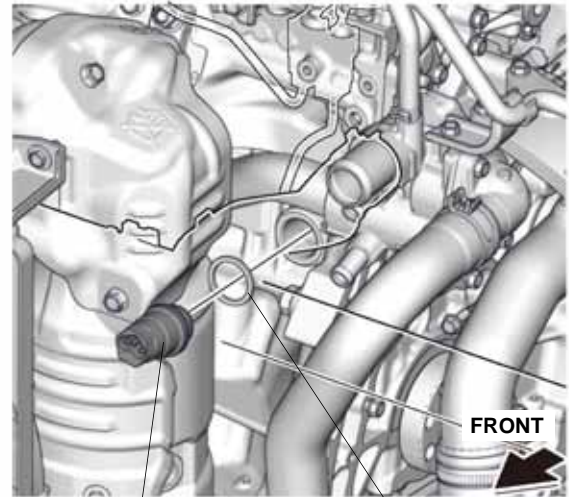


ENGINE BLOCK HEATER
80 N·m (59 lb·ft)
(Use a 24 mm socket.)

ALUMINUM
WASHER

QF32202AG

17. Plug the heater harness connector to the engine block heater. Make sure the heater harness connector is fully seated in the engine block heater.

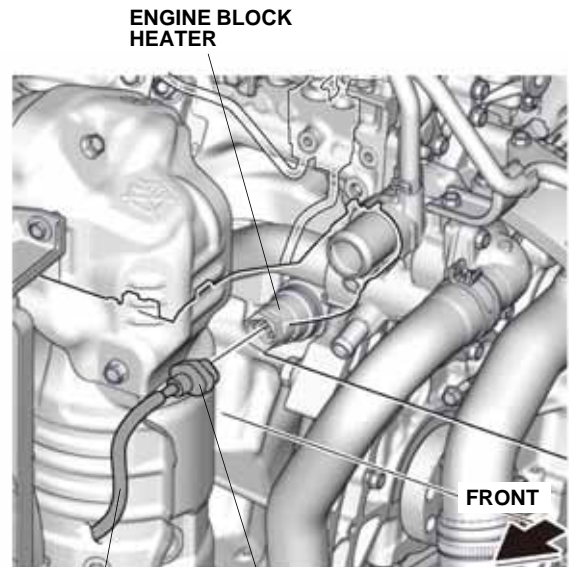


HEATER
HARNESS


HEATER HARNESS
CONNECTOR

QF32203AG

18. Route the heater harness in the direction shown, and secure it to the vehicle harness and vehicle connectors with two brown wire ties at the point **A** and **B**.

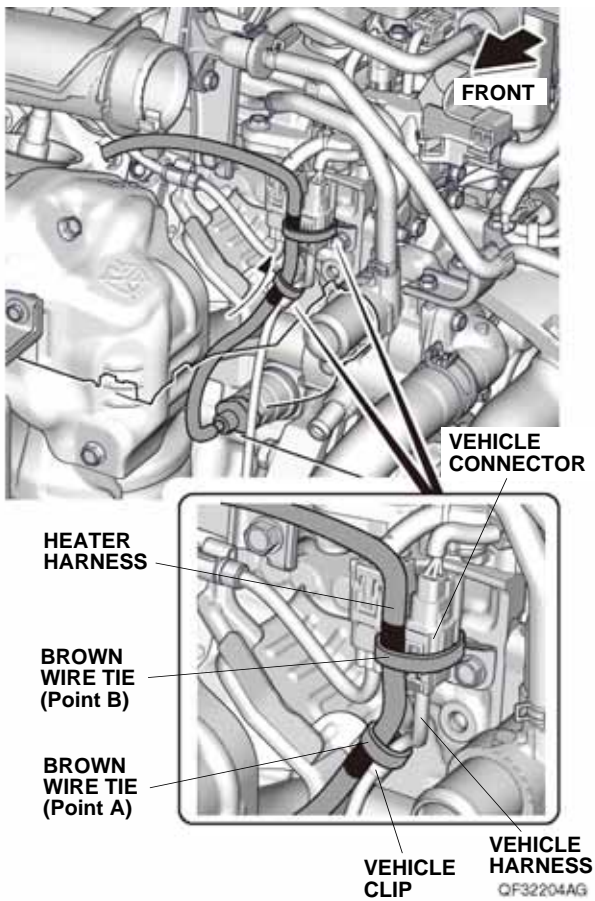


19. Route the heater harness as shown. Line up the point **C** on the heater harness with the edge of the vehicle bracket, and secure the heater harness to the vehicle bracket with one brown wire tie.

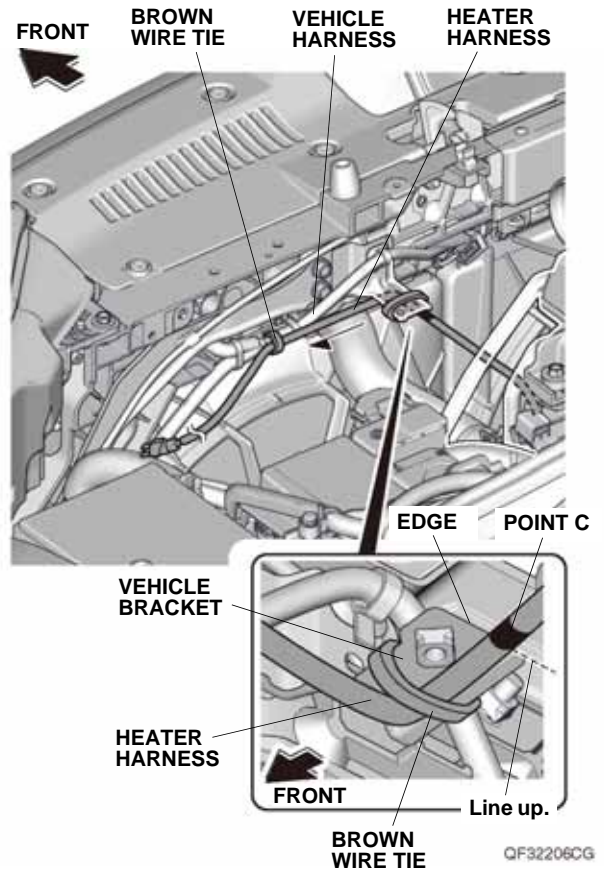


20. Secure the heater harness to the vehicle harness with one brown wire tie.


21. Route the heater harness under the left headlight, and secure it to the vehicle harness with one brown wire tie and one black wire tie.

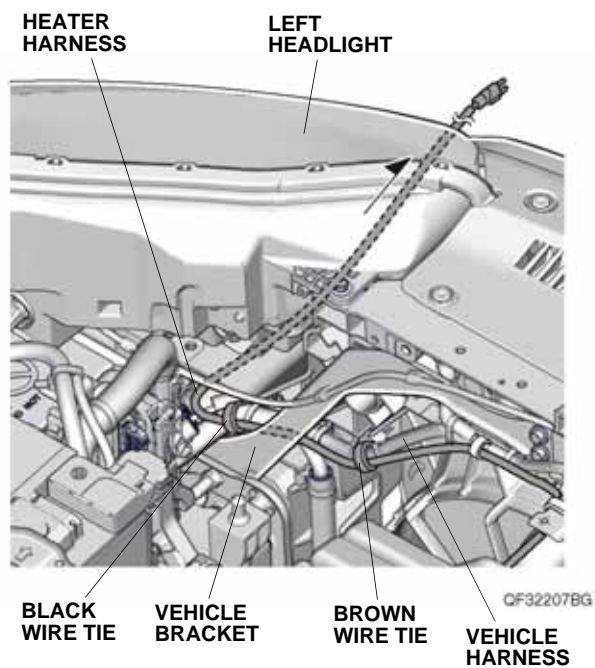

22. Route the heater harness down under the front bumper beam, and secure it to the vehicle harness with one black wire tie at the point **D**.

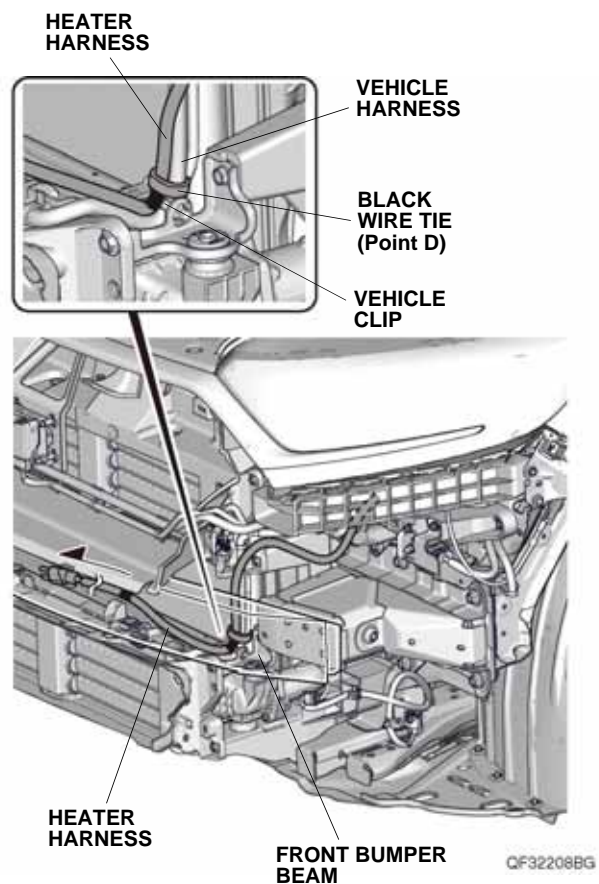


23. Secure the heater harness to the vehicle harness with one black wire tie.

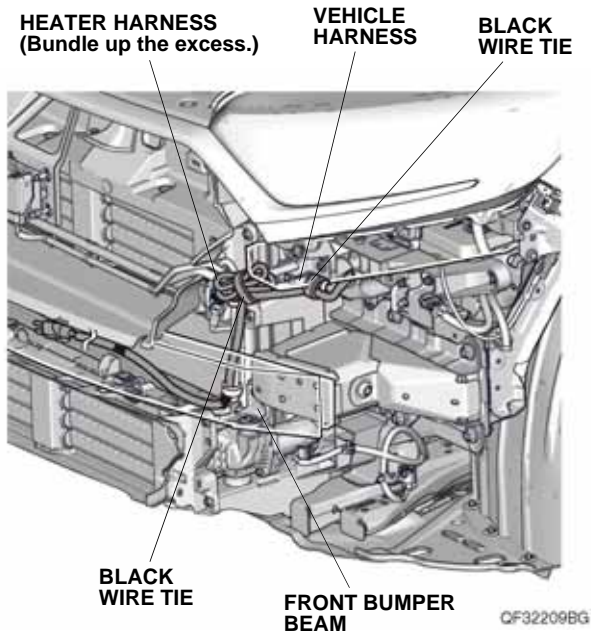


24. Bundle up the excess heater harness, and secure it to the vehicle harness with one black wire tie.


25. Pull away the upper shutter grille duct, and route the heater harness through the hole on the lower shutter grille cutout in step 12. Secure the heater harness to the bracket on the lower shutter grille with one black wire tie at the point **E**.

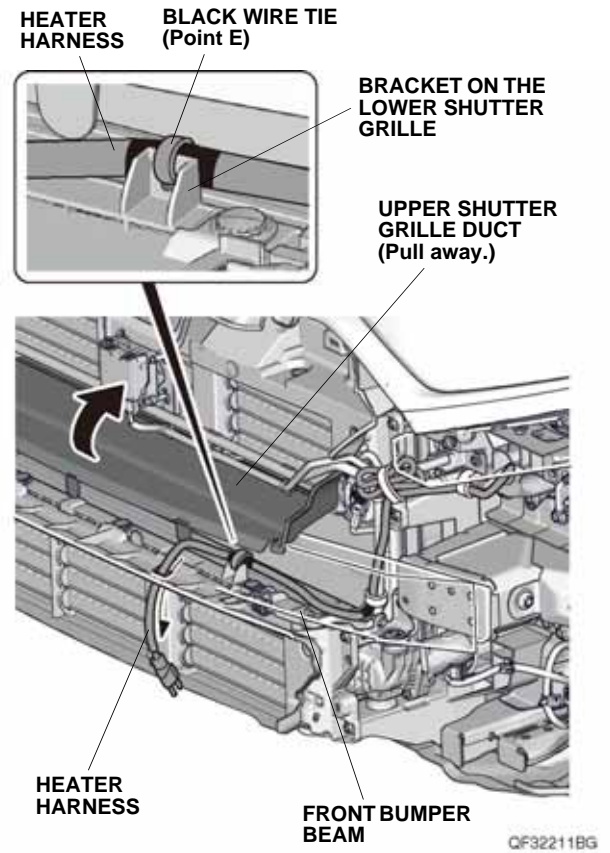


26. With the help of an assistant, bring the front bumper close to the vehicle. Route the heater harness through the center lower grille, then install the front bumper.

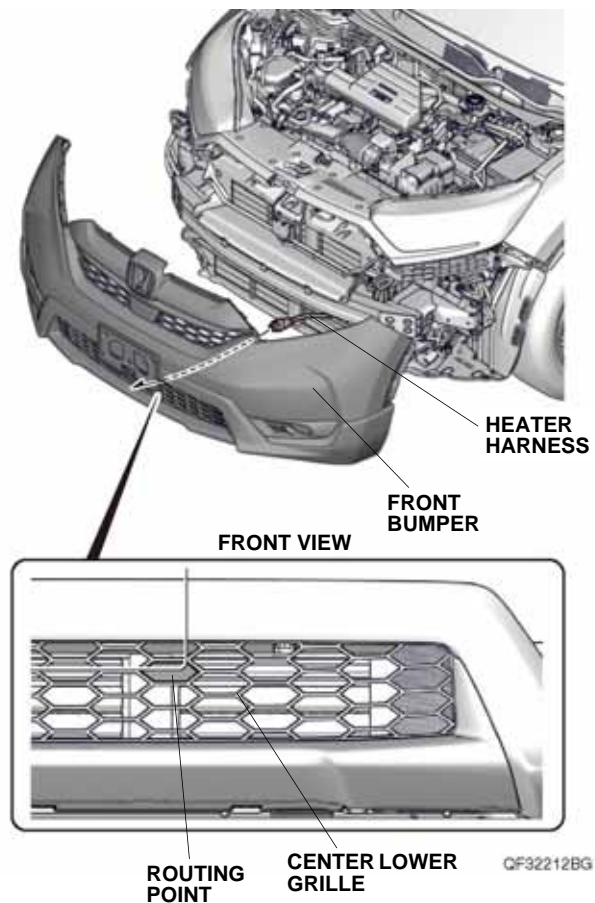

27. Secure the heater harness to the center lower grille with one black wire tie.

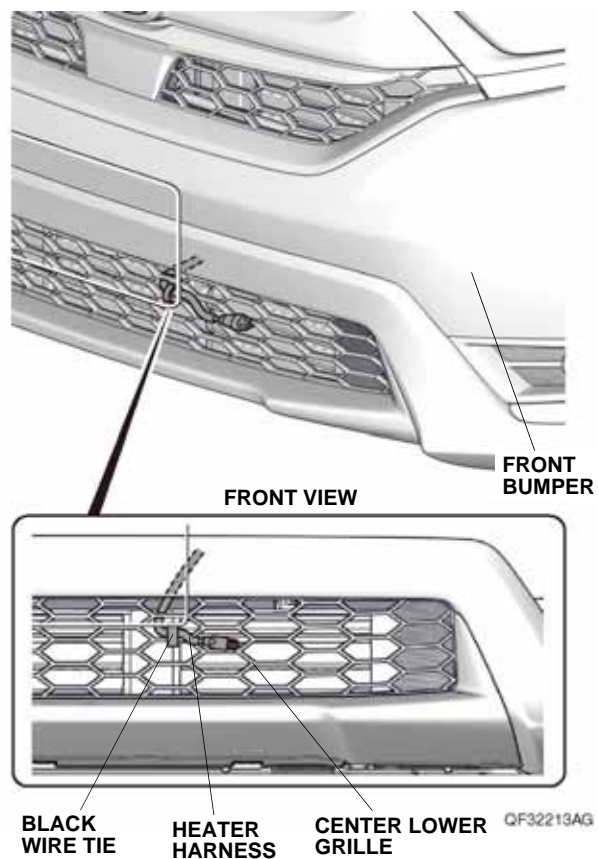

28. Secure the protective cap to the center lower grille as shown, and plug the heater harness connector to the protective cap.

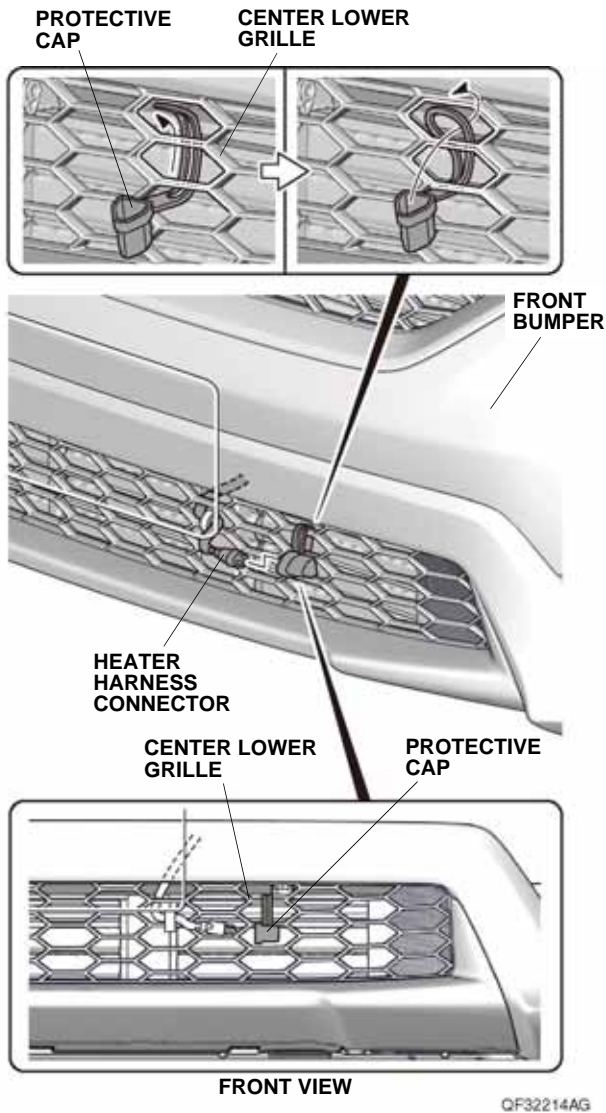

29. Install all removed parts.
30. Install the radiator drain plug.
31. Remove the radiator cap, and fill the system with the recommended coolant. Follow the instructions in the service information to fill the cooling system and check for leaks. Make sure there are no leaks around the engine block heater.
32. Make sure that the heater harness is routed properly and all connectors are plugged in.
33. Install the radiator cap.
34. Put the drain bolt (removed in step 15) in the glove box.
35. Connect the negative cable to the battery.
36. Press and hold the audio unit power button for 2 seconds to restore audio and navi (if equipped) system functions.
37. Set the clock on vehicles without navigation.
38. If necessary, restore the systems back to normal operation as described in the service information.