│	Accessory ENGINE BLOCK HEATER	Application 2017 FIT	Publications No. VERSION 1
INSTRUCTIONS	P/N 08T44-SNA-101		Issue Date JUN 2016
PARTS LIST	ТО	OLS AND SUPPLIES REQUI	RED
Engine block heater	Phi	llips screwdriver	
	Rat	Ratchet	
		10 mm, 19 mm, and 24 mm Sockets	
		mm Open end wrench	
Aluminum washer		Torque wrench	
		Diagonal cutters Heavy gloves	
Heater harness		Drain pan Tape measure	
		White marker	
		Coolant (Honda All Season Antifreeze/Coolant Type 2)	
		Blanket	
		Fender cover	
		Таре	
Protective cap		op towel	
12 Black wire ties	The Equipart of the Sector	e following tool is available thro uipment Program. On the iN, o rvice Bay > Tool and Equipme number under "Search". Or, o	click on: Service > nt Program, then enter
11 Not used)		 Trim Tool Set (T/N SOJATP2014) 	
		Plastic Trim Tool (T/N SILTRIM	•
	• I Illu Vel	stration of the Engine Block	Heater Installed on the
<u>S</u>			
7 Wire ties with clip 6 Not used)		ENGINE BLOC	K HEATER
5 Natural wire ties 4 Not used)			
		HEATER HARNESS	QC71316AH
			QC/1316AH


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Always use Honda All Season Antifreeze/Coolant Type 2. Using a non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail.
- To avoid burning out the element, do not operate the engine block heater until it is installed in the vehicle with coolant.
- 1. Disconnect the negative cable from the battery.
- 2. Allow the engine and all cooling system components to cool down.
- 3. Place the vehicle on a hoist and raise the vehicle off the ground.
- 4. Place a clean drain pan under the radiator drain plug, then remove the drain plug from the bottom of the radiator to drain the coolant. Remove the radiator cap to increase the flow.

NOTICE: Radiator coolant will damage the paint. Quickly rinse any spilled coolant from the paint.

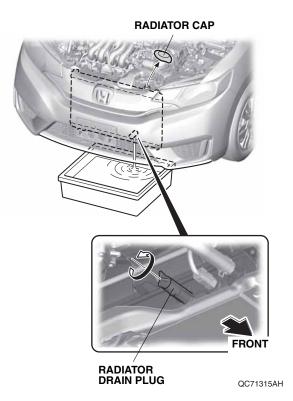


- 5. Drain the coolant completely, then reinstall the radiator cap.
- 6. Remove the front bumper:
 - Attach tape to the areas shown on each side.

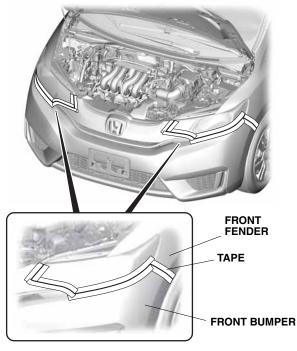


QC71101AH


• Remove the grille cover.

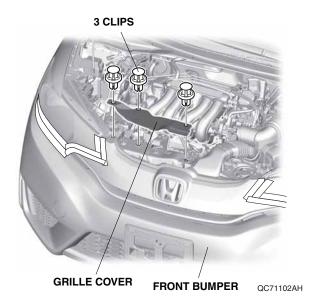

• Remove the intake air guide.

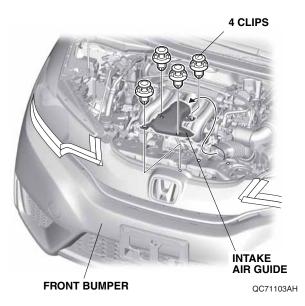

• Remove six self-tapping screws and eight clips.

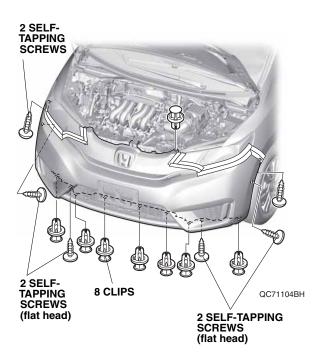

• Release four retaining tabs on each side.

FRONT BUMPER

•




QC71105AH

With the help of an assistant, release one retaining tab on each side.




QC71106AH


Remove the front bumper, and unplug the vehicle connectors. Place the front bumper on the blanket to prevent damage.

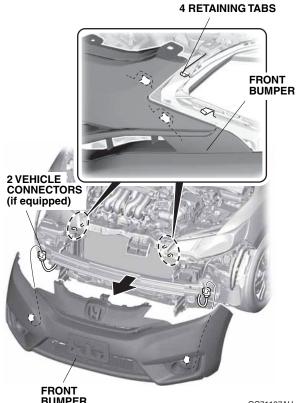


7. Remove the engine under cover.

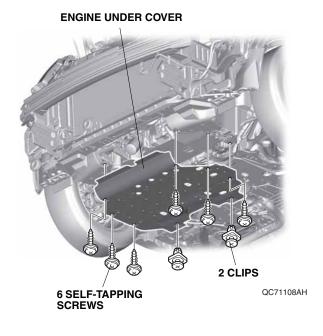

8. Using a tape measure, mark the heater harness at the measurements A, B, C, and D.

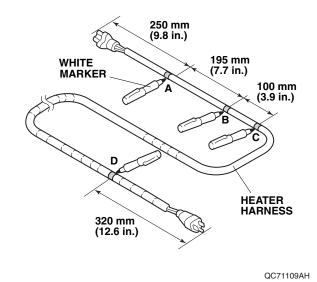

9. Install one wire tie with clip on the heater harness at the white mark (point C).

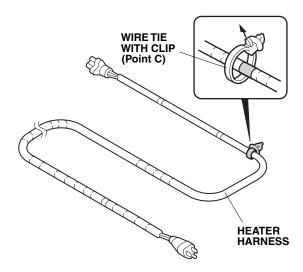


QC71110AH

FRONT BUMPER

QC71107AH

10. Locate and remove the drain bolt and washer. Coolant remaining in the engine jackets flows out of the hole when the drain bolt is removed. Retain the drain bolt; it will be used if the engine block heater is removed.


NOTE: Use a new washer if the drain bolt is reinstalled.

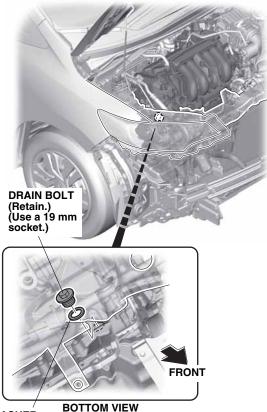

WASHER (Do not reuse.)


QC71111AH

 Install the engine block heater with the aluminum washer into the bolt hole using a 24 mm socket. Torque the engine block heater to 80 N·m (59 lb·ft).

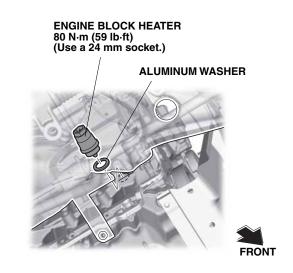


QC71301AH

12. Plug the heater harness connector into the engine block heater. Make sure the heater harness connector is fully seated.

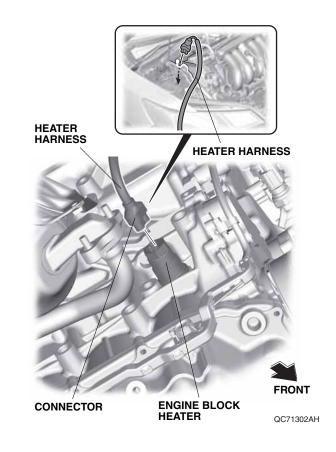


13. Route the heater harness in the direction shown. Align the white mark (point A) with the vehicle connector, and secure the heater harness to the vehicle holder with one natural wire tie.

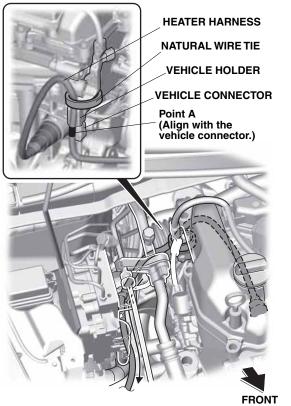


QC71303AH

14. Align the white mark (Point B) with the vehicle clip. Secure the heater harness to the vehicle harness with one black wire tie.

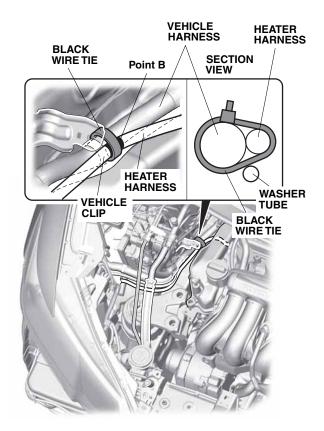


QC71304BH

15. Secure the heater harness to the vehicle frame hole with one wire tie with clip installed in step 9.

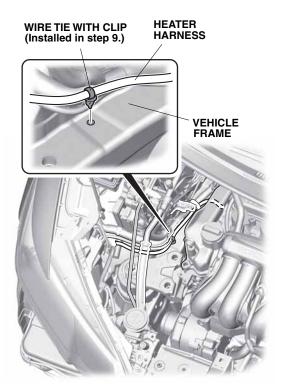


QC71305AH


16. Route the heater harness as shown.

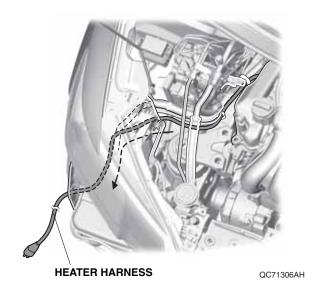


17. Secure the heater harness to the vehicle harness with two black wire ties.

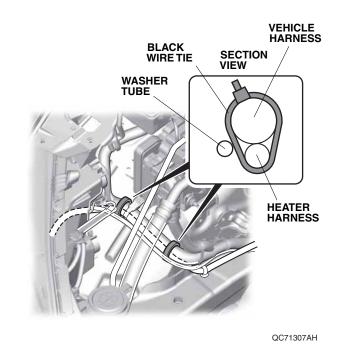


18. Route the heater harness as shown. Then secure the heater harness to the vehicle harness with three black wire ties.

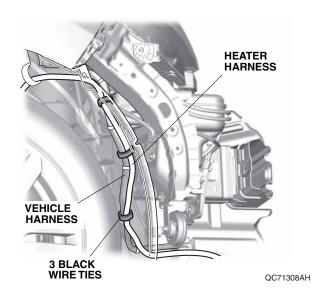


19. Route the heater harness as shown.

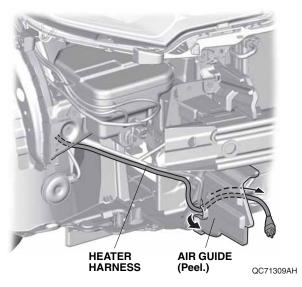


20. Align the white mark (Point D) with the vehicle clip. Secure the heater harness to the vehicle harness with one black wire tie.

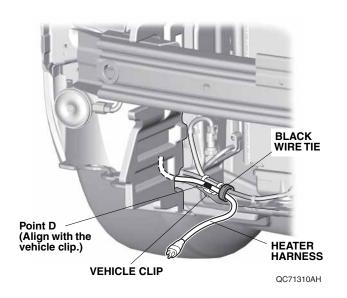

21. Secure the heater harness to the vehicle harness with three black wire ties.

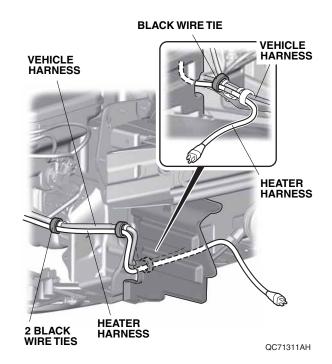


22. Route the heater harness through the front bumper as shown, with the help of an assistant install the front bumper.

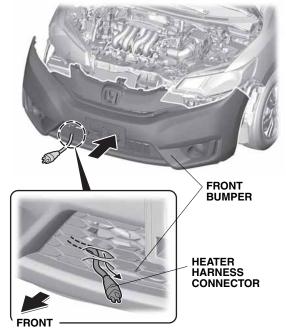


QC71312AH

23. Attach the protective cap to the front bumper, and plug the heater harness connector into the protective cap.

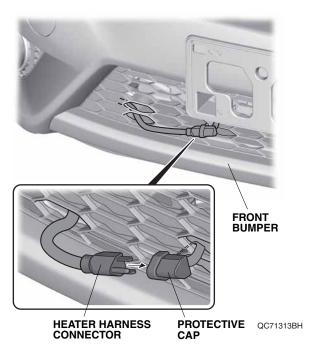

24. Secure the heater harness to the front bumper with one black wire tie.

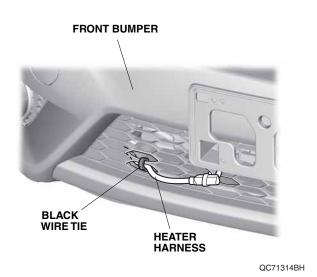

- 25. Install all removed parts.
- 26. Install the radiator drain plug.
- 27. Remove the radiator cap and fill the system with the recommended coolant. Follow the instructions in the Service Manual to fill the cooling system and check for leaks. Check that there is no leak around the engine block heater.
- 28. Make sure that the heater harness is routed properly and all connectors are plugged in.
- 29. Install the radiator cap.
- 30. Put the drain bolt (removed in step 10) in the glove box.
- 31. Connect the negative cable to the battery.
- 32. Press and hold the audio unit power button for two seconds to restore audio and navi (if equipped) system functions.
- 33. Set the clock on vehicles without navigation.
- 34. Restore the systems back to normal operation as described in the Service Manual if necessary.