



INSTALLATION INSTRUCTIONS

Accessory
CD CHANGER ATTACHMENT KIT


Application
2004 ODYSSEY

Publications No.
All 25999
Issue Date
AUG 2003


PARTS LIST

**CD Changer Attachment Kit (sold separately):
P/N 08B12-S0X-100**


Right side rail bracket

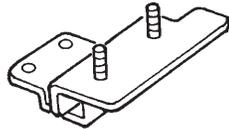

Left side rail bracket

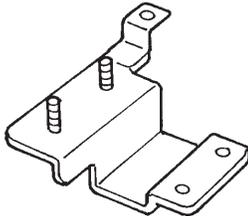

BUS Cable

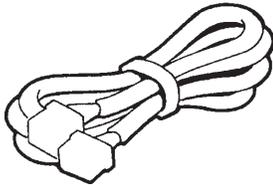


4 Flange bolts, 6 x 12 mm




4 Flange nuts, 6 mm



2 Cushion tapes

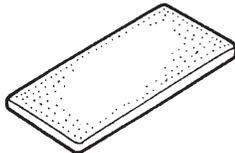


5 Wire ties

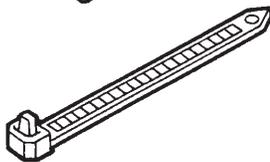


4 Washer-screws, 4 x 8 mm




2 Wire clips

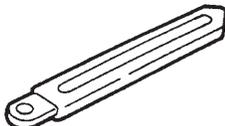


Short wire tie with clip

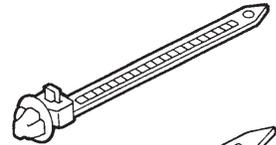


Long wire tie with clip

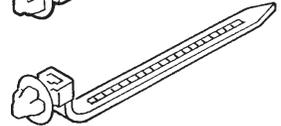

Right CD changer bracket

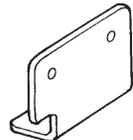


Left CD changer bracket

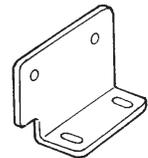

**CD Changer (sold separately):
P/N 08A26-1B1-100**


CD changer

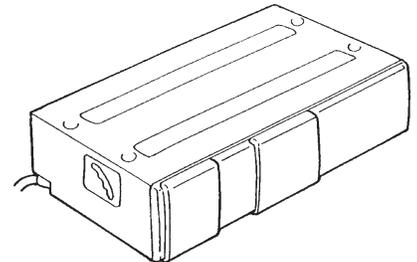


4 Washer-screws, 4 x 6 mm
(Not used)



 
Adhesive seal sheet



Locking covers

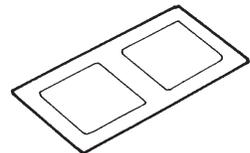

CD magazine

 


Owner's Manual



TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Stubby Phillips screwdriver
8 mm, 10 mm, and 14 mm Combination wrenches
8 mm, 10 mm, and 14 mm Sockets
Tape measure
Ratchet
Torque wrench
Shop towel
Diagonal cutters
Isopropyl alcohol
Utility knife
Awl

Illustration of the CD Changer Installed in the Vehicle (Driver's Seat)

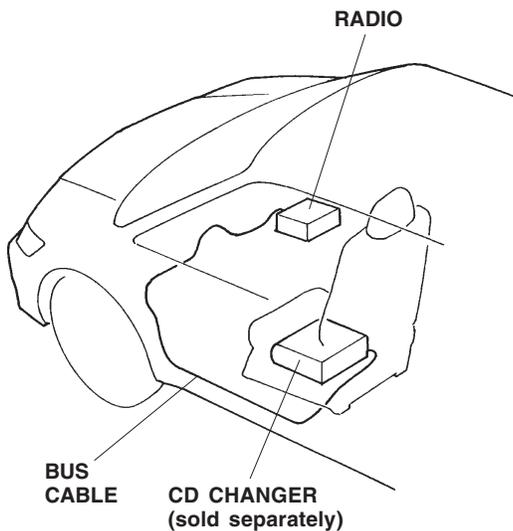


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.

3. Remove the console panel:
 - Move the gear selector to the 1 position.
 - Using a small flat-tip screwdriver around a shop towel, gently pry out and remove the fog light cover. If the vehicle is equipped with optional fog lights, remove and unplug the fog light switch.
 - Reach inside the cover hole, gently pull along the bottom to release the lower clips, and work toward the top to release all ten clips.
 - Pull out the console panel, unplug the vehicle connectors, and remove the panel.


Without Navigation System:

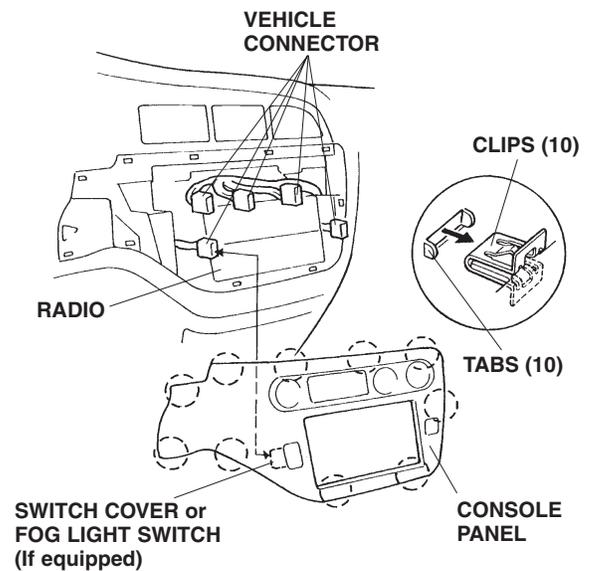


With Navigation System:

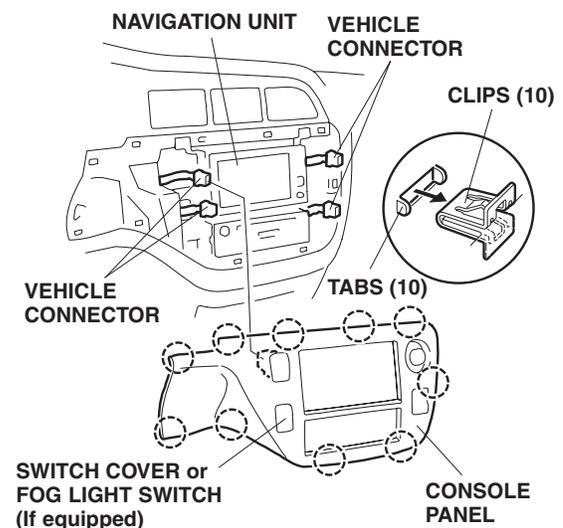


- Remove the radio or navigation unit by removing the self-tapping screws and bolts and then unplugging the vehicle connector and the antenna lead.

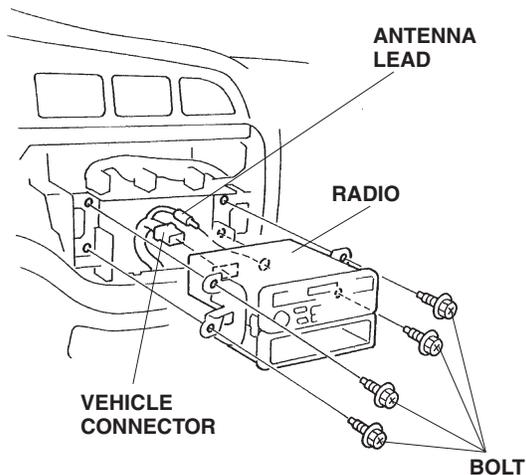


Without Navigation System:

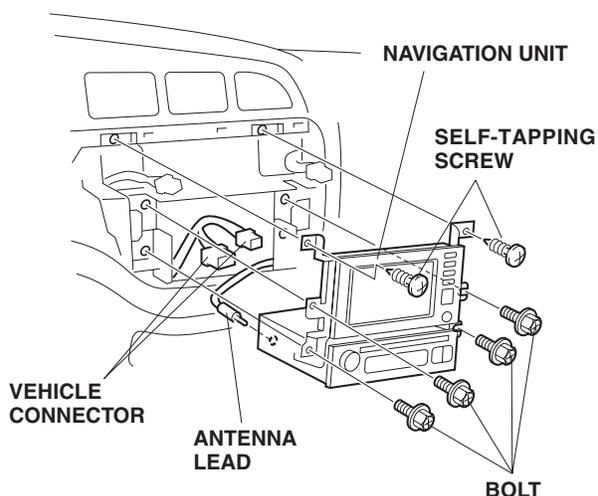


With Navigation System:

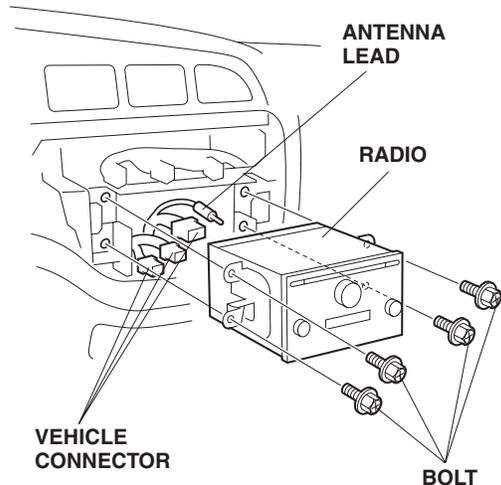


With Rear Entertainment System:

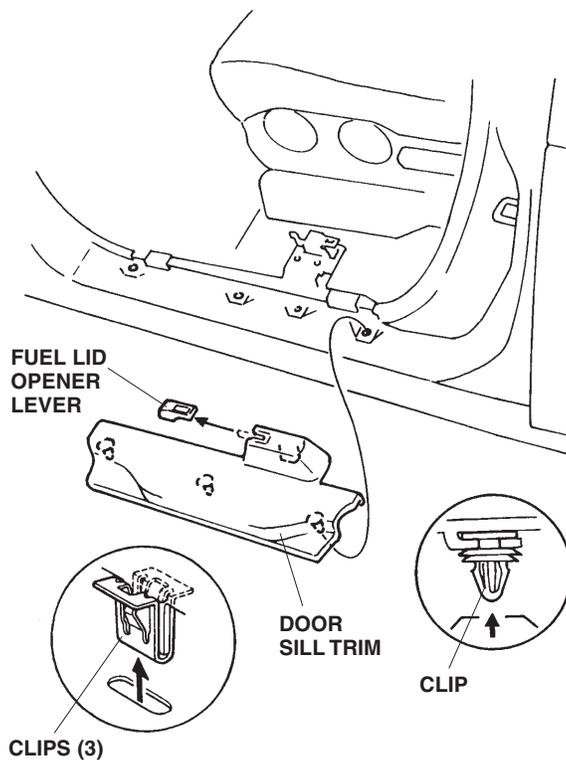


- Remove the fuel lid opener lever.
- Pry up on the clips, and remove the front driver's door sill trim. Be careful not to damage the clips.
- Pull up the driver's side front door opening trim, and remove the plastic screw that secures the kick panel. Remove the kick panel by pulling it out toward you.

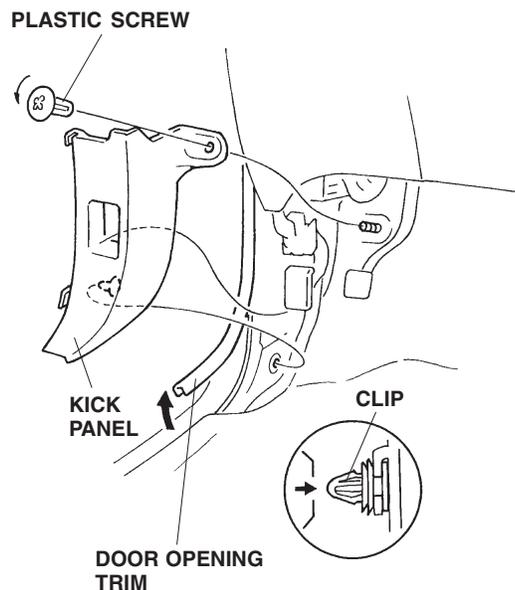


- Remove the driver's dashboard lower cover (one self-tapping screw and three clips). On the EX model, unplug the climate control 2-pin connector from the sensor.

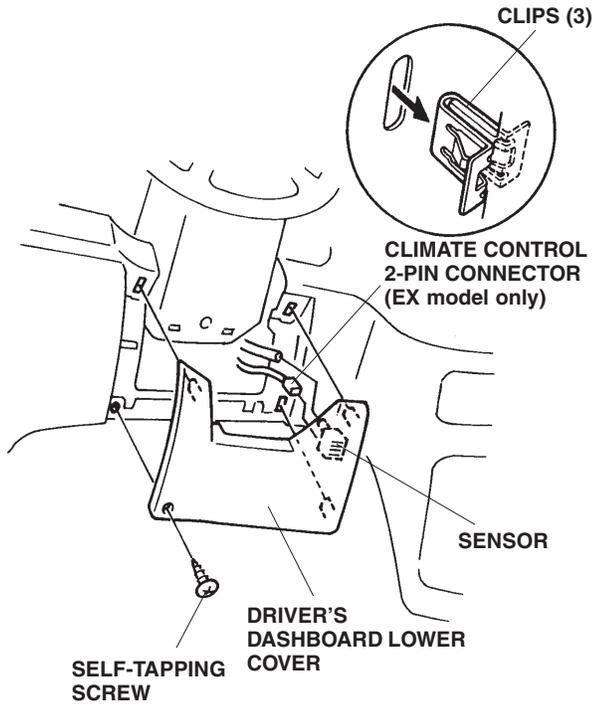

- Remove the driver's seat inside seat rail covers.

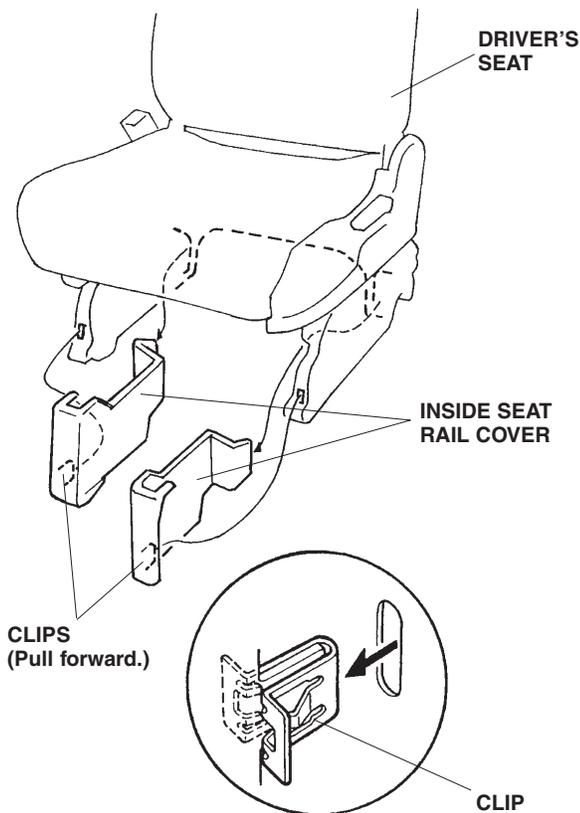


- Remove the rear seat rail cover from the driver's seat by pulling to release the three clips.

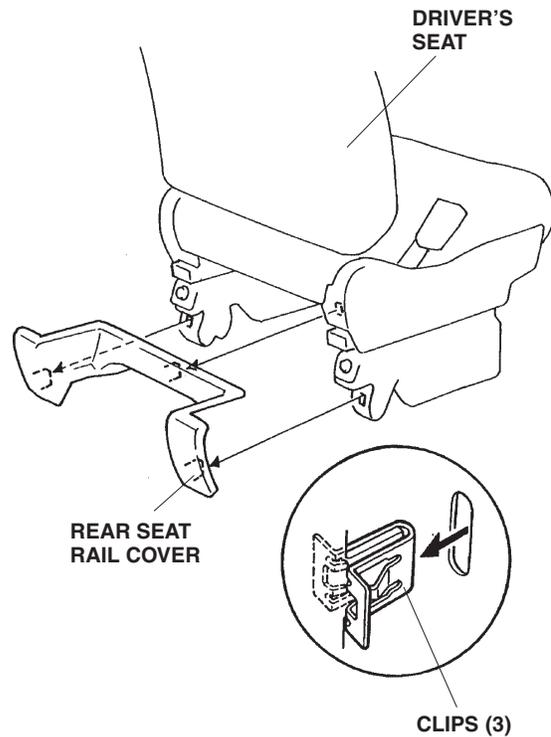


- Slide the driver's seat fully to the rear. Remove the four bolts that secure the driver's seat so that the seat can be lifted up. Take care not to damage the vehicle harness when lifting the driver's seat up.

Manual Seat Equipped:

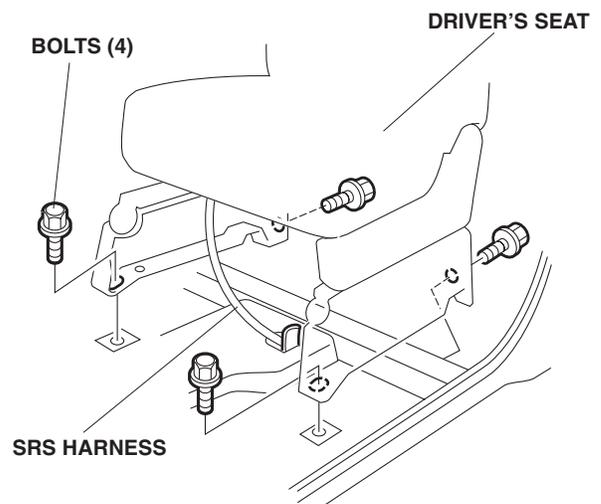


Power Seat Equipped:

- Slide the driver's seat fully to the rear. Remove the four bolts that secure the driver's seat so the seat can be tilted back. Take care not to damage the vehicle harnesses when tilting the driver's seat.
- Remove the wire tie with clip from the floor. Cut the wire tie with clip off the power seat harness.

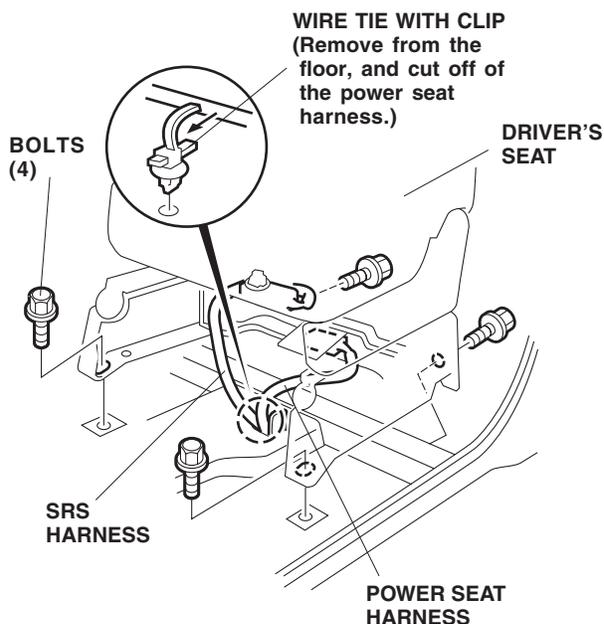


- Under the driver's seat, make a 60 mm mark on the floor carpet. Using a utility knife, cut the floor carpet as indicated by the mark.

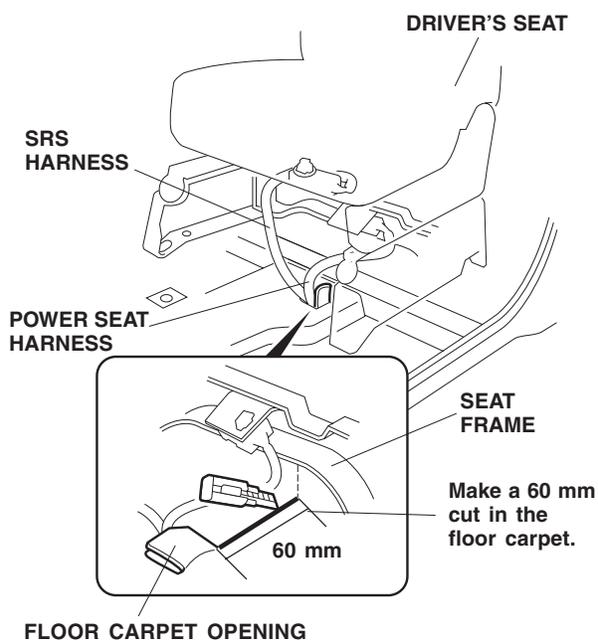


Routing the BUS Cable

12. Turn over the floor carpet. From the rear of the fuel lid opener, route the BUS cable under the floor carpet and out through the opening in the floor carpet. Adjust the length of the BUS cable so that the distance from the opening in the floor carpet to the end of the BUS cable connector is 500 mm.

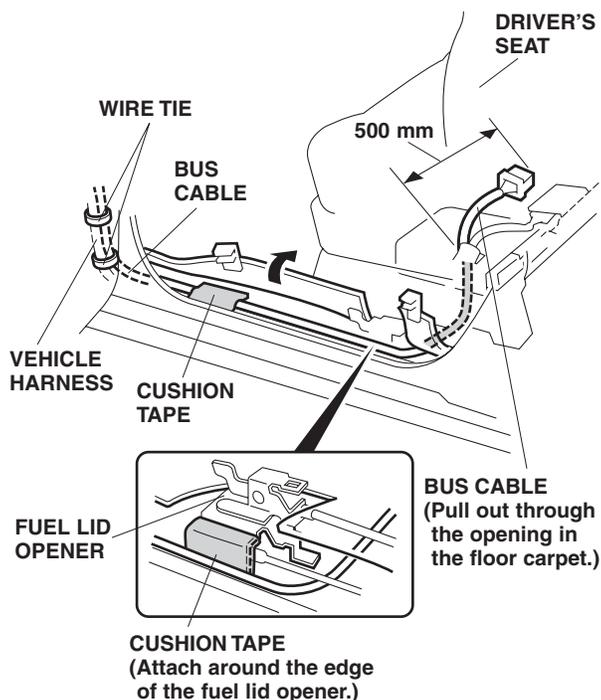


13. Using isopropyl alcohol on a shop towel, thoroughly clean the edge of the fuel lid opener where the cushion tape will attach. Remove the adhesive backing from one cushion tape, and attach it to the edge of the fuel lid opener as shown.
14. Continue routing the BUS cable to the front along the vehicle harness. Using isopropyl alcohol, thoroughly clean the area where the cushion tape will attach. Secure the BUS cable to the floor panel with one cushion tape.
15. Secure the BUS cable to the vehicle harness with two wire ties in the areas shown.

- Route the BUS cable over each pipe stay, the steering column, and out through the radio opening.

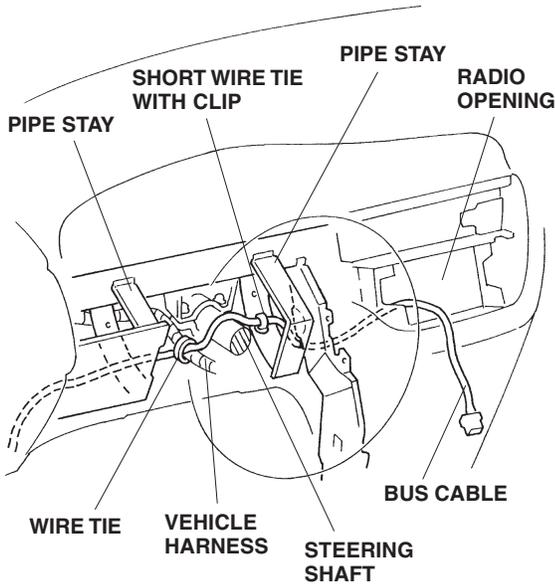


- Secure the BUS cable to the vehicle harness with one wire tie. Secure the BUS cable to the pipe stay with the short wire tie with clip. Secure the BUS cable only as shown and not to the yellow SRS harness.
- Bundle up the excess length, and secure the BUS cable to the center dashboard stay with one wire tie.

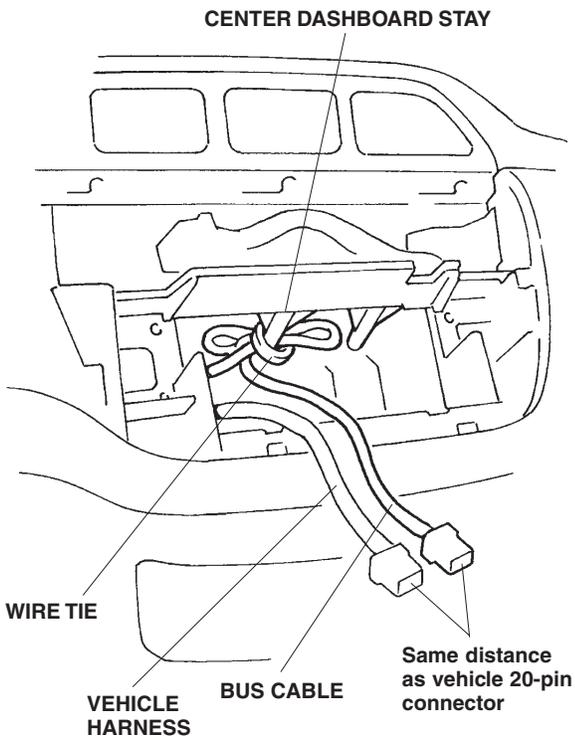


- Plug in the vehicle connector, the antenna lead and the BUS cable; then reinstall the radio or navigation unit.


Without Navigation System:

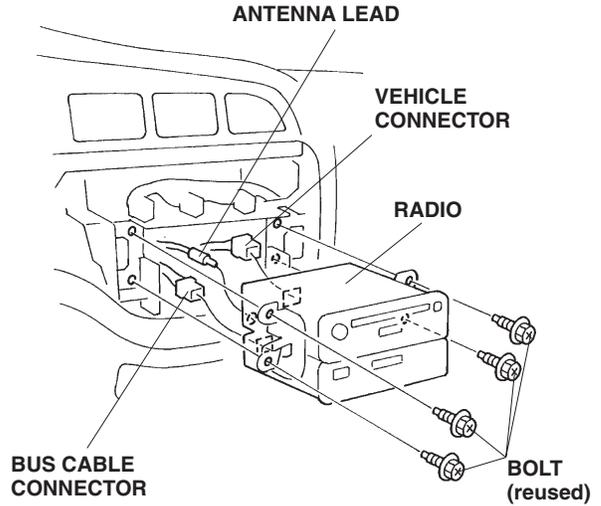


With Navigation System:

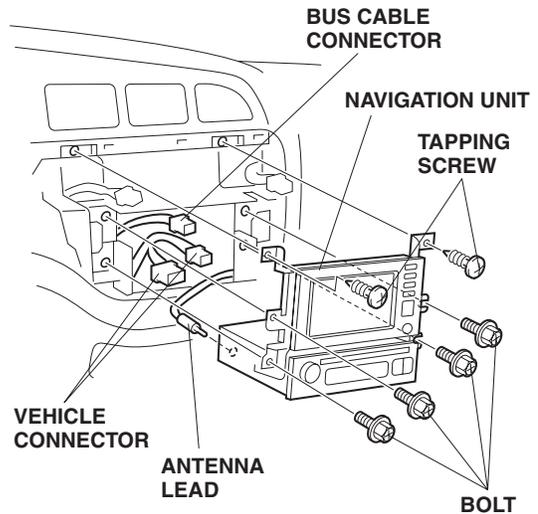


With Rear Entertainment System:

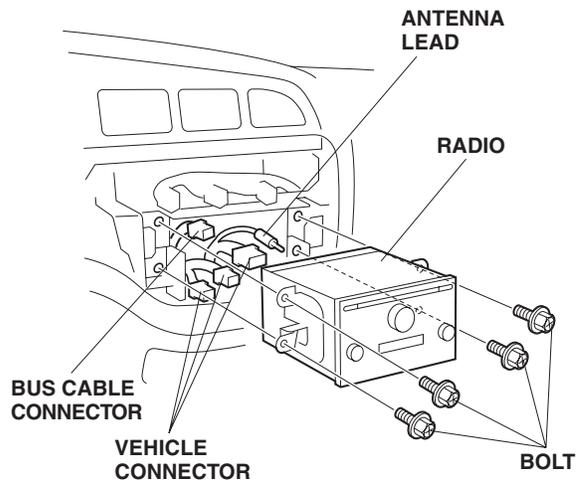


With Pocket:

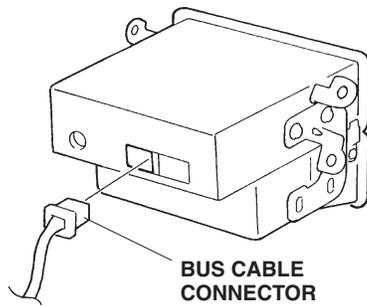


With Cassette Player:

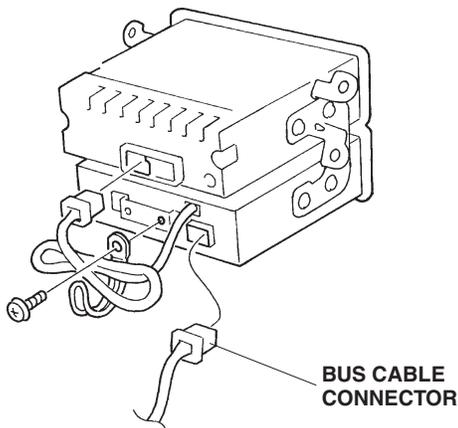

With Navigation System:

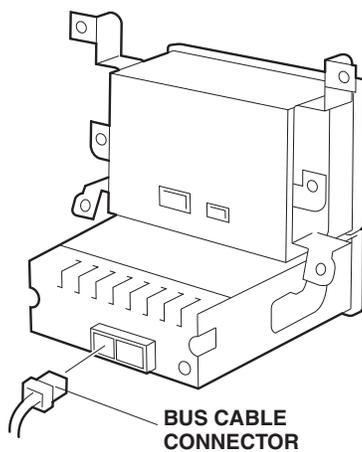


With Rear Entertainment System:

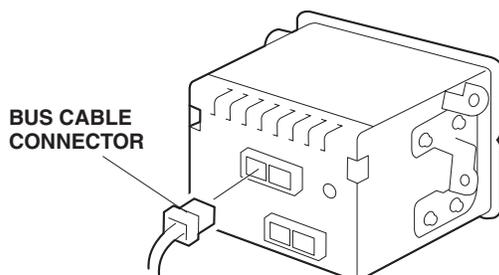


Installing the CD Changer

20. Carefully unpack the CD changer. Remove the three shipping clips, and discard the shipping cover. Install an adhesive seal (included with the CD changer kit) over each of the three clips holes. Save the shipping clips for your customer in the event the unit needs to be serviced.

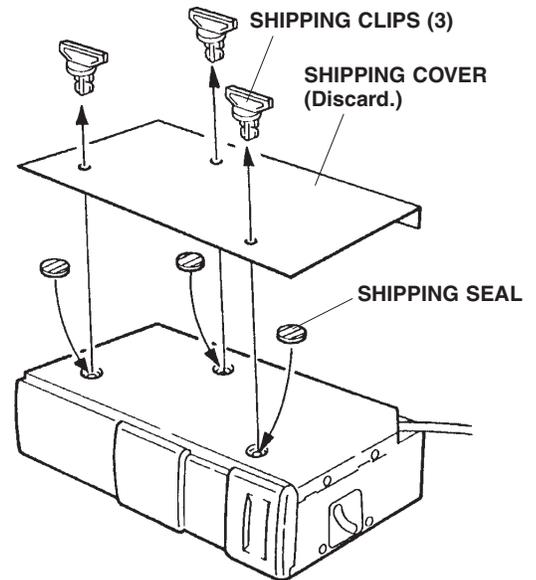


21. Visually check the position of the spring adjusting pin on both sides of the CD changer. If the spring adjusting pins are not in the horizontal (H) position, move the pins to the horizontal (H) position by sliding them up with an awl.

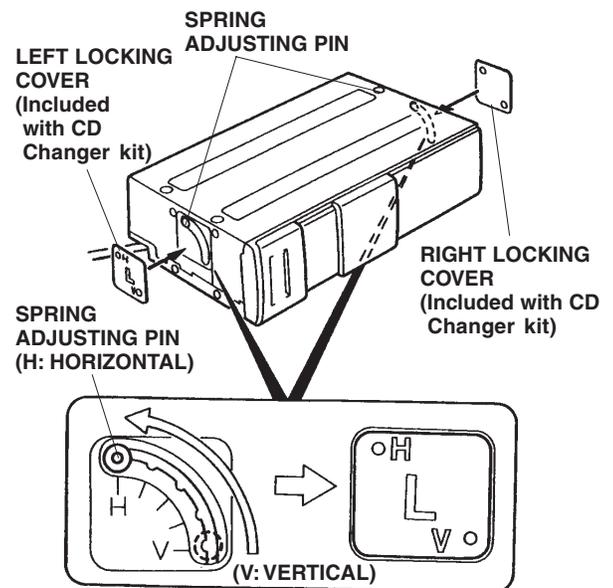

22. Remove the adhesive backing from the "L" and "R" locking covers, and attach them to the sides of the CD changer. Align the diagonally opposite holes with the H and V positions.


23. Install the right CD changer bracket on the CD changer using two 4 x 8 mm washer-screws through the holes in the two wire clips. Install the left CD changer bracket on the CD changer using two 4 x 8 mm washer-screws.

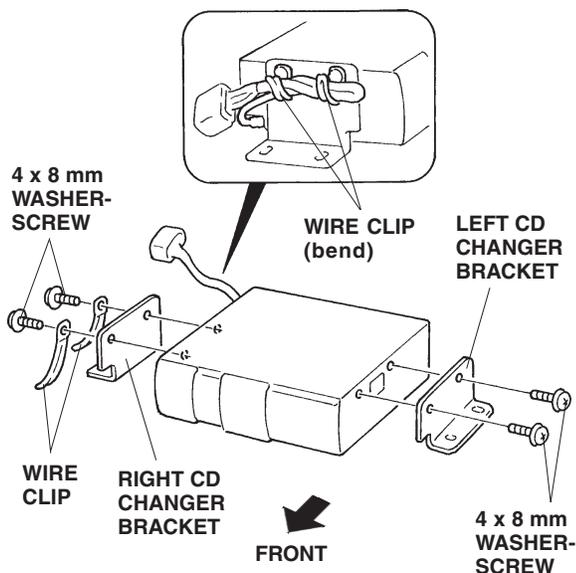


24. Bundle the excess BUS cable, and secure it to the CD changer with the two wire clips.

Installing the Seat Rail Brackets

25. Position the left side rail bracket on the left side rail, and align the two holes in the bracket with the two inside holes in the side rail. Attach the bracket with two 6 x 12 mm flange bolts. Repeat to install the right side rail bracket.

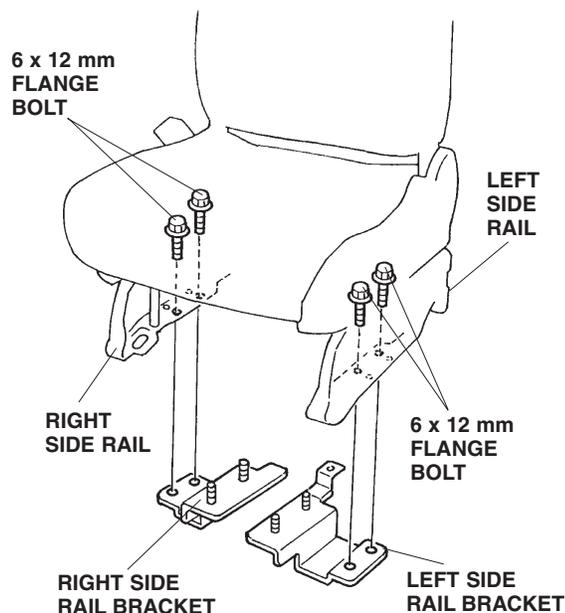


26. Place the CD changer on the side rail brackets and install the four 6 mm flange nuts. Tighten the nuts securely.

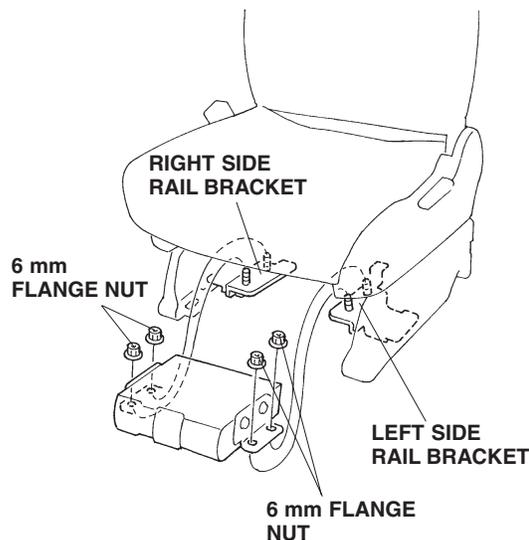

27. Connect the BUS cable to the CD changer:


Manual Seat Equipped:

- Connect the BUS cable connector to the connector from the CD changer. Secure the BUS cable to the seat crossbar with one wire tie.
- Attach one wire tie with clip to the BUS cable, and push the clip into the hole in the left side rail bracket.
- Reinstall the driver's seat. Torque the seat bolts to 41 to 53 N·m (30.4 to 39.1 lb-ft).
- After installing the seat, slide the seat back and forth to check that the under-seat wire harnesses are routed properly.

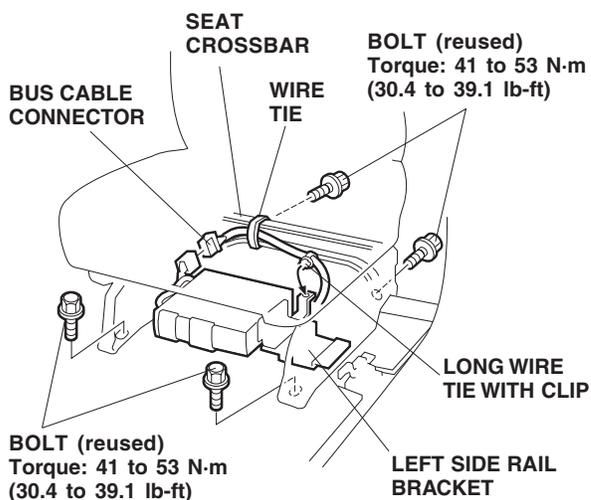

Power Seat Equipped Model:

- Slide the power seat harness, SRS harness, and BUS cable to the rear of the slit in the floor carpet.
- Connect the BUS cable connector to the connector from the CD changer.
- Make loops in the power seat harness, then secure them to the BUS cable and SRS harness with one wire tie.
- Reinstall the driver's seat. Torque the seat bolts to 41 to 53 N·m (30.4 to 39.1 lb-ft).
- After installing the seat, slide the seat back and forth to check that the under-seat wire harnesses are not sagged or pulled taut.

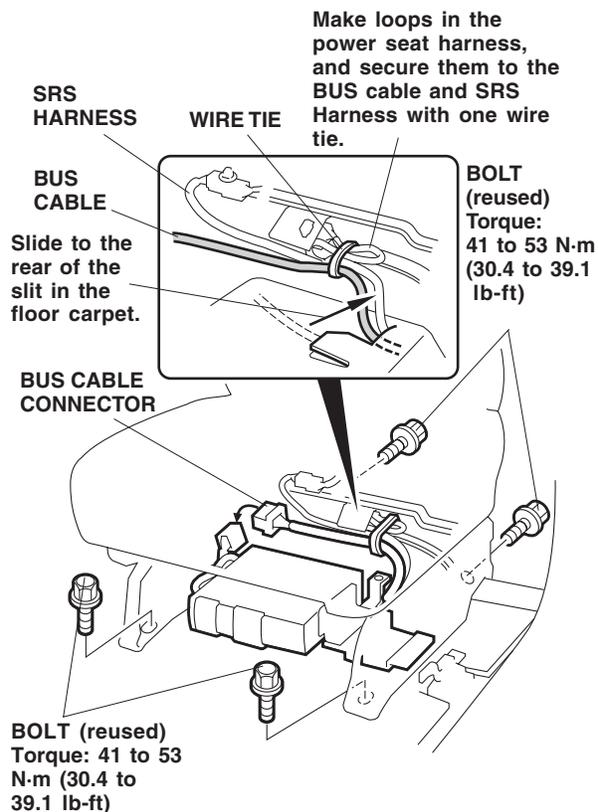

28. Check that all wire harnesses are routed properly and all connectors are plugged in.
29. Reconnect the negative cable to the battery.
30. Reset the clock and the radio station presets.
31. Check the operation of the CD changer as described in the Owner's Manual supplied.
32. Check the operation of the accessory socket or cigarette lighter.
33. Reinstall all removed parts. Be sure that all retaining clips and tabs are securely fastened.
34. Put the CD changer Owner's Manual and the shipping clips (removed in step 20) in the glove box for your customer.

NOTE: Whenever the battery is disconnected, the driver's window AUTO function is disabled.

35. Start the engine. Push down on the driver's window switch until the window is fully open.
36. Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
37. Check the operation of the driver's window AUTO function.