



INSTALLATION INSTRUCTIONS

Accessory

HONDA MUSIC LINK

Application

2006 CR-V

Publications No.

All 31177


Issue Date

OCT 2005


PARTS LIST

Attachment Kit
P/N 08A28-1H1-800

4 Cushion tapes

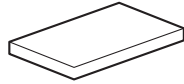


Holder cushion

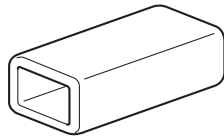


Grommet



8 Wire ties

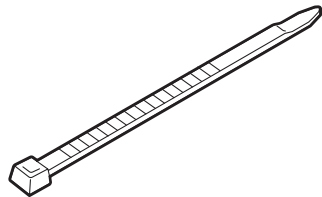


2 Long wire ties

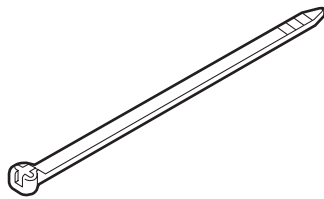


Music Link Adapter Kit P/N 08A28-1H1-100


Music Link adapter unit

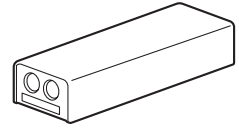


Bus cable

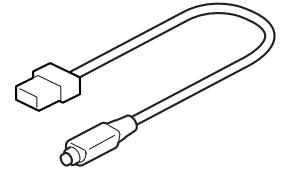


Music Link harness

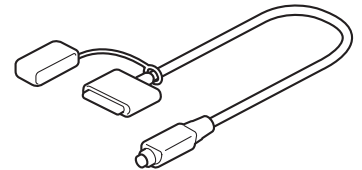

CD-ROM

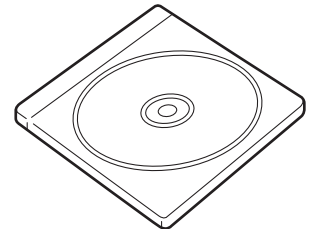


Owner's manual

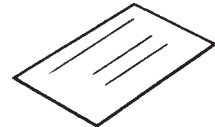

BUS Cable 2 Port (sold separately) P/N 08A31-0F1-000


BUS cable 2 port

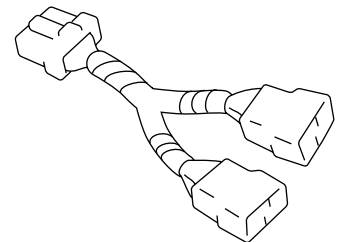

TOOL AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Diagonal cutters
Scissors
Ratchet
10 mm Socket
10 mm Combination wrenches
Drill motor
Drill bit (3 mm)
Hole saw (20 mm)
Pushpin
Eye protection
Isopropyl alcohol
Electrical tape

Illustration of the Music Link System Installed on the vehicle

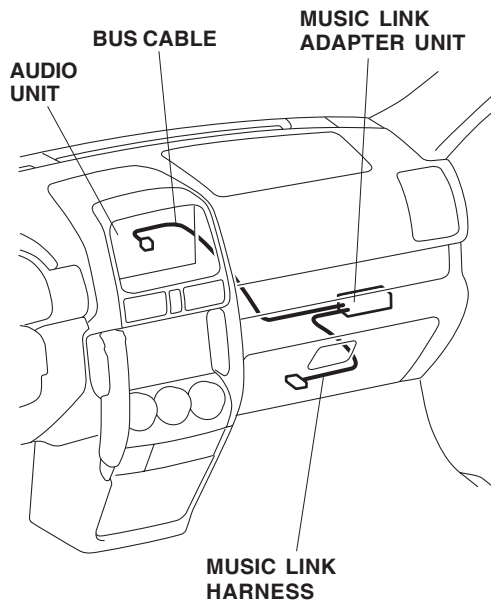


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.


3. Remove the center panel (release the two self-tapping screws and six clips, unplug the vehicle connector).

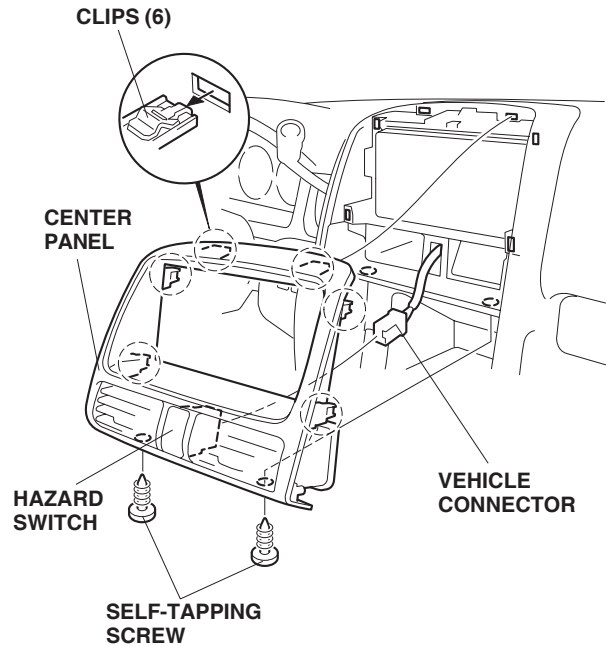


4. Remove the audio unit (four screws, pull the audio unit out toward you, and unplugging the vehicle connector and the antenna lead).

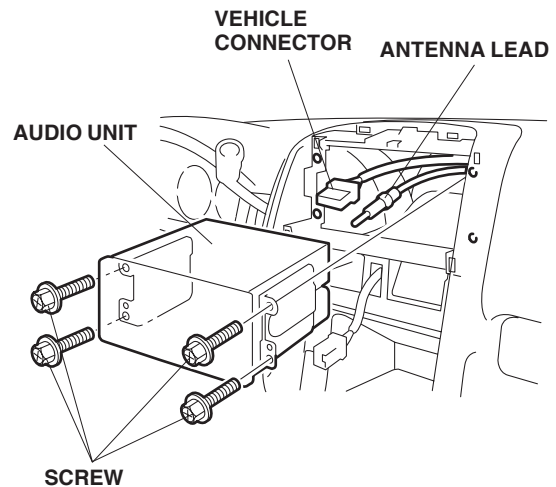


- Remove the passenger's dashboard under cover (release the three clips and two pins).

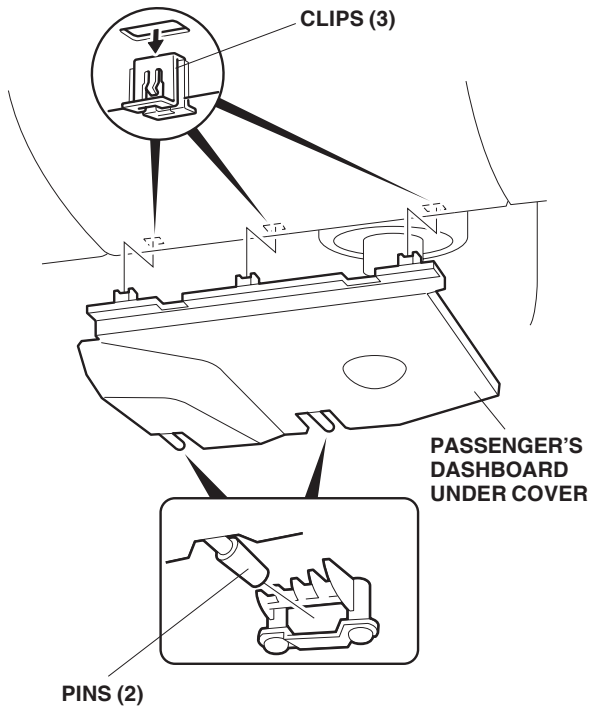

- Open the glove box. Release the right and left stoppers (two tabs for each stopper).
- Remove the two screws from the bottom of the glove box, and remove the glove box.

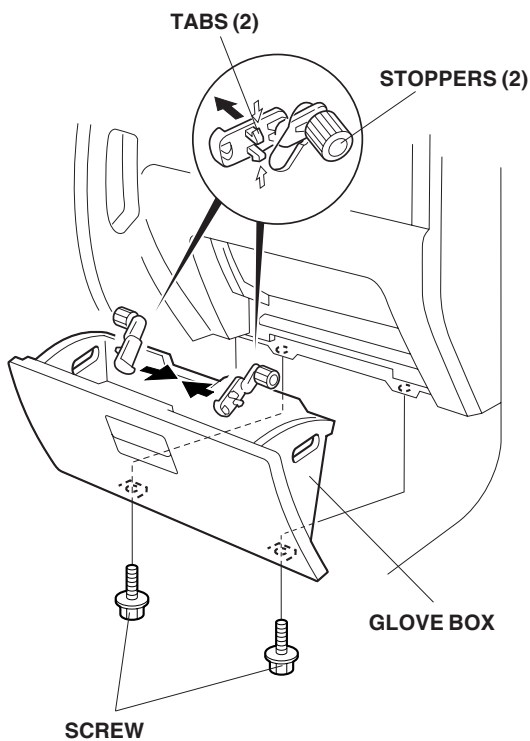


- Route the DIN connector end of the bus cable from the audio unit opening to the glove box opening.

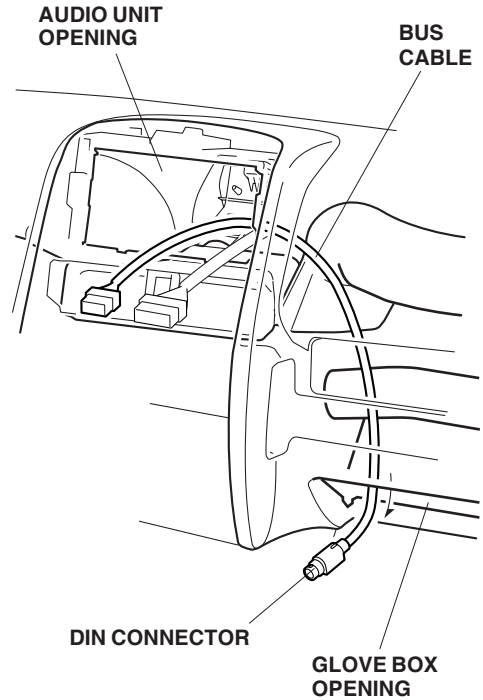

- Secure the bus cable.


Without the 14-Pin Connector

- Align the bus cable 14-pin connector with the vehicle 20-pin connector, and secure bus cable to the vehicle harness with a wire tie.

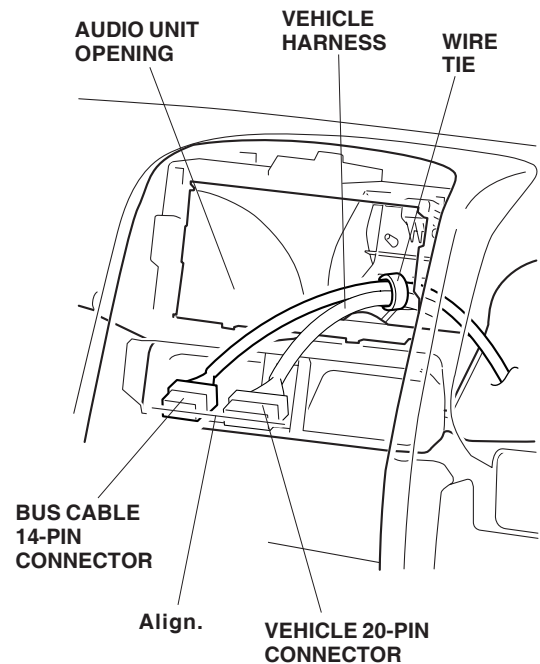


With the Vehicle 14-Pin Connector or CD Changer


1. Connect the bus cable 14-pin connector and vehicle 14-pin connector or CD changer bus cable 14-pin connector to the bus cable 2 port 14-pin connectors.
2. Attach two cushion tapes to the bus cable 2 port 14-pin connectors as shown.

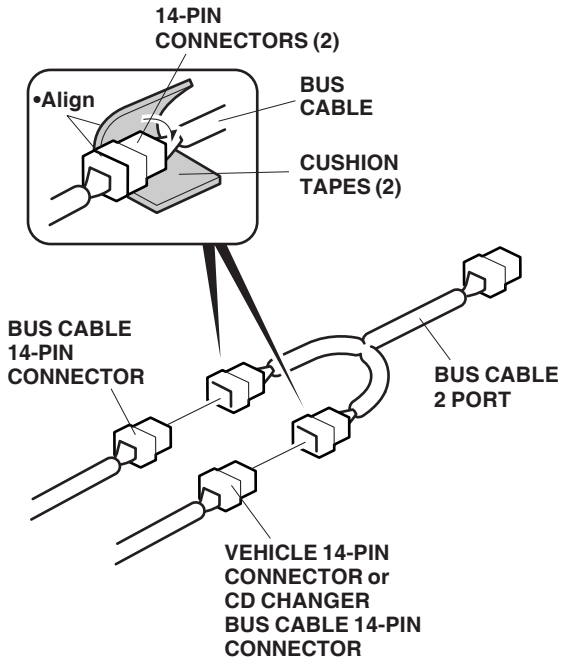


3. Bundle the vehicle harness or CD changer bus cable with two wire ties as shown.
4. Align the bus cable 2 port 14-pin connector with vehicle 20-pin connector, and secure the bus cable to the vehicle harness with a wire tie.

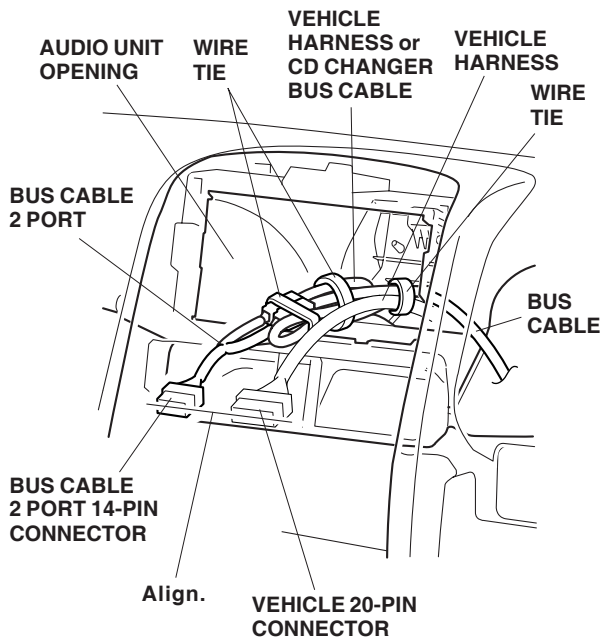


10. Put a mark with a felt-tip pen on the illustrated location of the Music Link harness.
11. Cut one cushion tape in quarters, and wrap the cut cushion tapes to the illustrated location of the Music Link harness.

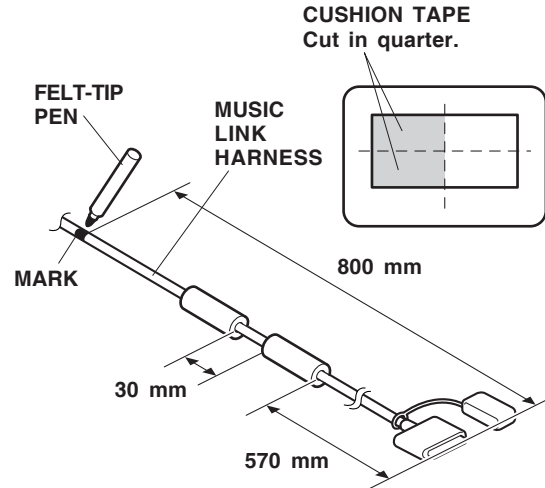


12. To prevent damage, wrap electrical tape around the drill bit at a point about 30 mm away from the tip. While wearing eye protection, drill a 20 mm hole through the marked location. Remove all burrs from the drilled hole.

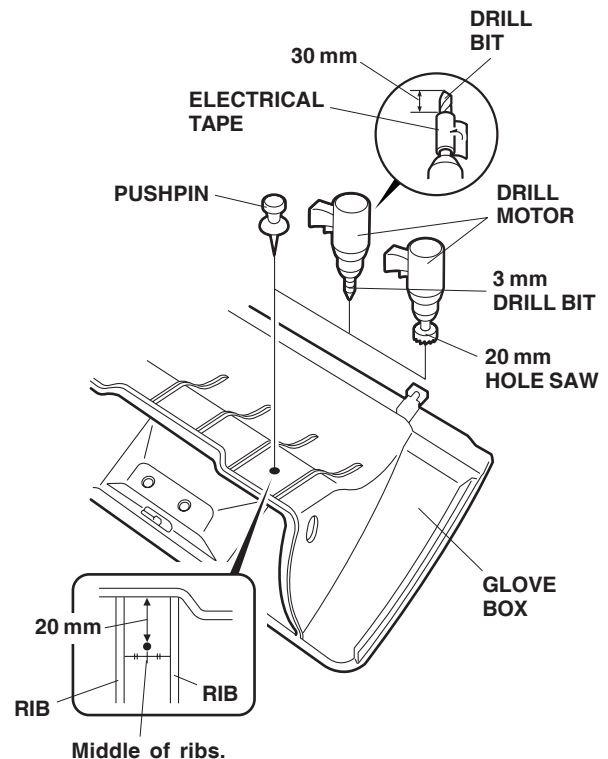


13. Route the Music Link harness DIN connector into the 20 mm hole in the direction shown.

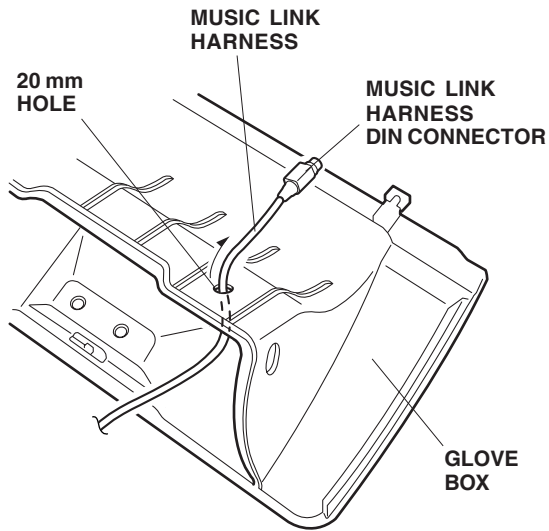


14. Cut the grommet as shown. Attach the grommet to the Music Link harness, and seat the grommet into the 20 mm hole.

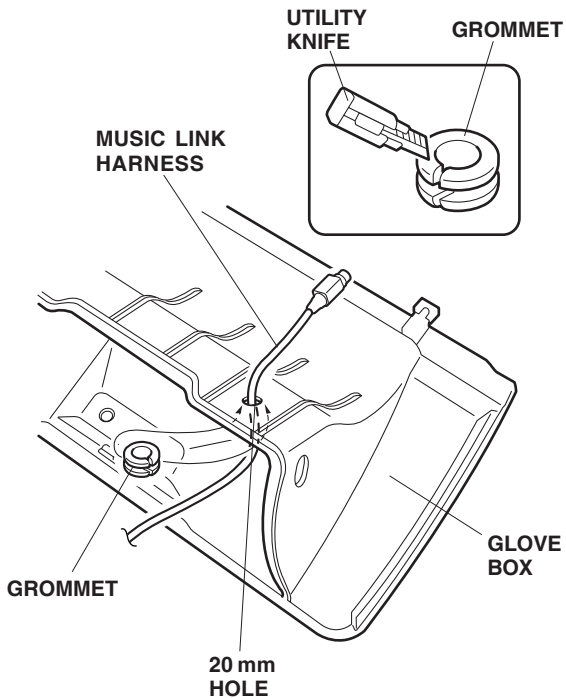


15. Clean the vehicle pipe with isopropyl alcohol where the cushion tape will attach. Attach a cushion tape to the vehicle pipe.

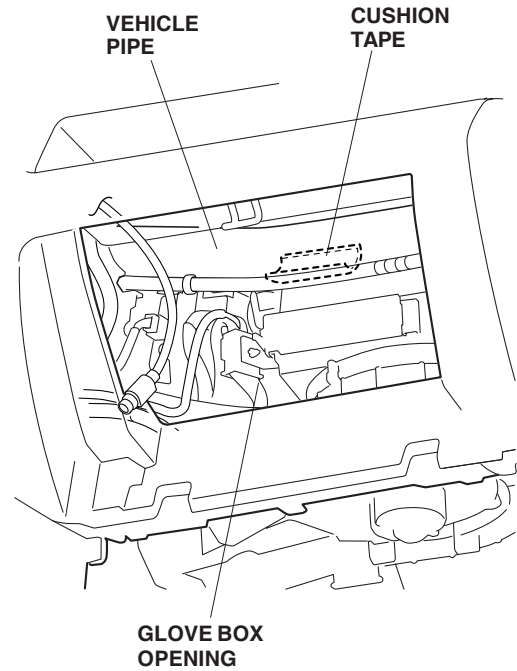


16. Insert the Music Link adapter unit into the unit cushion.

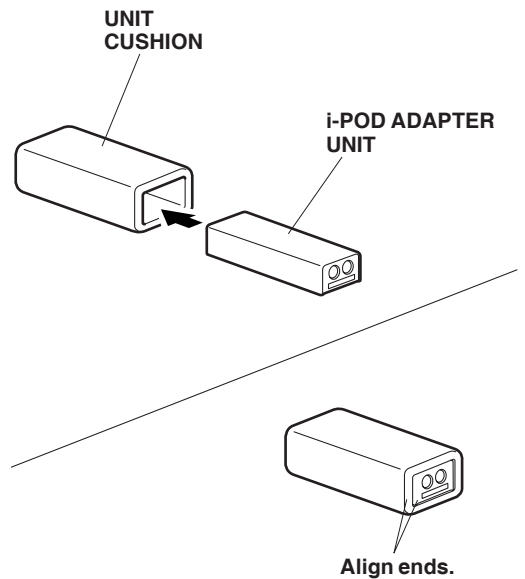


- Route the Music Link harness through the glove box opening and connect the Music Link harness DIN connector (WHITE) to the Music Link adapter assembly. Note the location of the connector and the terminals.
- Secure the Music Link harness to the vehicle harness with a wire tie beside the vehicle clip. (Align the mark scribed in the step 10 with the wire tie as shown.)

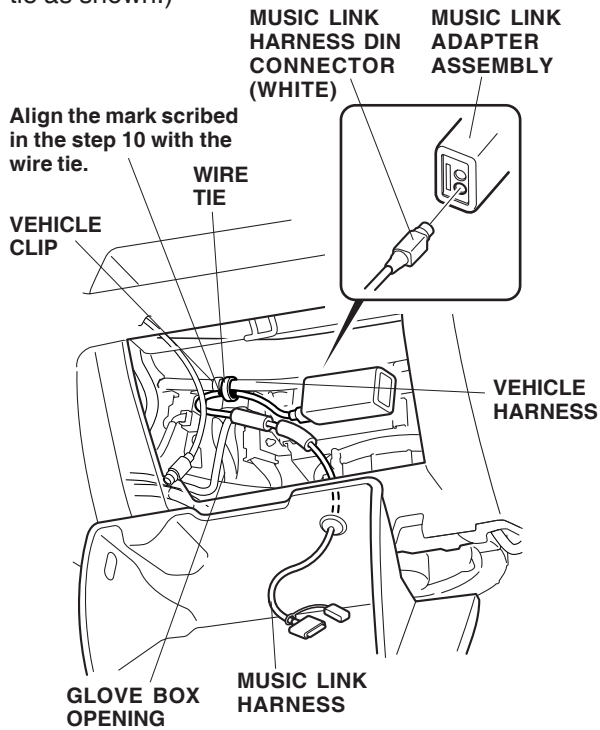


- Temporarily secure the Music Link adapter unit onto the vehicle pipe with two long wire ties.

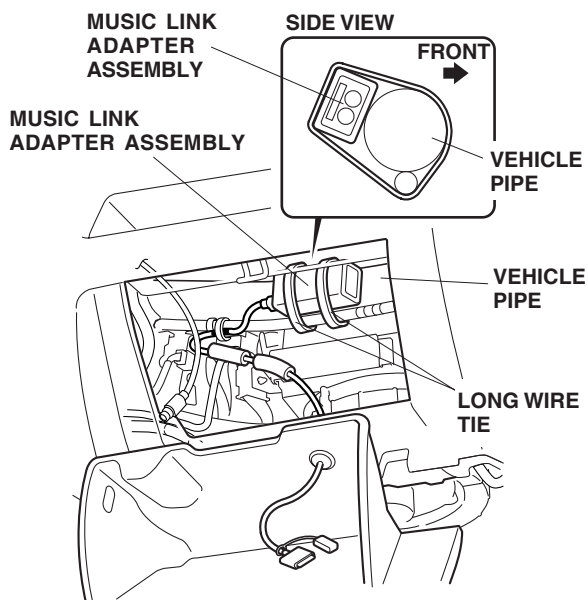


- Bundle up the excess Music Link harness, and temporarily secure it to the vehicle harness and vehicle pipe with a wire tie and two long wire ties temporarily installed in step 19.

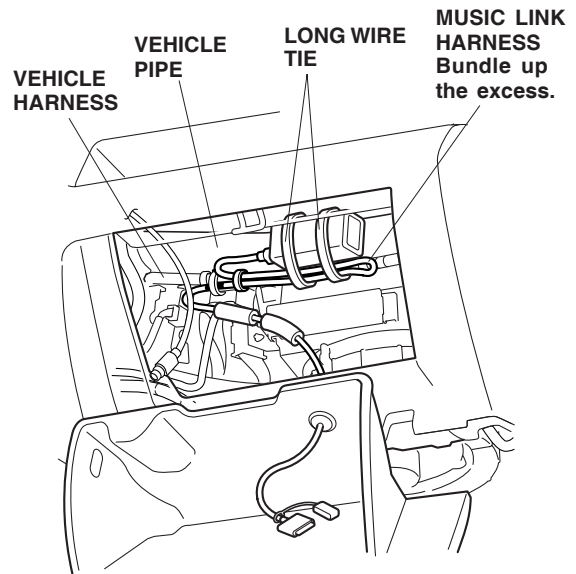


- Route the bus cable through the glove box opening and connect the bus cable DIN connector (BLACK) to the Music Link adapter assembly. Note the location of the connector and the terminals.

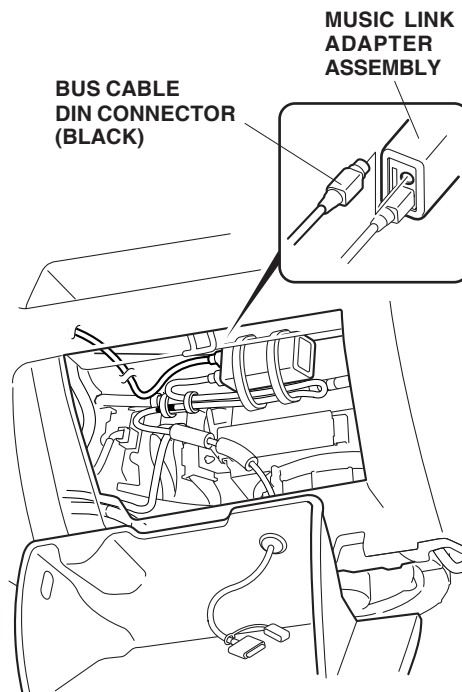


22. Bundle up the excess bus cable, and secure them to the vehicle harness and vehicle pipe with a wire tie, a wire tie and two wire ties temporarily installed in step 20.

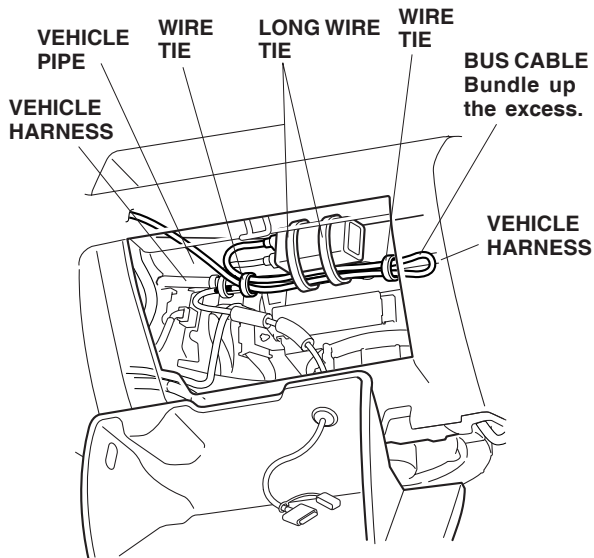

23. Reinstall the glove box.

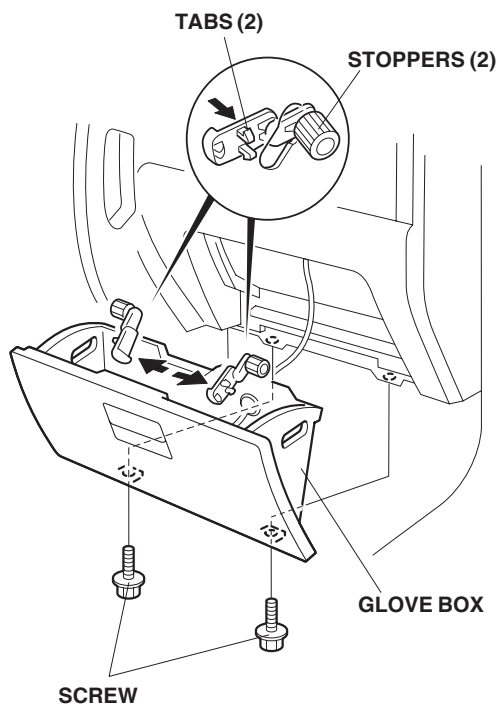

24. Connect the vehicle connectors and bus cable 14-pin connector (or bus cable 2 port 14-pin connector) to the audio unit, and reinstall the audio unit.

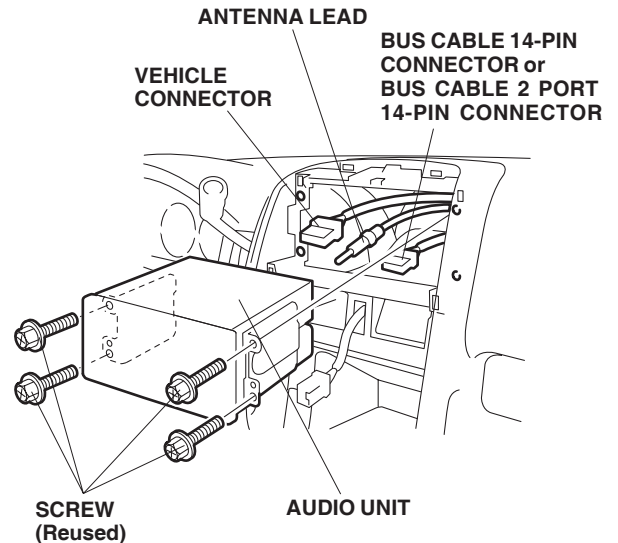

25. Check that all wire harnesses are routed properly and all connectors are plugged in.
26. Reconnect the negative cable to the battery.
27. Enter the customer's radio anti-theft code, and reset the radio station presets and the clock.
28. Reinstall all removed parts.
29. Turn the power of the audio unit ON. Check that "No Disc" is shown on the display with the mode being at the CD changer mode (recognized as CD changer 4).

NOTE: Whenever the battery is disconnected, the driver's AUTO function is disable.

30. Start the engine. Push down on the driver's window switch until the window is fully open.
31. Pull up on the driver's window switch fully to close the window completely, then hold the switch for 2 seconds or more.
32. Test the window AUTO function.