
⊢ (H) HONDA –	Accessory	Application	Publications No.
INSTALLATION	BASS SPEAKER SYSTEM		All 30316
INSTRUCTIONS	ATTACHMENT	2006 CIVIC HYBRID	Issue Date SEP 2005
			SEP 2005
PARTS LIST	Cu	shion tape	
Bass Speaker System Attachm (sold separately) P/N 08B54-SNA-100	ent Kit		
Bass speaker system wire harnes	Fu	se seal	
	Ov	al cushion	
Right bracket	Us	er's information	
Left bracket			
2 Washer-bolts, 6 x 16 mm		ss Speaker System Kit (sold N 08A54-SNA-100	separately)
Clip nut	28	3ass speakers	
10 Wire ties	Ba	ss unit	
5 EPT sealers			A A A A A A A A A A A A A A A A A A A

TOOLS REQUIRED

Phillips screwdriver Flat-tip screwdriver 10 mm and 8 mm wrenches Shop towel Isopropyl alcohol

Illustration of the Bass Speaker System Installed on the Vehicle

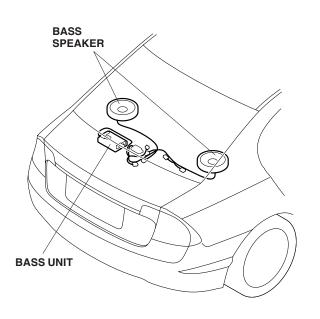


INSTALLATION


Customer information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

- 1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
- 2. Disconnect the negative cable from the battery.


3. Remove the trunk mat.

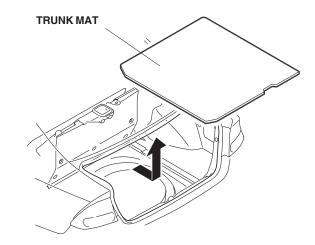

4. Remove the front trunk panel (six clips).

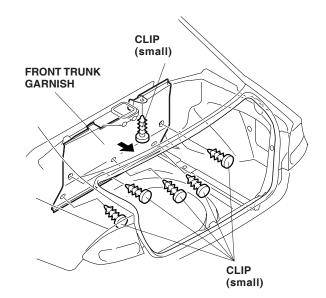


5. Remove the air intake duct (two washer-bolts), then move the air intake duct up and down in the direction shown.

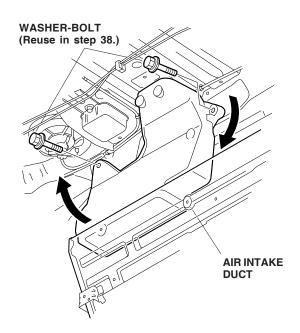


Installing the Bass Unit

6. Get the right bracket and one cushion tape. Confirm where the cushion tapes will attach onto the right bracket, then clean with isopropyl alcohol on a shop towel.

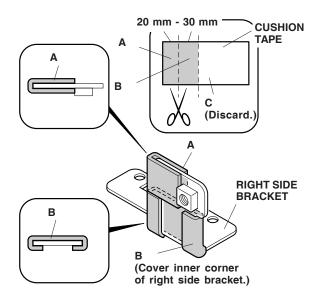


- 7. Using scissors, cut a cushion tape into three pieces A, B and C. Discard piece C.
- 8. Align A and B with the right bracket as shown. Be sure to cover the inner corner of the right side bracket with B.


- 9. Clean the back of the bass unit with isopropyl alcohol on a shop towel. Be sure to clean the outer edge on the back of the bass unit as well.
- 10. Align the inner circle of the oval cushion with the hollow edge on the back of the bass unit, then attach the oval cushion to the bass unit.

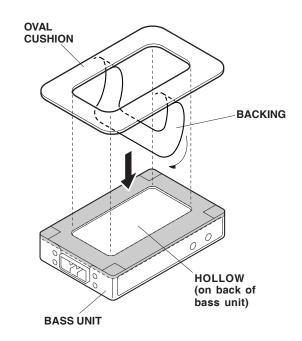


11. Fold the excess oval cushion down around the bass unit.

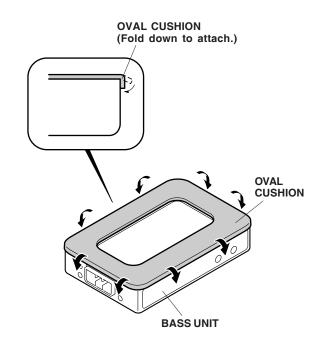

12. Remove the four screws shown from the bass unit, then secure the right and left brackets to the bass unit with the four screws.

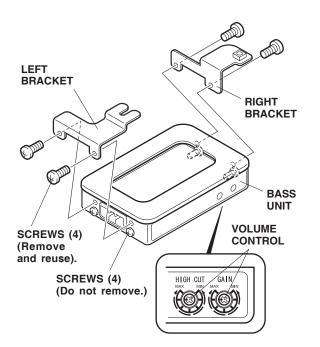


- 13. Adjust HIGH CUT and GAIN on the bass unit to the nine o'clock position.
 - NOTE: The adjustment setting is predicated on the audio/navigation unit as factory-set. (See step 45 and the user's information.)
- 14. Open the trunk lid. Slide one spring nut into the square hole in the rear shelf.

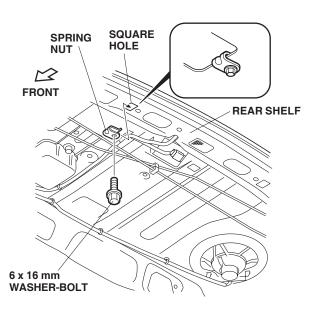


15. Loosely install a 6 x 16 mm washer-bolt to the spring nut.

16. Route the bass speaker system wire harness 14-pin connector through the rear shelf area.

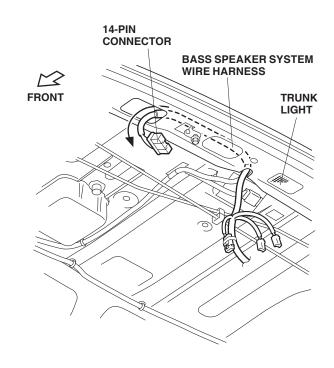


17. Place the edge of the right bracket into the oval hole, and raise the other end to the square hole with the spring nut with the 6 x 16 mm washerbolt.

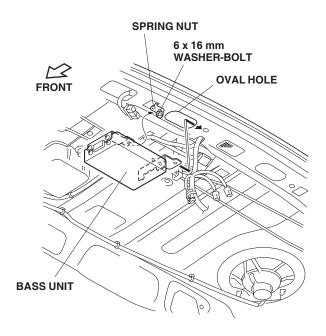

18. Thread the other 6 x 16 mm bolt through the rear shelf and into the threaded bracket.


19. Tighten the two 6 x 16 mm washer-bolts.

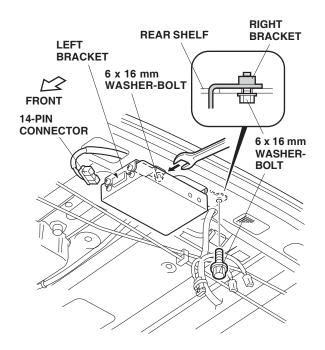

20. Plug the bass speaker system wire harness 14-pin connector into the bass unit.


Routing the Bass Speaker System Cable

21. Remove the tape wrapped around the trunk light harness to free the harness.

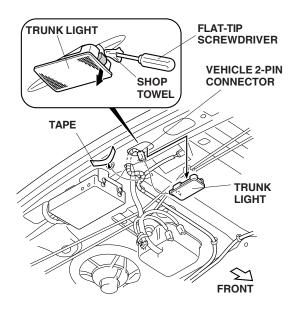


22. Using a flat-tip screwdriver wrapped with a shop towel, remove the trunk light (two tabs), and unplug the vehicle 2-pin connector.

- 23. Put the bass speaker system wire harness 2-pin connector (blue) through the rear shelf as shown, then plug it into the trunk light connector.
- 24. Plug the vehicle 2-pin connector into the bass speaker system wire harness 2-pin connector (blue).

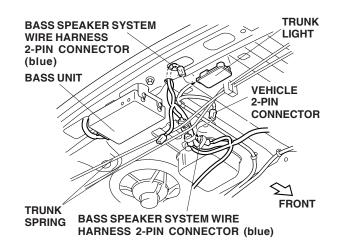


- 25. Route the bass speaker system wire harness over the trunk springs.
- 26. Unplug the vehicle 2-pin connector from the highmount brake light, and plug the 2-pin connector from the bass speaker system wire harness into the high-mount brake light.

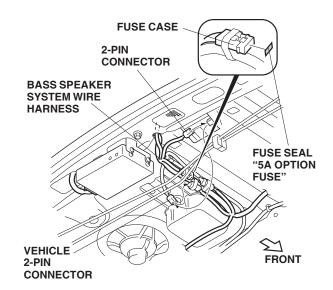

- 27. Route the vehicle 2-pin connector over the trunk springs, and plug it into the bass speaker system wire harness 2-pin connector.
- 28. Attach the "5A OPTION FUSE" label to the fuse case taped to the bass speaker system wire harness.


29. Remove the two pieces of tape that secure the left speaker wire.

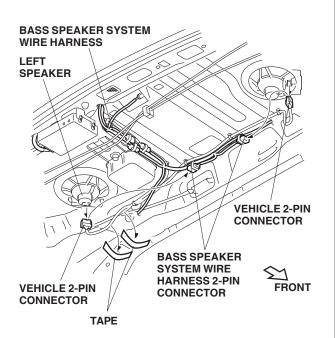


30. Unplug the right and left speaker wires from each speaker, and plug the speaker wire 2-pin connectors (white) into the bass speaker system wire harness 2-pin connectors.

Installing the Bass Speakers


31. Insert the flat-tip screwdriver wrapped with a shop towel into the hole in the rear shelf, and remove the right speaker grille (one clip, seven tabs). Remove the left speaker grille the same way.

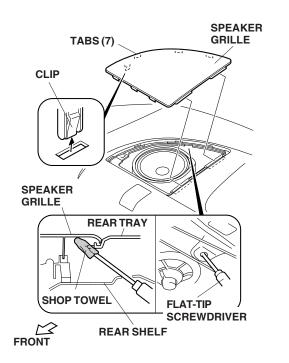


32. Remove the right and left speakers (one screw for each speaker).

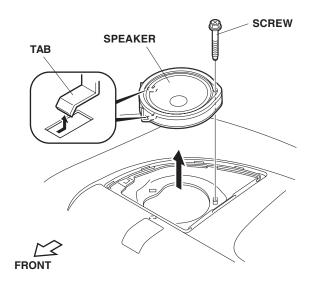

33. Install the right and left bass speakers using the screws removed in step 32.

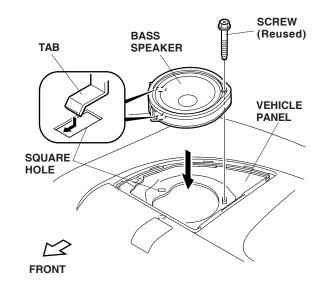


34. Plug the bass speaker system wire harness 2-pin connectors into the right and left bass speakers.

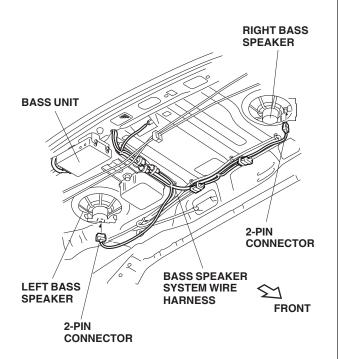


Securing the Bass Speaker System Wire Harness


35. Using three wire ties, secure the bass speaker system wire harness to the vehicle harness in the areas shown.

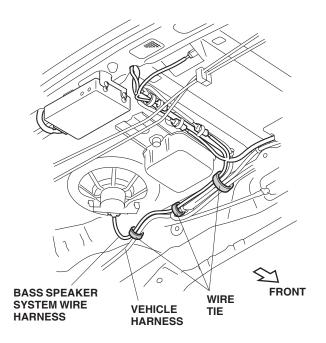


36. Wrap an EPT sealer around each 2-pin connector in the area shown, then secure the bass speaker system wire harness to the vehicle harness with two wire ties over the EPT sealers.

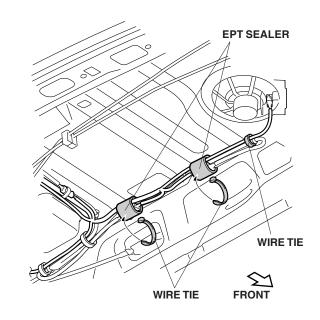

- 37. Using an additional wire tie, secure the bass speaker system wire harness to the vehicle harness in the area shown.
- 38. Using the washer-bolts removed in step 5, reinstall the air intake duct.

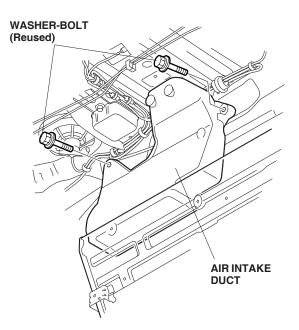

39. Wrap one EPT sealer around each connector in the areas shown, then secure the bass speaker system wire harness to the vehicle harness using two wire ties over the EPT sealers.

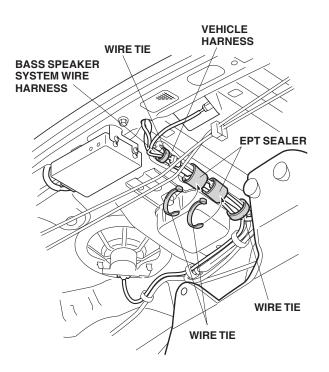

- 40. Using two wire ties, secure the bass speaker system wire harness to the vehicle harness in the areas shown.
- 41. Make sure that the bass speaker system wire harness does not interfere with the trunk springs during closing and opening of the trunk lid.

- 42. Check that all wire harnesses are routed properly and all connectors are plugged in.
- 43. Reconnect the negative cable to the battery.
- 44. Reinstall all removed parts.
- 45. Enter the customer's radio anti-theft code, and reset the radio station presets
- 46. Be sure to set all the volume control adjustments on the vehicle audio/navigation unit, such as BASS, TREBLE, FAD, BALANCE and so on, as the factory-set.
- 47. If the IMA battery level gauge (BAT) displays zero segments, start the engine, and hold it between 3,500 and 4,000 rpm (in Park or neutral) until the IMA level gauge (BAT) displays at least three segments.
- 48. Because the battery was disconnected, you need to enter the Honda multi-matic feedback signal as described in the service manual.

NOTE: When the battery is disconnected, the driver's window AUTO function is disabled.

- 49. Start the engine. Push down on the driver's window switch until the window is fully open.
- 50. Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
- 51. Lower and raise the driver's window to check operation of the driver's window AUTO function.