



INSTALLATION INSTRUCTIONS

Accessory

HANDSFREELINK®

Application

2008 ODYSSEY

Publications No.


All 38137

Issue Date


NOV 2007

PARTS LIST


HFL Attachment Kit
P/N 08E02-SHJ-100B
HFL trim

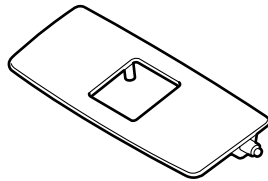


HFL bracket

 


HFL harness

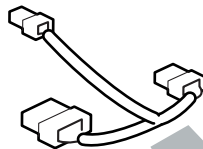


HFL subharness

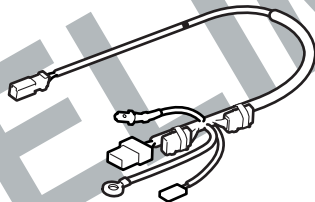


2 Double-sided tapes

 


HFL retainer

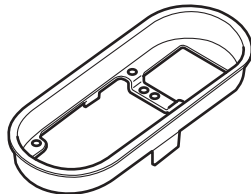


Template

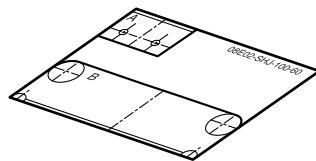


Fuse label

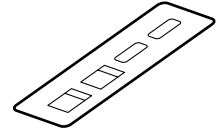


Fuse (2 A)

 

6 EPT sealers

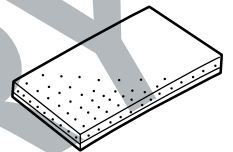


8 Wire ties

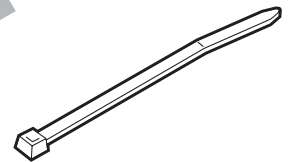

4 Self-tapping screws, 3 x 10 mm



 2 Washer screws, 4 x 12 mm




Self-tapping screw



Bushing



 Ground bolt




Rubber bumper




**Bluetooth® HandsFreeLink Kit
P/N 08E00-E10-100**

Switch

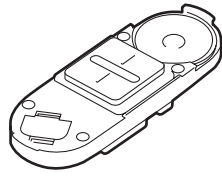


Control unit

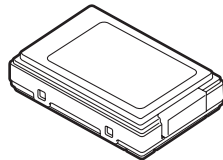

TOOL AND SUPPLIES REQUIRED

- #2 Phillips screwdriver
- 10 mm Combination wrench
- 10 mm and 14 mm Sockets
- Pushpin
- Ratchet
- 3 mm, 4.5 mm, 6 mm, 9 mm, and 10 mm Drill bits
- Eye protection (face shield, safety goggles, etc.)
- File
- Diagonal cutters
- Scissors
- Masking tape
- Tape measure
- Cardboard
- Isopropyl alcohol
- Shop towel
- 20 mm Holesaw
- Drill
- Utility knife
- T15 Torx bit
- Felt-tip pen

Illustration of the HFL Installed on the Vehicle

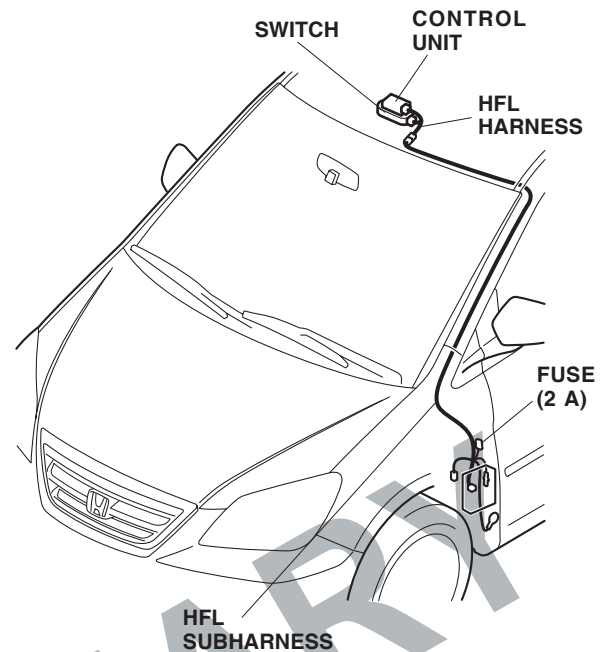


7518071E

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


1. Make sure you have the anti-theft code for the radio, then write down the radio station presets.
2. Disconnect the negative cable from the battery.

3. Disengage eight retaining tabs, and remove the left and right lenses from the roof console.

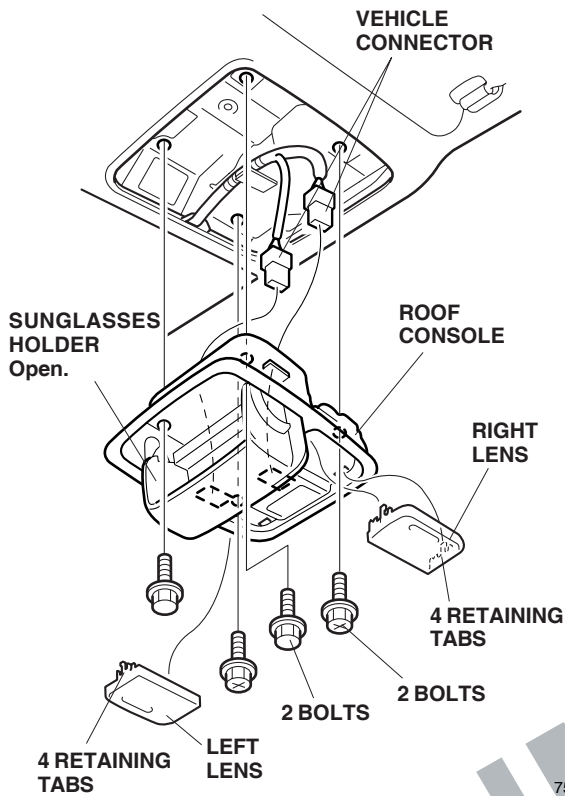


4. Open the sunglasses holder.
5. Remove four bolts, and lower the roof console.
6. Disconnect the two vehicle connectors, and remove the roof console.


7. Using a flat-tip screwdriver, push the hook and turn the holder. Remove the holder.

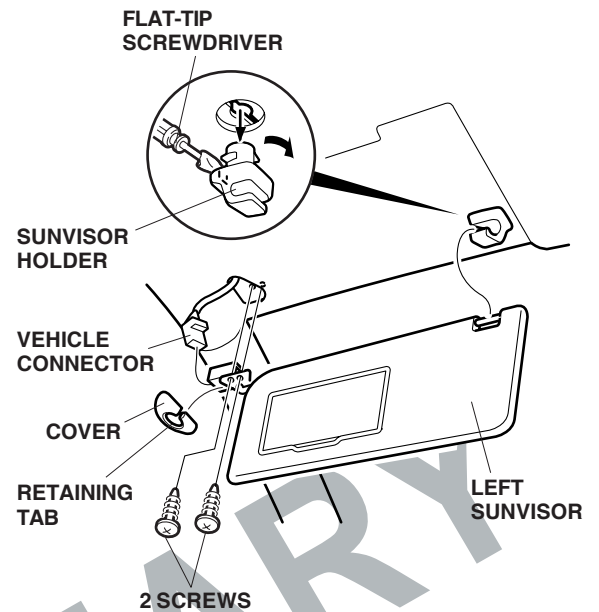


8. Disengage two screws, and remove the left sunvisor.
9. Pull away the weatherstrip from the left front A-pillar trim. Release the side curtain airbag clip, and remove the left front A-pillar (two clips).

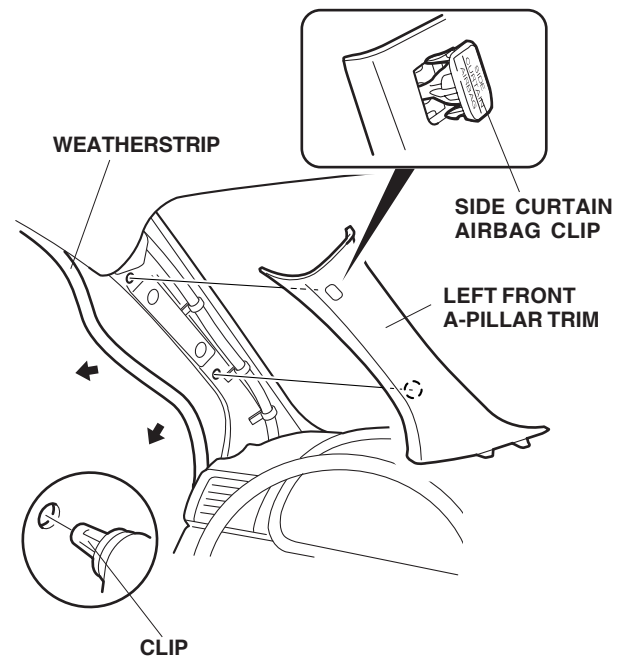


10. Remove the left front door sill trim (three clips).

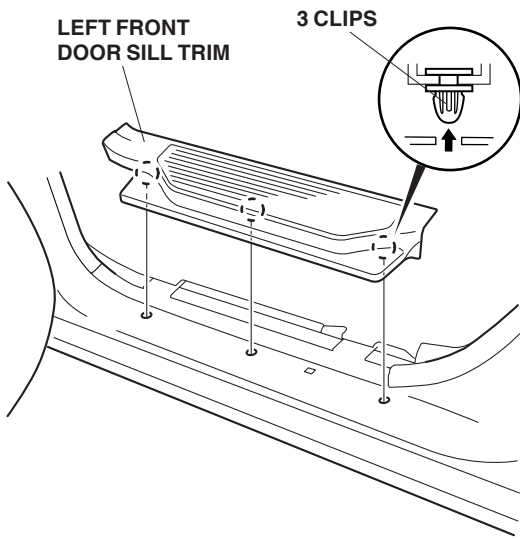


11. Pull away the weatherstrip from the left kick panel. Remove the left kick panel (three clips).

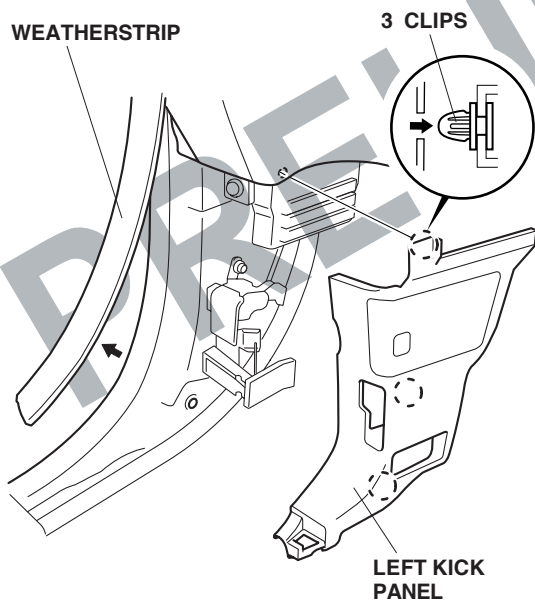


12. Attach the fuse label (2 A) to the fuse case of the HFL subharness.

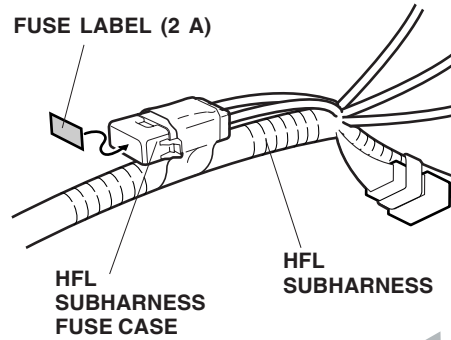

13. Plug the HFL subharness 6-pin connector into the 6-pin opening in the fuse box.

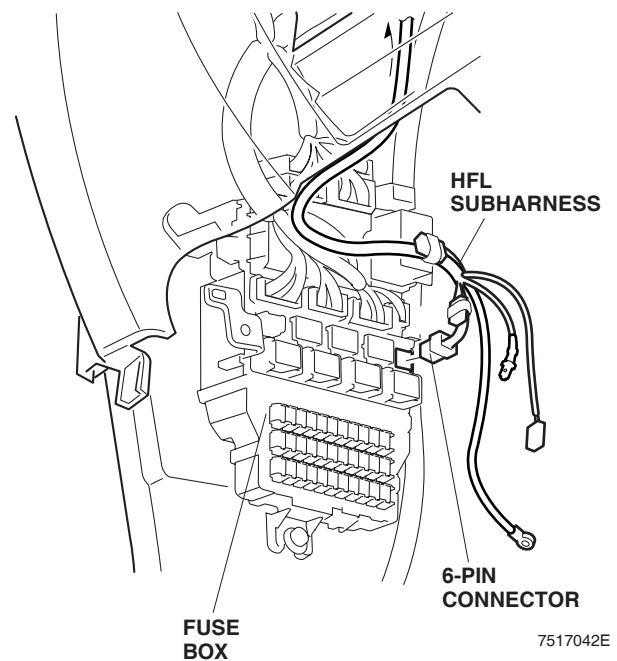


NOTE: If another accessory is already plugged into the 6-pin connector, remove the dummy connector from the 6-pin connector taped to the HFL subharness. Plug the 6-pin connector from the other accessory harness into the 6-pin connector from the HFL subharness you just unplugged, and plug the HFL subharness into the fuse box.

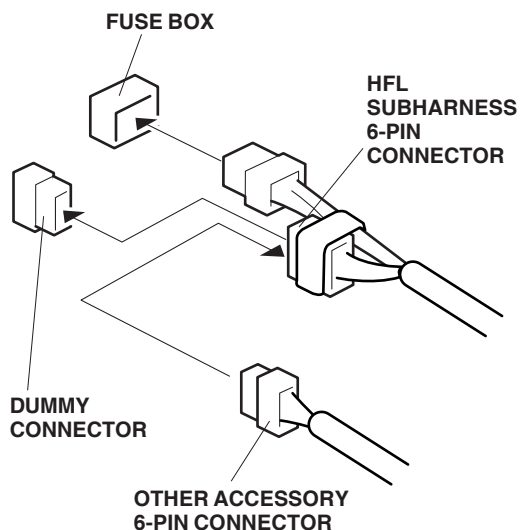

4319060B


14. Route the HFL subharness to the left front pillar trim opening.

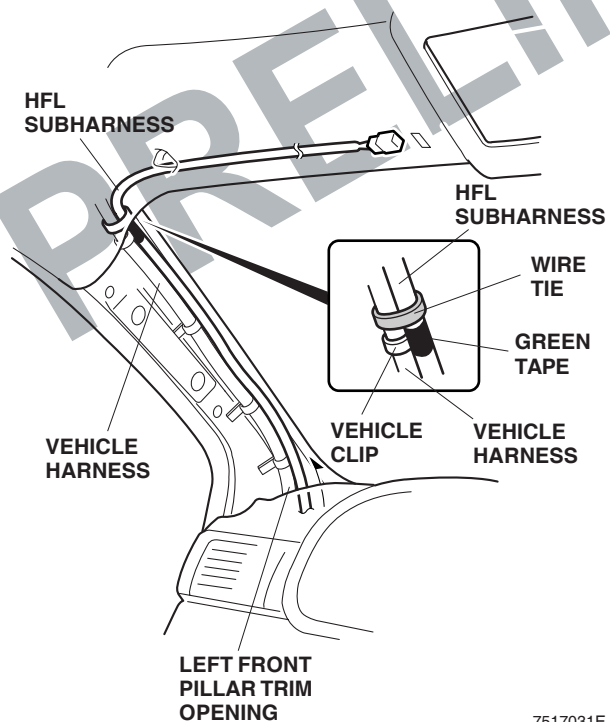

7517031E


15. Route the HFL subharness and secure it to the vehicle harness with a wire tie above the vehicle clip as shown.

16. Remove the vehicle bolt, and install the ground bolt with the HFL subharness ground terminal as shown.

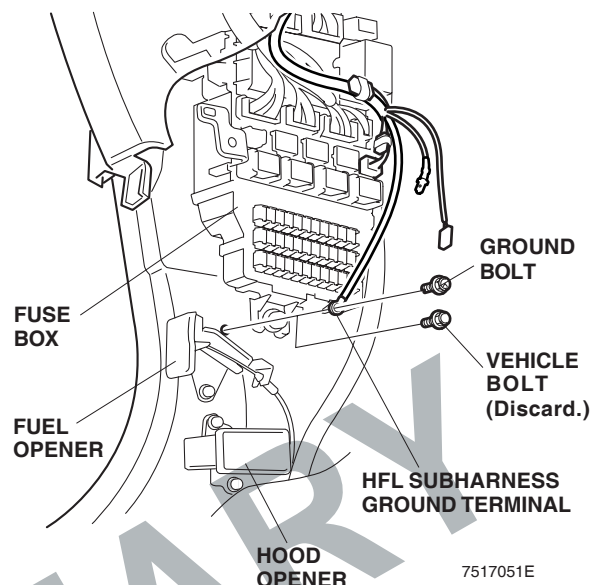

7517051E

17. Disconnect the vehicle harness 1-pin connector, and connect it to the HFL subharness 1-pin connector.

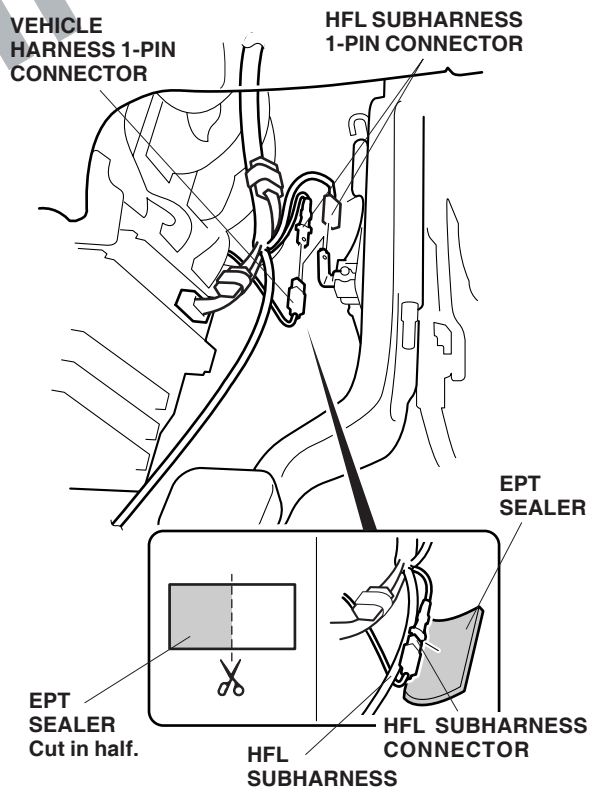


7517072E

18. Connect the HFL subharness 1-pin connector to the vehicle 1-pin connector.


19. Wrap the cut half of the EPT sealer around the HFL subharness connector.

20. Secure the HFL subharness to the vehicle harness with a wire tie.

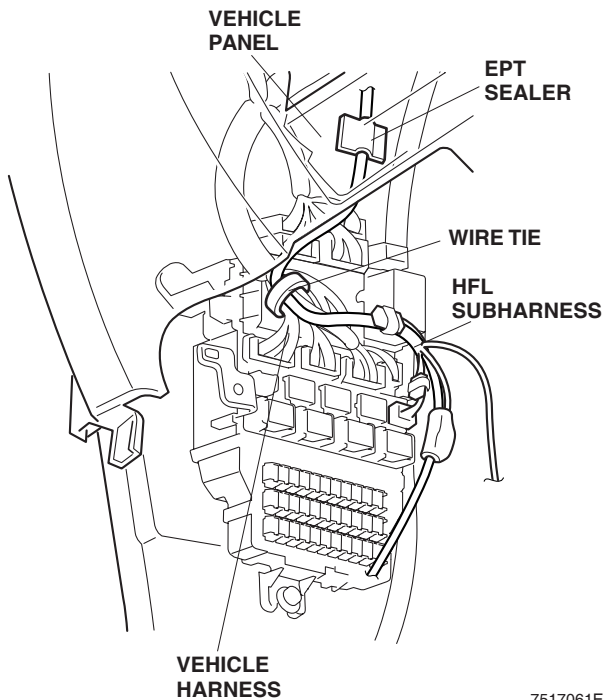


7517061E

21. Using isopropyl alcohol on a shop towel, clean the area where the EPT sealer will attach. Attach an EPT sealer to secure the HFL subharness to the vehicle panel.
22. Secure the HFL subharness to the vehicle harness with three wire ties.

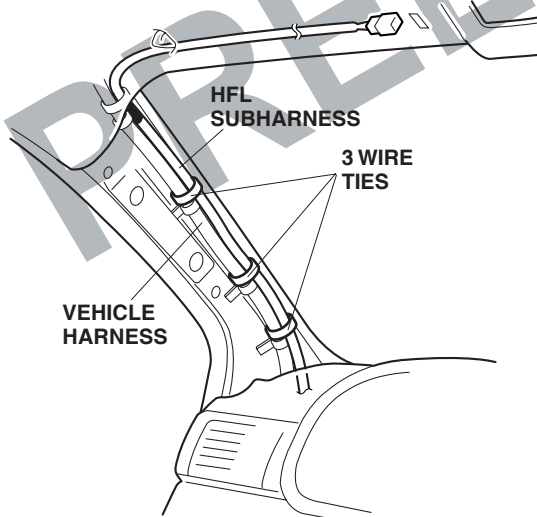


7517080E

23. Cut the template into template A and template B.

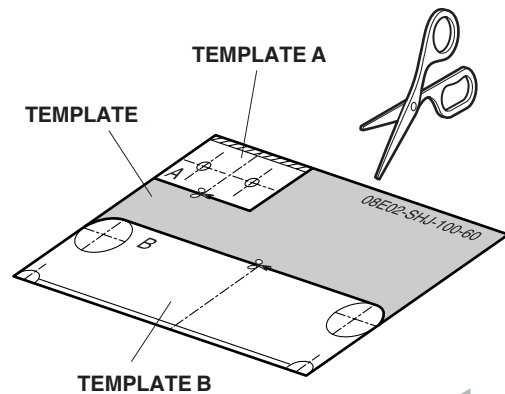

7517091E


24. Remove the damper (two self-tapping screws).

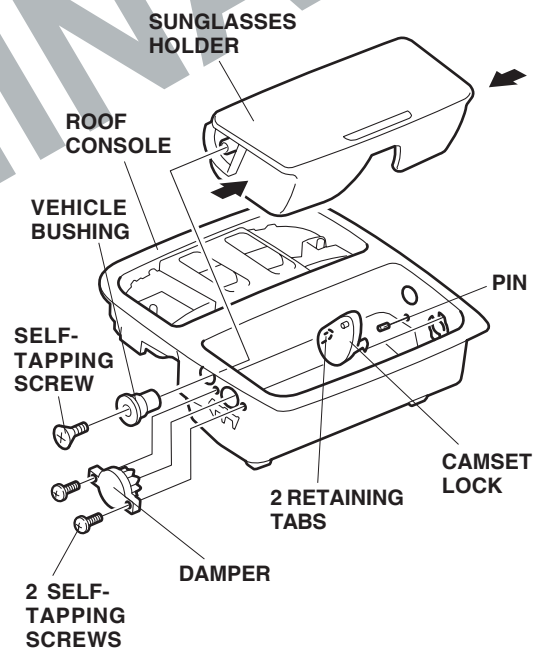


7517101E

25. Remove the sunglasses holder (self-tapping screw and vehicle bushings).
26. Remove the pin and the camset lock (two retaining tabs).


27. Remove the console light from the roof console (four retaining tabs).

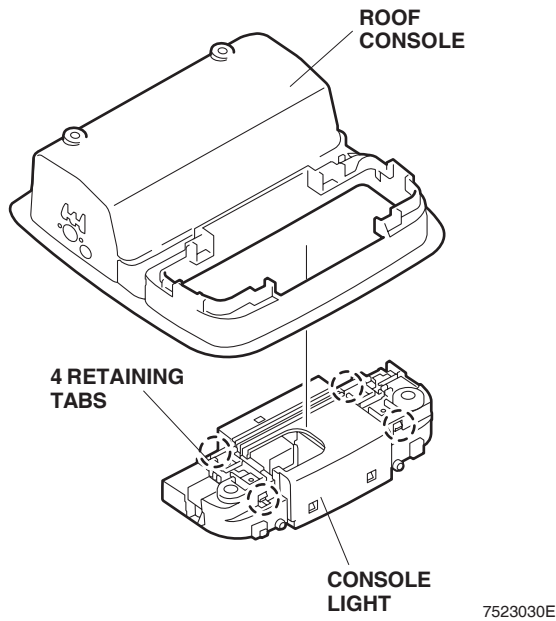


28. Enlarge the hole on the roof console with a 9 mm drill bit.

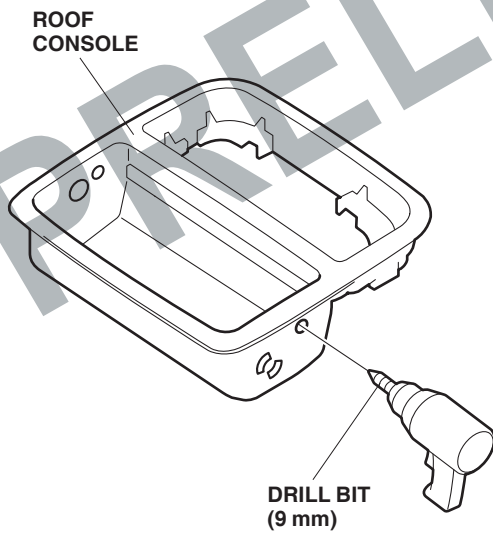

29. Attach masking tape to the roof console as shown.

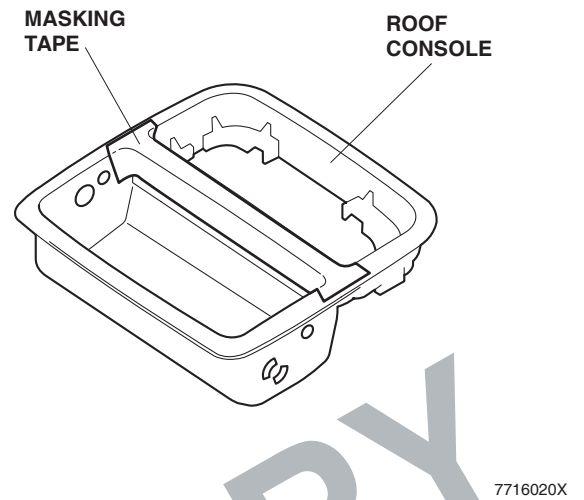


30. Attach template A with masking tape to the roof console at the indicated position.

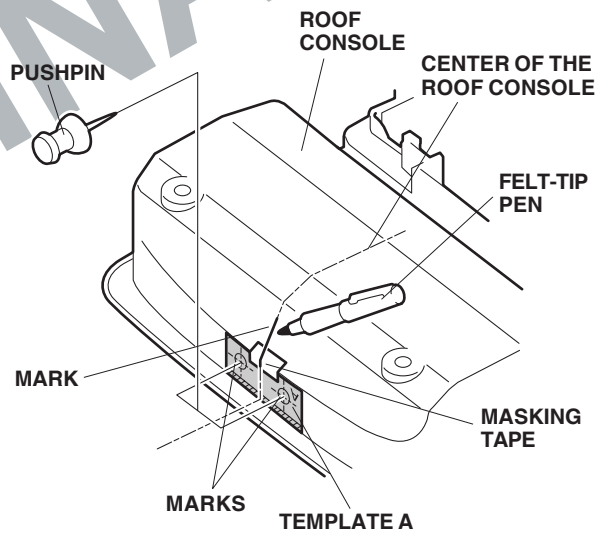


31. Using a felt-tip pen, mark the center of the roof console as shown.
32. Use a pushpin to mark the roof console at two locations according to template A.
33. Remove template A.

34. Drill 4.5 mm holes at the two locations marked on the roof console in step 32. After drilling, remove any burrs.

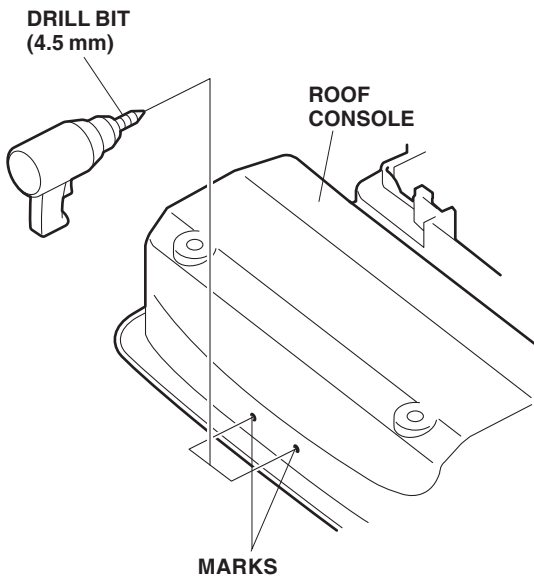

7517120E


35. Attach template B with masking tape on the roof console at the indicated position.

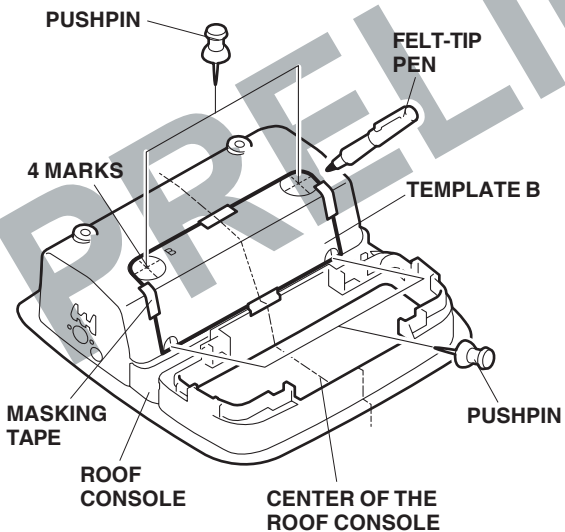

7517131E

36. Use a pushpin to mark the roof console at four locations according to template B.
37. Using a felt-tip pen, mark the roof console along template B.
38. Remove template B.


39. Drill a 3 mm hole at the four locations marked on the roof console in step 36.

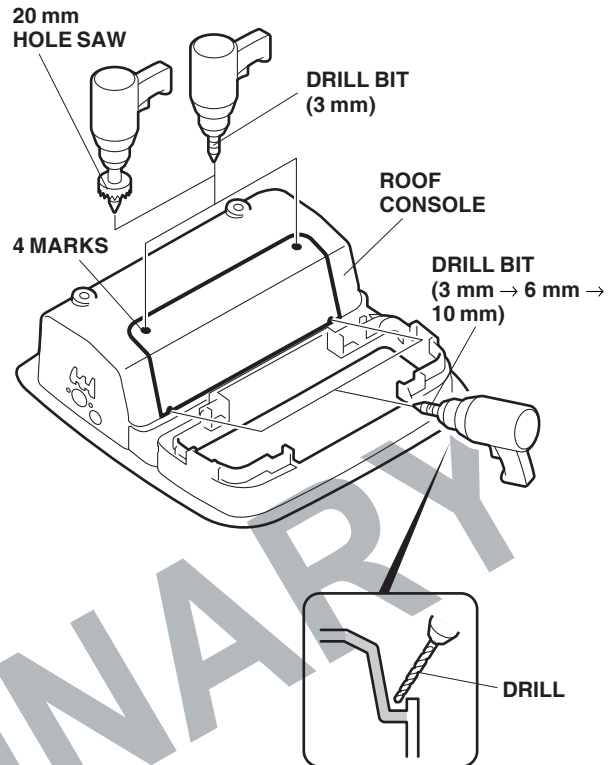

7517141E


40. Enlarge the two 3 mm holes drilled in step 39 with a 6 mm drill bit and a 10 mm drill bit as shown.
41. Enlarge the other two 3 mm holes drilled in step 39 with a 20 mm holesaw as shown.

42. Using a utility knife, cut along the mark made on the roof console in step 37. After cutting, remove any burrs.

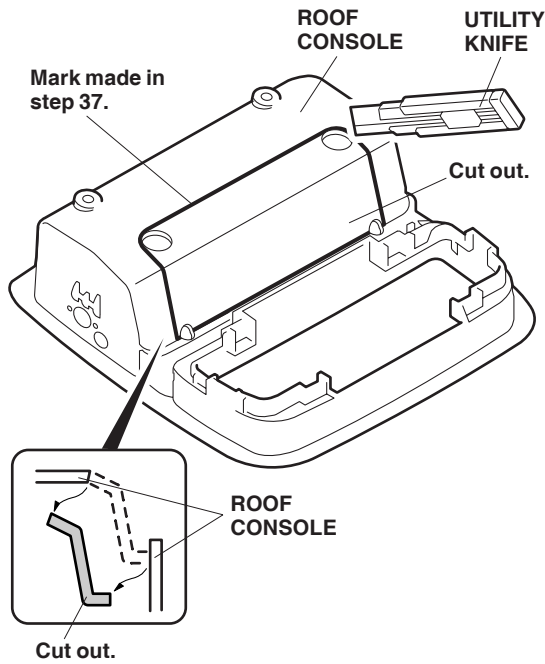


7517152E

43. Remove the masking tape attached in step 29.
44. Using isopropyl alcohol on a shop towel, clean the areas where the double-sided tapes will attach. Remove the adhesive backing from the double-sided tapes and attach them at the indicated position on the control unit.

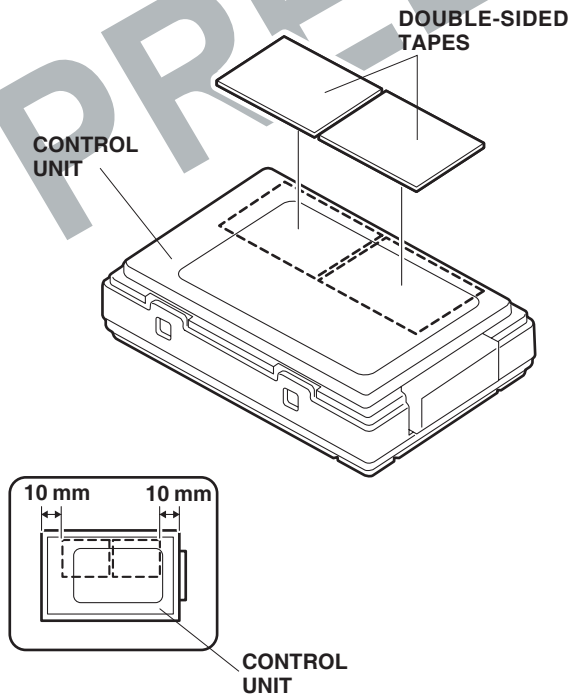


7517161E

45. Connect the HFL harness 22-pin connector to the control unit.

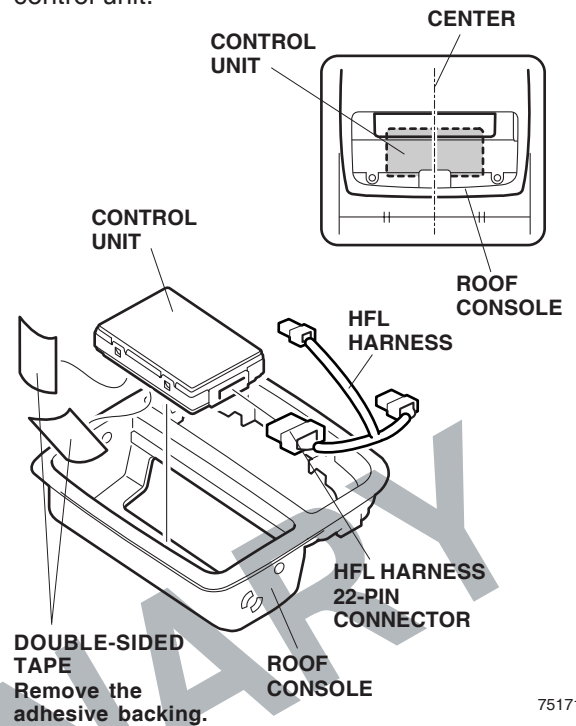



7517171E

46. Using isopropyl alcohol on a shop towel, clean the areas where the double-sided tape will attach. Remove the adhesive backing from the double-sided tape attached to the control unit, and attach it to the roof console at the indicated position.
47. Secure the HFL bracket to the roof console with two 4 x 12 mm washer screws, using the holes drilled in step 34.

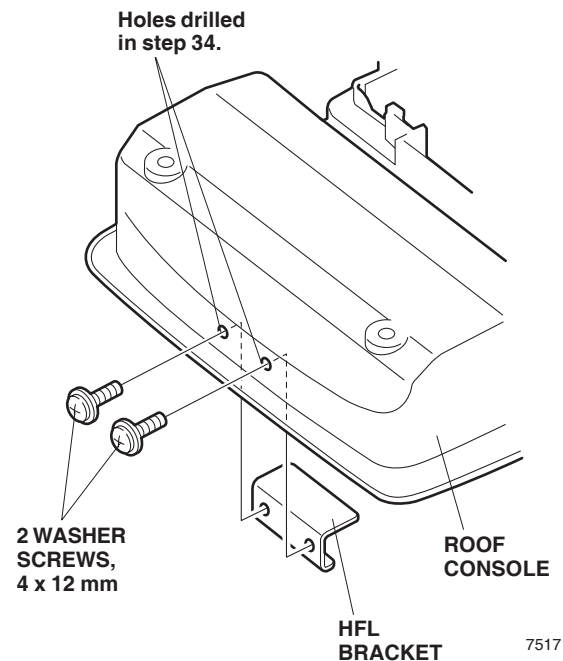

7517180E


48. Bend the switch terminal as shown.

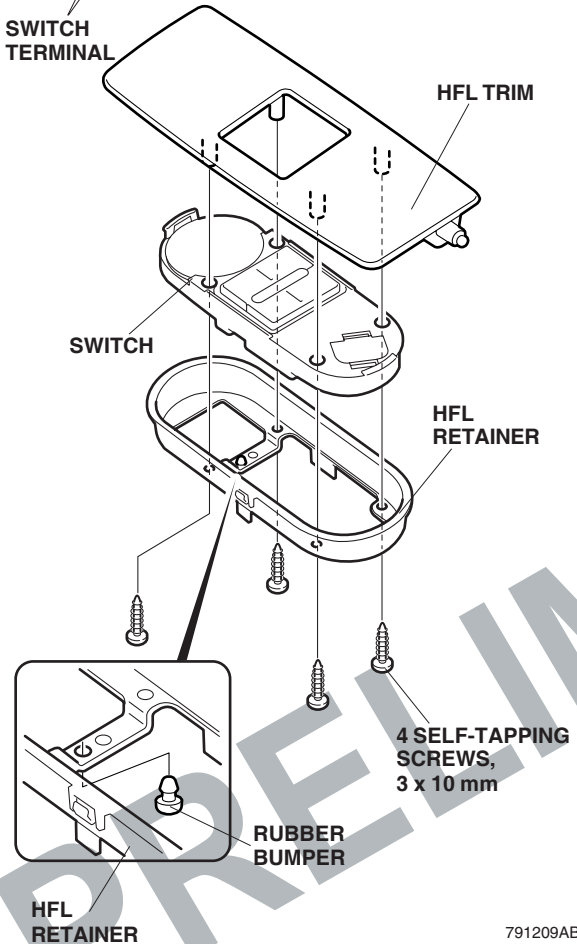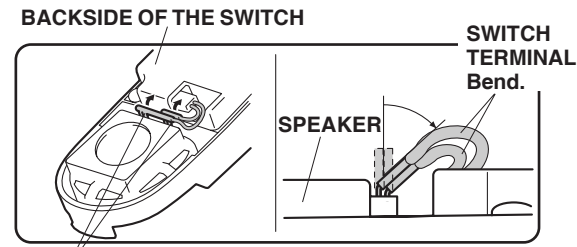

49. Insert the rubber bumper to the HFL retainer.

50. Assemble the HFL retainer, switch, and HFL trim with four 3 x 10 mm self-tapping screws.


51. Connect the HFL harness 20-pin connector to the switch.

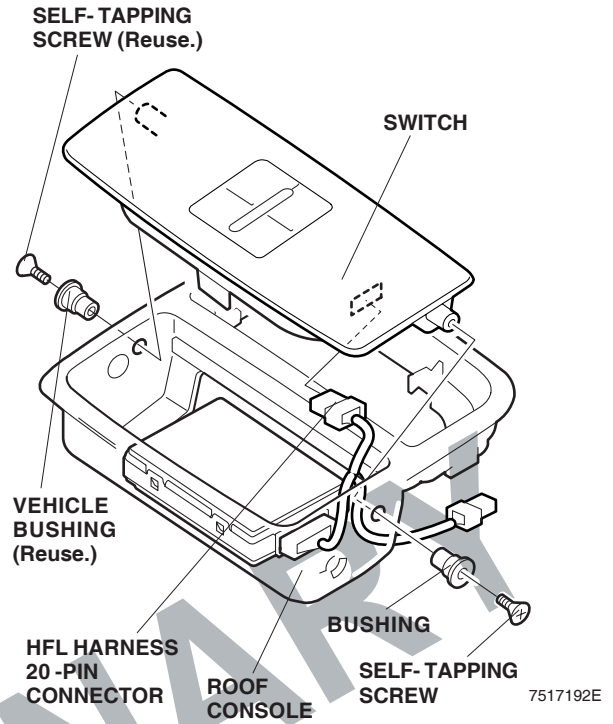


52. Install the switch assembled in step 50 to the roof console with the self-tapping screw, bushings, self-tapping screw removed in step 25, and vehicle bushings.

53. Reinstall the console light to the roof console.

54. Using isopropyl alcohol on a shop towel, clean the area where the EPT sealer will attach. Cut an EPT sealer in half, and attach one half to the vehicle bracket as shown.

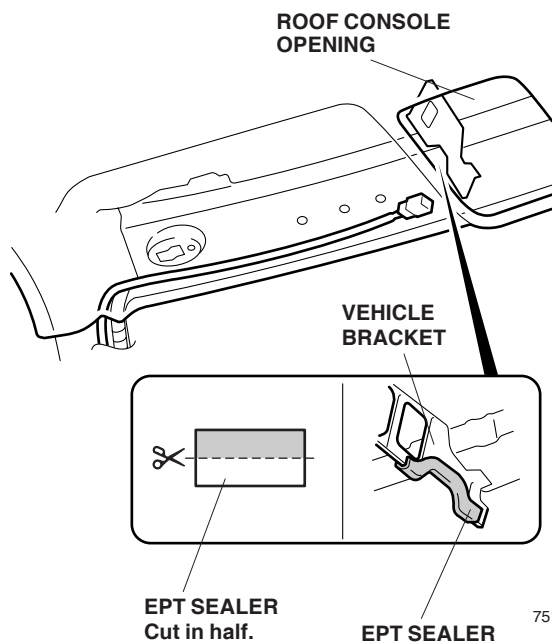


55. Hold the roof console close to the roof console opening, and connect the HFL harness 4-pin connector to the HFL subharness 4-pin connector.

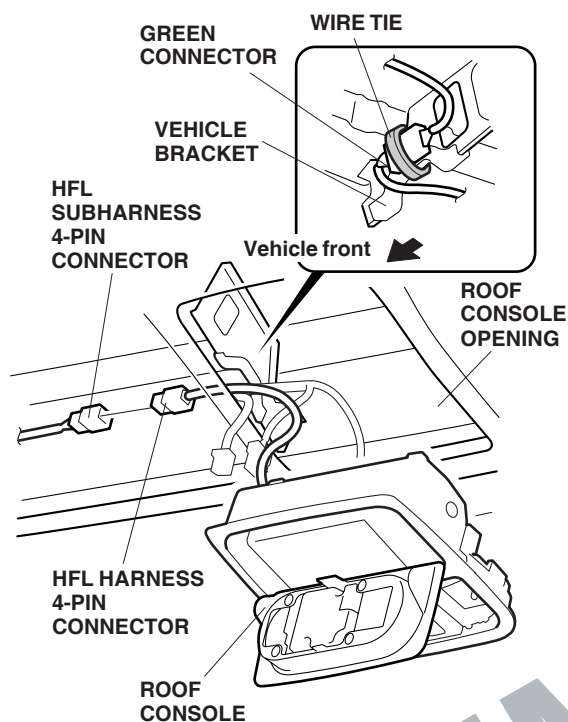


7518020E

56. Secure the connector with a wire tie to the vehicle bracket.
57. Using isopropyl alcohol on a shop towel, clean the area where the EPT sealers will attach. Secure the HFL subharness to the vehicle roof panel inside the roof lining with three EPT sealers.

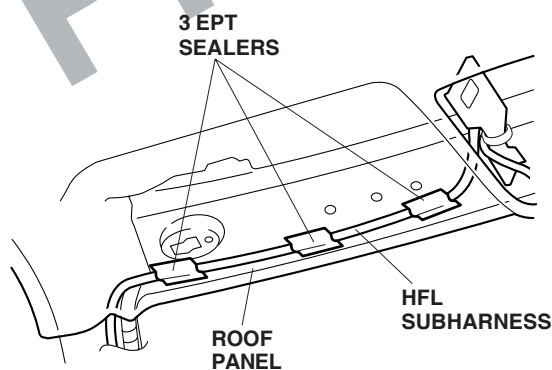


7518030E

58. Connect the vehicle connectors to the roof console. Reinstall the roof console with the four bolts from step 5.

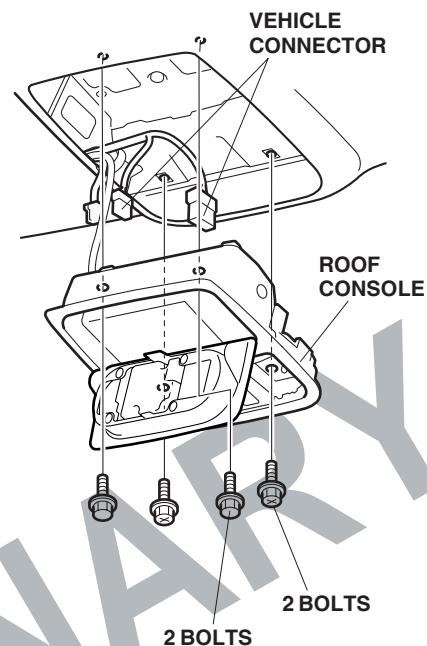


7518042E

59. Install the fuse (2 A) into the fuse box at the indicated position.

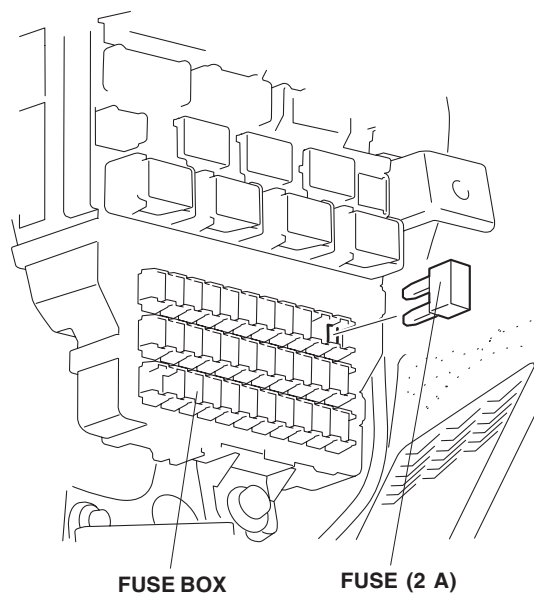

2219080T

60. Attach the fuse label to the No. 33 slot on the fuse box cover.

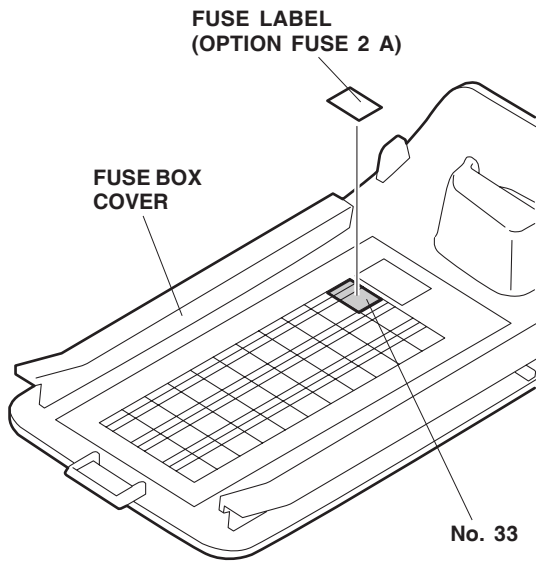

2219090T

61. Check that all wire harnesses are routed properly and that all connectors are plugged in.
62. Reinstall all removed parts.
63. Reconnect the negative cable to the battery.
64. Enter the customer's radio anti-theft code, and reset the radio station presets.
65. Reset the clock.

NOTE: When the battery is disconnected, the driver's window AUTO function is disabled.

- Start the engine. Push down on the driver's window switch until the window is fully open.
- Pull up on the driver's window switch to close the window completely, then hold the switch for 1 second or more.
- Lower and raise the driver's window to check operation of the driver's window AUTO function.