



# INSTALLATION INSTRUCTIONS

Accessory <b>17" SPARE WHEEL</b> P/N 08W17-SJC-101A
---

Application <b>2008 RIDGELINE</b>
--------------------------------------

Publications No. <b>All 40710</b>
Issue Date <b>OCT 2008</b>

## PARTS LIST

 
Spare wheel  
(The illustration may differ from the actual wheel.)



6 Tire pressure information labels



Valve




## TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol  
Shop towel

## SPECIFICATIONS

TIRE PRESSURE INFORMATION LABEL ID CODE

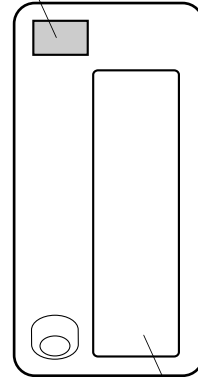

TIRE PRESSURE INFORMATION LABEL

08 RIDGELINE:

Vehicle grade	Tire pressure information label ID code
RT, RTX, RTS	JC1SC
RTL	JC1SD

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

### NOTE:

- Before attaching the tire pressure information label, check the grade of the vehicle and the ID code on the tire pressure information label.
  - Make sure to install the tires of the correct size.
  - Please refer to the vehicle owner’s manual for the spare wheel installation.
  - Use a tire changer to install and remove the tires as described in the Operation Manual provided with the tire changer. Do not use a tire lever to install and remove the tires as it may cause damage to the tire and spare wheel.
1. Open the driver’s door. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the Tire Pressure Information Label will attach. Remove the adhesive backing from the label, and attach it on the standard tire pressure information label as shown.  
Make sure to apply the correct tire pressure information label.

