


Installing the Door Edge Guards

3. Position the right front door edge guard on the right front door while aligning it with the contour of the door. Mark the right front door at the top and bottom end of the right front door edge guard.

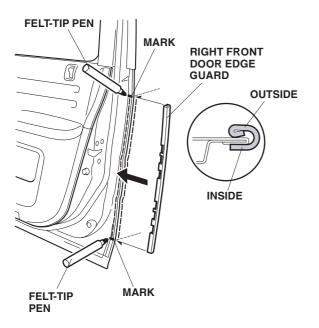

door edge, and tap it into position with a series of light taps using a rubber mallet.


INSIDE

GUARD

RIGHT FRONT DOOR EDGE

Position the right front door edge guard on the

6.

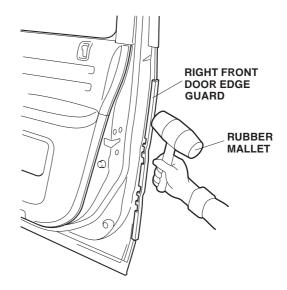


MARK

7. Repeat steps 3 through 6 to install the left front door edge guard.

4. Position the hem sealant cutting tool against the door edge, and trim the seam sealant from mark to mark.


NOTE: The cutting tool only cuts in one direction. Move it upward on the right door, and downward on the left door.

5. Apply touch-up paint to the door, and let it dry.

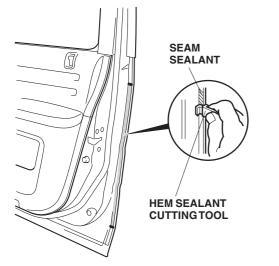

Installing the Rear Door Edge Guards

8. Position the right rear door edge guard on the right rear door while aligning it with the contour of the door. Mark the right rear door at the top and bottom end of the right rear door edge guard.

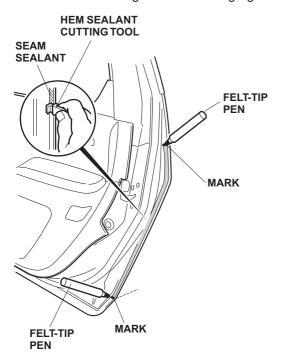


9. Position the hem sealant cutting tool against the door edge, and trim the seam sealant from mark to mark.

NOTE: The cutting tool only cuts in one direction. Move it upward on the right door, and downward on the left door.

10. Apply touch-up paint to the door, and let it dry.

11. Position the right rear door edge guard on the door edge, and tap it into position with a series of light taps using a rubber mallet.

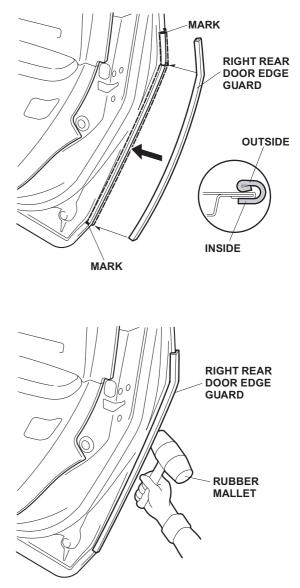

12. Repeat steps 8 through 11 to install the left rear door edge guard.