



• The ski attachments may be installed either with both on the driver's side or with both on the passenger's side.


3. Slide two long T-bolts into each crossbar.

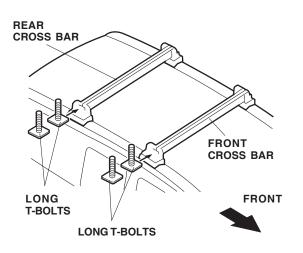

- 4. Reinstall the roof rack cover.
- 5. Insert the key, and turn it clockwise to unlock the front ski attachment. Press the button, and open the top frame completely.

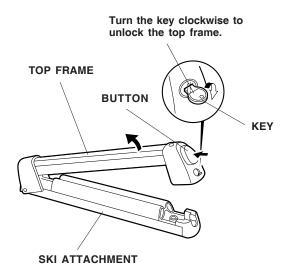


6. Position the spacers and the front ski attachment onto the long T-bolts, and install the two knobs. Tighten the knobs securely.

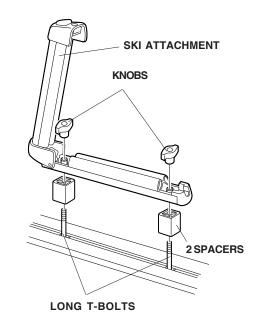


- 7. Repeat steps 5 and 6 to install a ski attachment to the rear crossbar.
- 8. Close the top frame, and listen for it to "click" into position, then turn the key counterclockwise to lock the top frame.
- 9. Rock the ski attachment in all directions to make sure it is installed securely. If necessary, retighten the T-bolts or reinstall the ski attachment.
- 10. Write down the key number, and put the number in the glove box in case the key is lost or stolen.
- 11. Put the rubber moldings removed in step 2 in a clean plastic bag, and put them in the passenger's foot well. Put the keys in the glove box with this instruction and the key number.

Loading Skis on the Attachment


1. Insert the key, and turn it clockwise to unlock the top frame. Push the button, and raise the top frame completely.

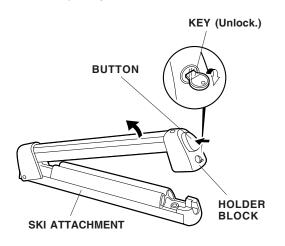


- 2. Position the skis on the attachment:
 - Load the skis with the rear of the skis facing forward and the bindings between the front and rear attachments.

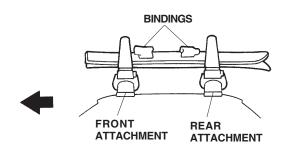


• If the bindings cannot be positioned between the front and rear attachments, install the skis with one of the bindings positioned behind the rear attachment.

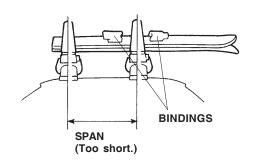


3. Close the top frame, and listen for it to click into position. Depending on the thickness of the ski, you may need to attach the hook in the second position.

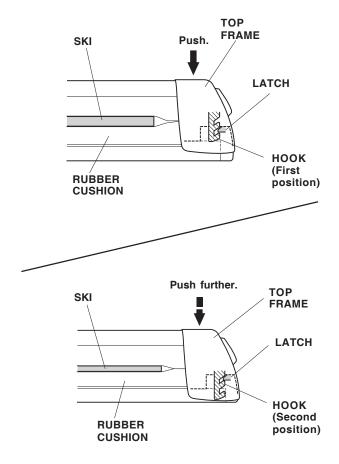

4. Lock the top frame by turning the key counterclockwise. Remove the key.

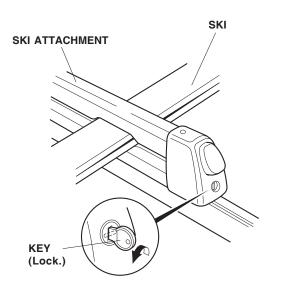

5. With the skis attached, rock the attachment in all directions to make sure it is installed securely. Adjust as necessary.

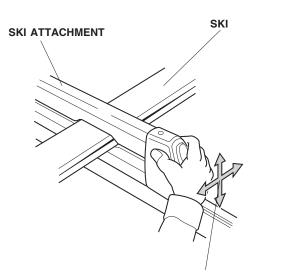

Rock the ski attachment in all directions to make sure it is installed securely.