



INSTALLATION INSTRUCTIONS


Accessory
STEERING WHEEL COVER
P/N 08U98-TK6-110

Application
2011 INSIGHT


Publications No.
All 44908
Issue Date
NOV 2010

PARTS LIST


Steering wheel cover

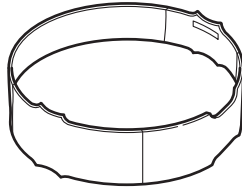

Needle

 

Lacing string

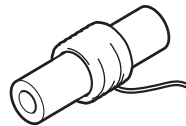

TOOLS AND SUPPLIES REQUIRED

Shop towel

Gloves

Masking tape

Isopropyl alcohol

Scissors


INSTALLATION

NOTE

- Review all the steps before beginning work.
- Using isopropyl alcohol, thoroughly clean the steering wheel before installing the wheel cover.
- You may want to wear gloves to protect your hands during installation.


1. Center the steering wheel.

2. Put the steering wheel cover on the steering wheel so the adhesive tapes on the inside of the steering wheel cover and the cut-outs in the cover align with each spoke of the steering wheel.


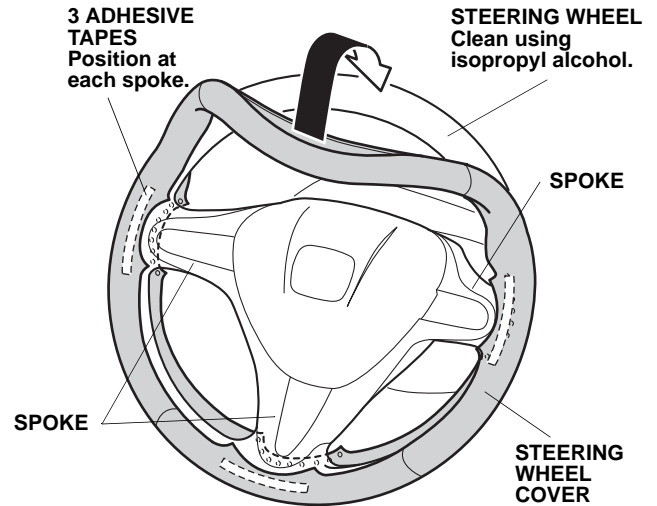


3. Locate the positions where the adhesive tapes will attach, and clean the steering wheel with isopropyl alcohol.
4. Fold back the front of the steering wheel cover. Peel back the adhesive backings partway as shown, and temporarily attach the backings to the front of the steering wheel cover with masking tape.


3 ADHESIVE BACKINGS
(Peel back the adhesive backings and temporarily attach them to the front of the steering wheel cover with masking tape.)

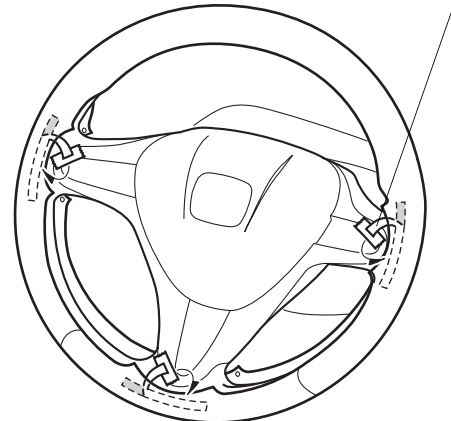


5. Thread the lacing string into the needle. Make inclined stitches in the back of the steering wheel cover up to the hole that is right above the spoke as shown.

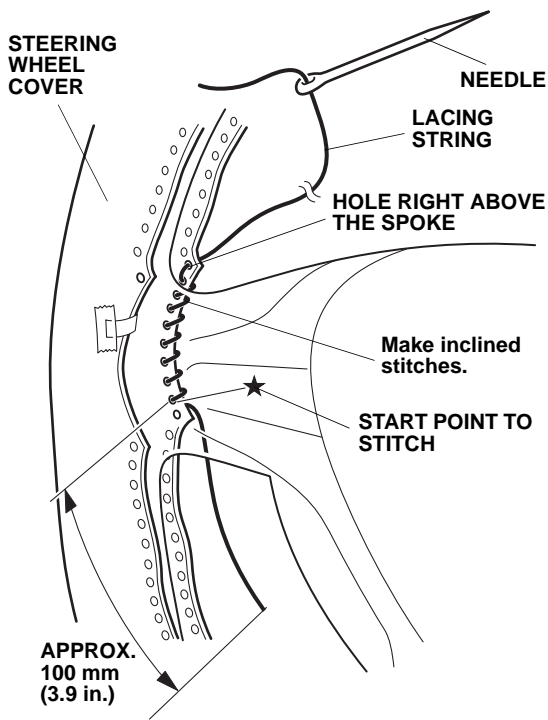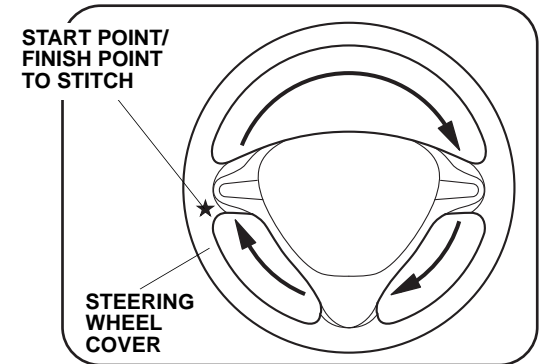


6. Lace twice at the hole right above the spoke, and pull the lacing string tight to close the seam.

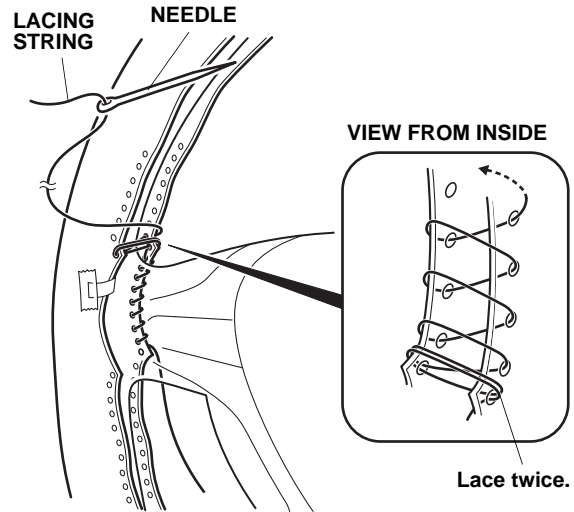


7. Keep lacing the steering wheel cover until you get to the fourth stitch, then go to step 8.
- Pull the lacing string tight to close the seam at each stitch.
 - Make sure the seam follows the center line on the inside of the steering wheel.

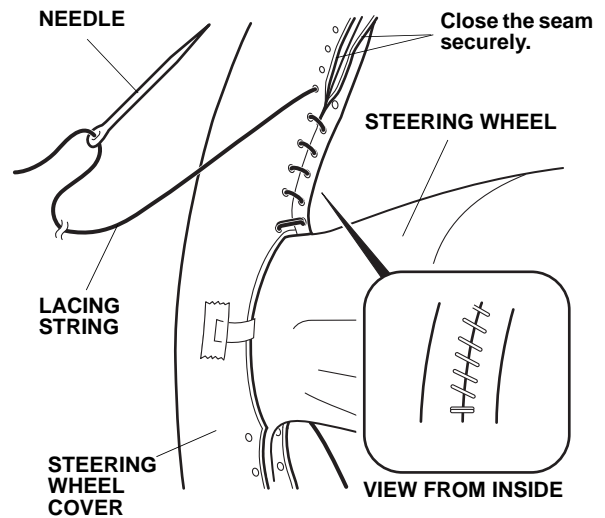

- Keep lacing while adjusting the steering wheel cover so the joints on both sides of the steering wheel are aligned.

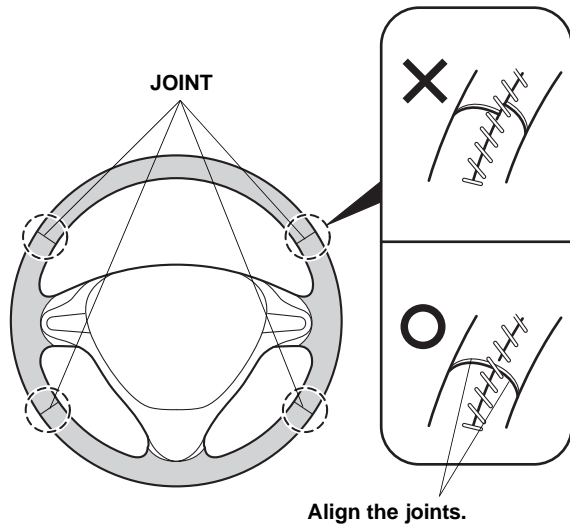


- Lace the spoke area of the steering wheel cover as shown. Lace twice through the holes in the steering wheel cover that are above and below the spoke.

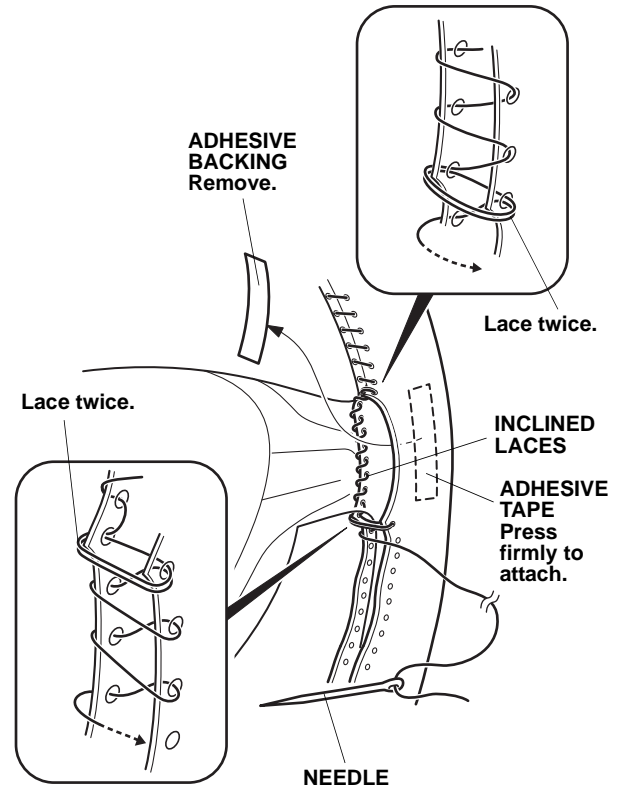

- Remove the adhesive backing, and press the adhesive tape firmly to attach it.
- Lace the lower part of the steering wheel cover in the same manner.

12. After lacing the steering wheel cover and before removing the final adhesive backing, pull the finishing end of the lacing string out of the joint of the steering wheel cover. Be sure that both the starting end and finishing end of the lacing string is out of the joint of the steering wheel cover.

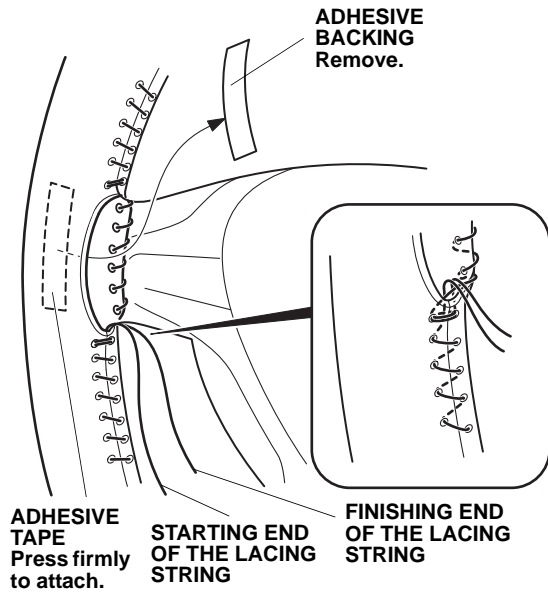

13. Make a knot twice in the end of the lacing strings, and cut off the excess.
14. Put the knot inside the steering wheel cover.
15. Remove the adhesive backing, and press the adhesive tape firmly to attach.