


PARTS LIST

Attachment Kit P/N 08A28-0J1-810

Adapter bracket A
(Not used)

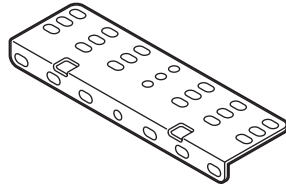

2 Adapter brackets B
(Not used)



Grommet
(Not used)



2 Screws, 4 x 10 mm
(Not used)




2 Bolts, 5 x 8 mm



2 Washer-screws, 5 x 16 mm
(Not used)



2 Flange bolts, 6 x 12 mm
(Not used)

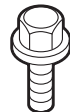

2 Flange nuts, 4 mm
(Not used)



2 Flange nuts, 5 mm
(Not used)



2 Flange nuts, 6 mm
(Not used)




4 Plain washers, 5 mm
(2 Not used)




2 Screw caps, 4 mm
(Not used)




2 Wire ties with clip
(1 Not used)

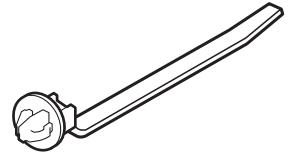


8 Wire ties
(1 Not used)

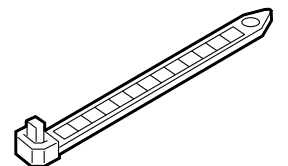

4 Urethane tapes
(Some may not used)

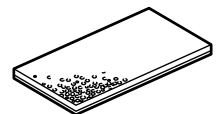


2 Cushion tapes
(1 Not used)

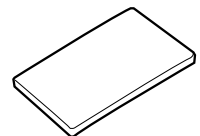


**Honda Music Link Adapter Kit (sold separately)
P/N 08A28-1J1-100**


Adapter unit

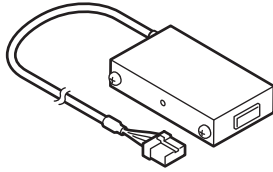

Music Link harness

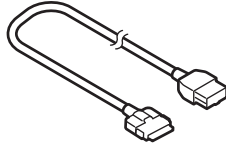


Accessory User's Information Manual

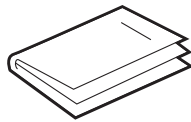

**Bus Cable 2-port (sold separately)
P/N 08A31-0F1-000**

Bus Cable 2-port

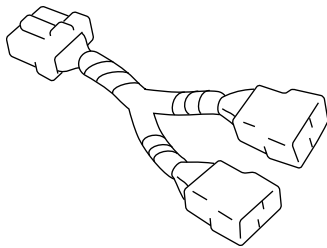

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Shop towel

Diagonal cutters

Ratchet


Isopropyl alcohol

Plastic Trim Tool

T/N SILTRIMTL10

8 mm Socket

Illustration of the Honda Music Link Installed on the Vehicle

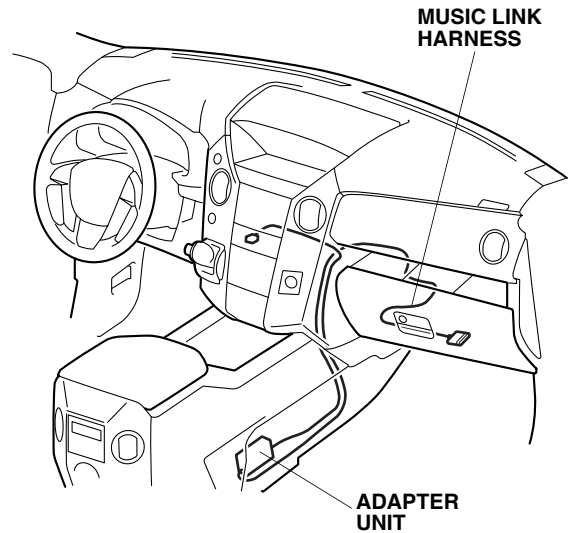


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Make sure you have the anti-theft code for the audio system and the navigation system (if equipped).
2. Disconnect the negative cable from the battery.

Removing the vehicle parts


- Shift the select knob to "D" position by pressing down on the shift lock release with the ignition key. Remove the left side center panel (eight clips and unplug the vehicle connectors).

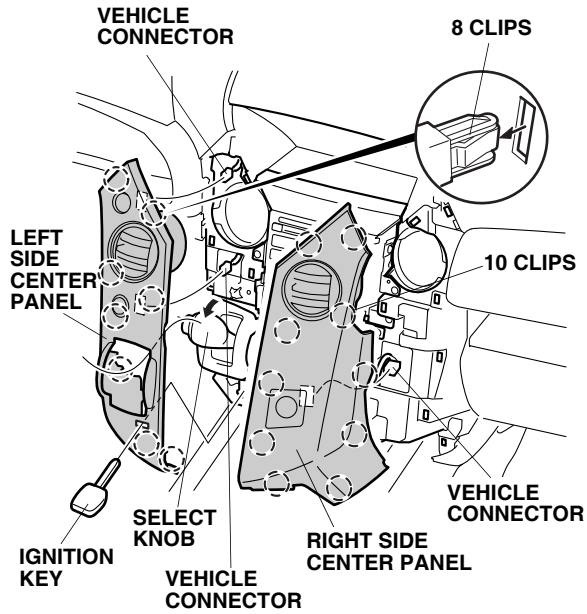


- Remove the right side center panel (ten clips and unplug the vehicle connector).
- Move the front passenger's seat all the way rearward.
- Remove the passenger's console cover (eight clips).

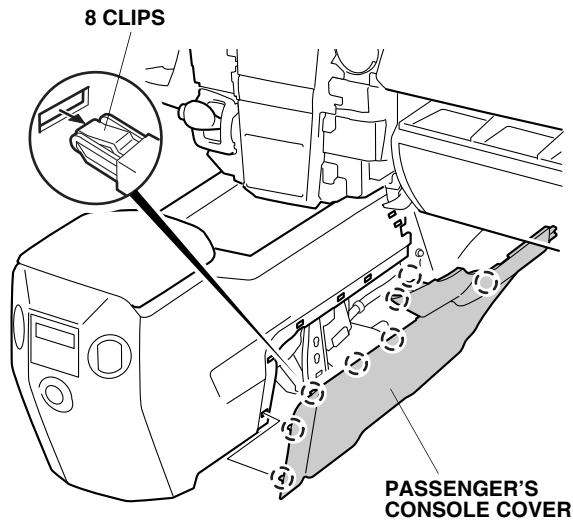


- Remove the passenger's side lower panel (three clips and two pins).

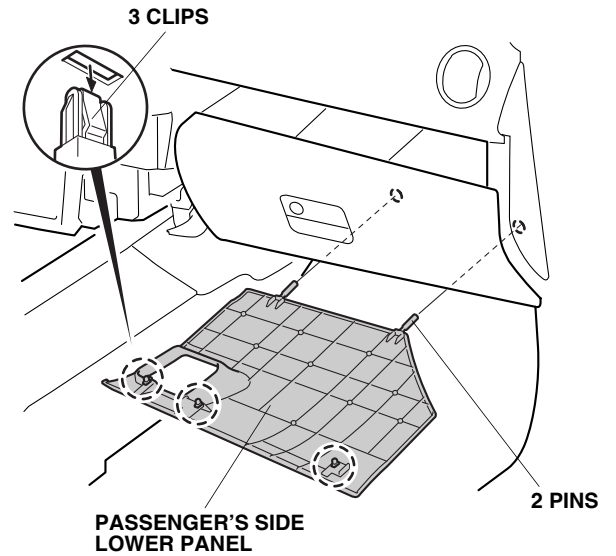


- Remove the glove box (two bolts).

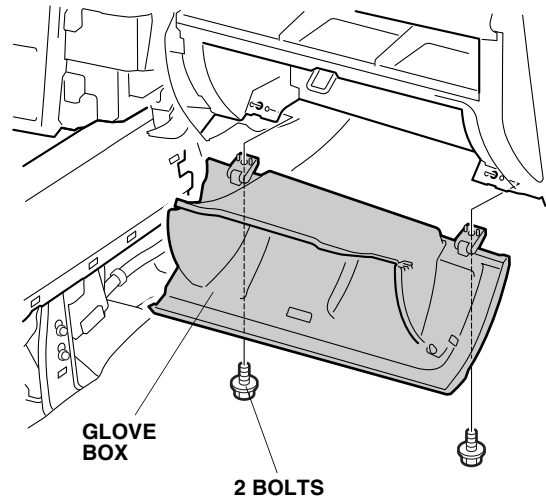

9. Remove the pocket (two self-tapping screws, four clips, and unplug the vehicle connectors).

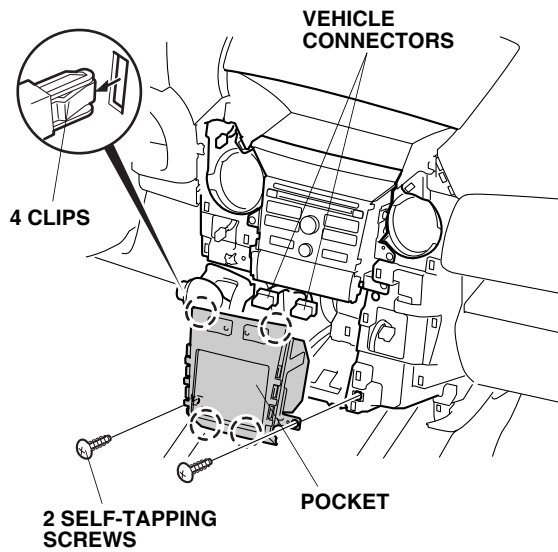


10. Remove the audio unit (four screws and unplug the vehicle connectors).

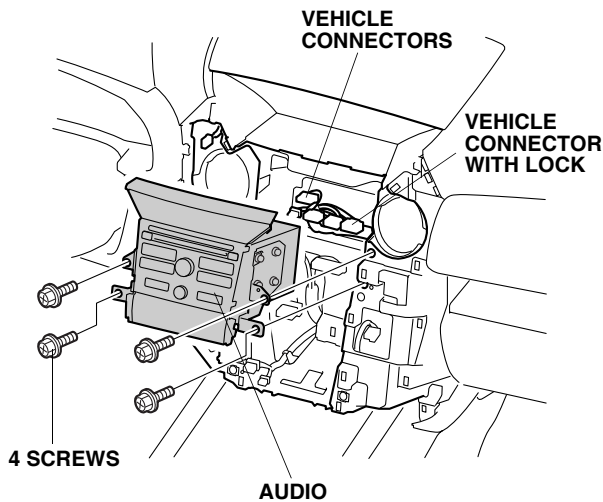


11. While pushing down on the retaining tab, pull out on the lock until you hear a click to release the vehicle connector.


12. Attach urethane tape to the Music Link harness at the indicated position.

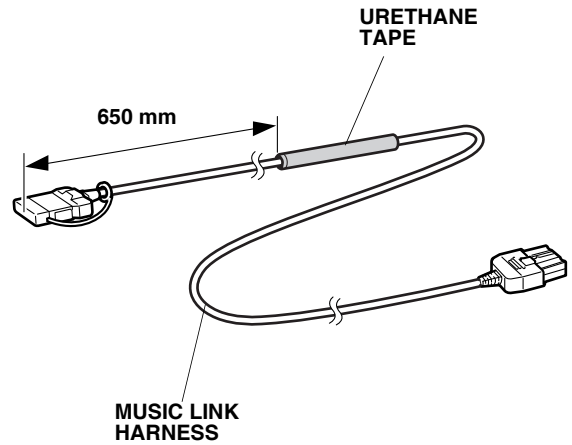


13. Plug the Music Link harness connector into the adapter unit.

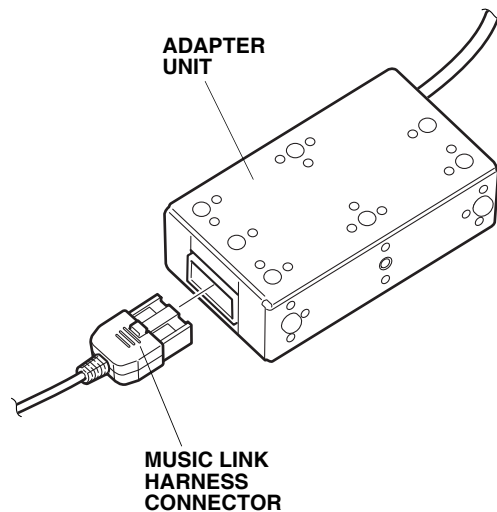


- Using isopropyl alcohol on a shop towel, clean the area where the cushion tape will attach. Wrap the adapter unit harness with cushion tape as shown.

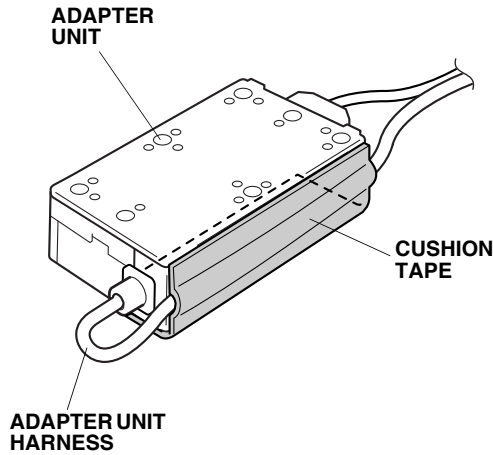


- In the passenger's console cover opening, install the adapter unit to the vehicle bracket with the two 5 mm plain washers and two 5 x 8 mm bolts.

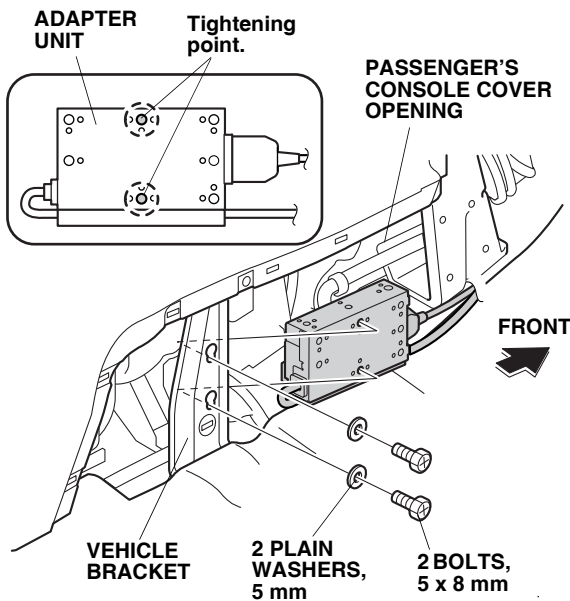

- Route the adapter unit harness and the Music Link harness as shown.

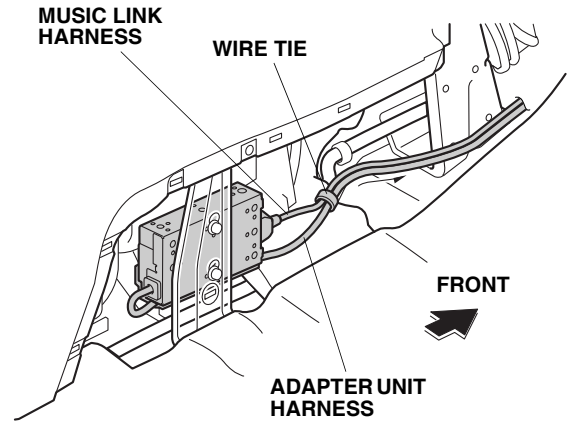


- Secure the adapter unit harness to the Music Link harness with one wire tie.
- Secure the adapter unit harness to the Music Link harness with one wire tie.

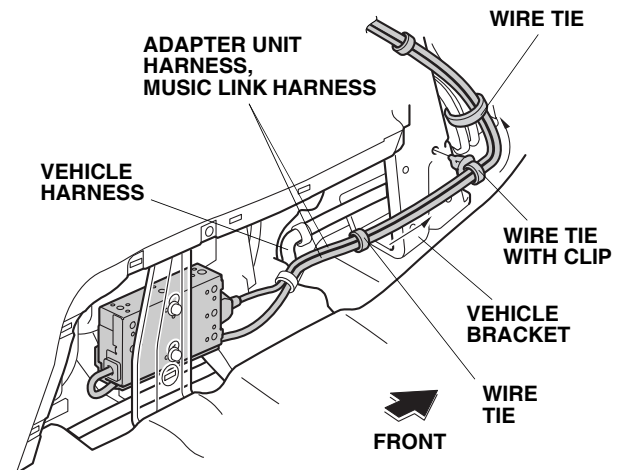


- Secure the adapter unit harness and the Music Link harness to the vehicle bracket with one wire tie with clip.
- Route the adapter unit harness and the Music Link harness as shown, and secure the adapter unit harness and the Music Link harness to the vehicle harness with one wire tie.
- Secure the adapter unit harness to the Music Link harness with one wire tie.

22. Route the adapter unit harness to the audio opening, and route the Music Link harness to the glove box opening as shown.

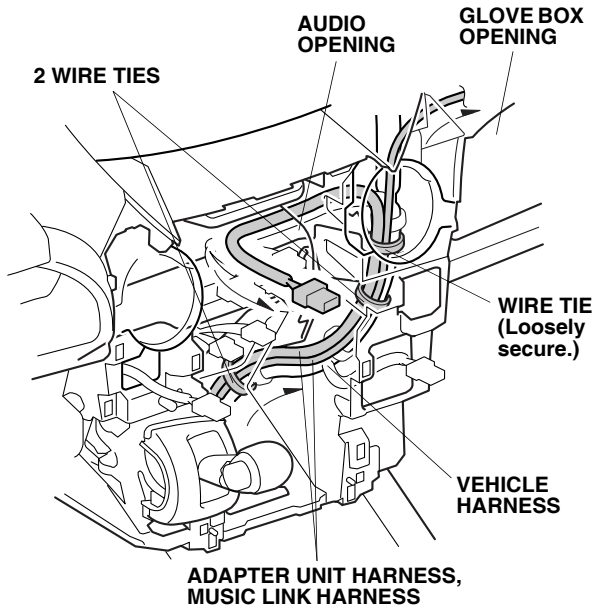


23. Secure the adapter unit harness and the Music Link harness to the vehicle harness with two wire ties.
24. Loosely secure the adapter unit harness and the Music Link harness to the vehicle harness with one wire tie.
25. Route the Music Link harness through the glove box opening.

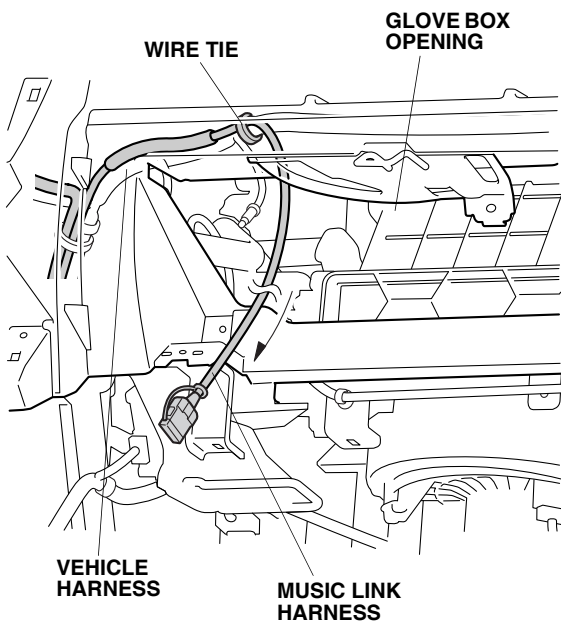


26. Secure the Music Link harness to the vehicle harness with one wire tie.


27. Using isopropyl alcohol on a shop towel, clean the area where the cushion tape will attach. Install cushion tape to the vehicle bracket.

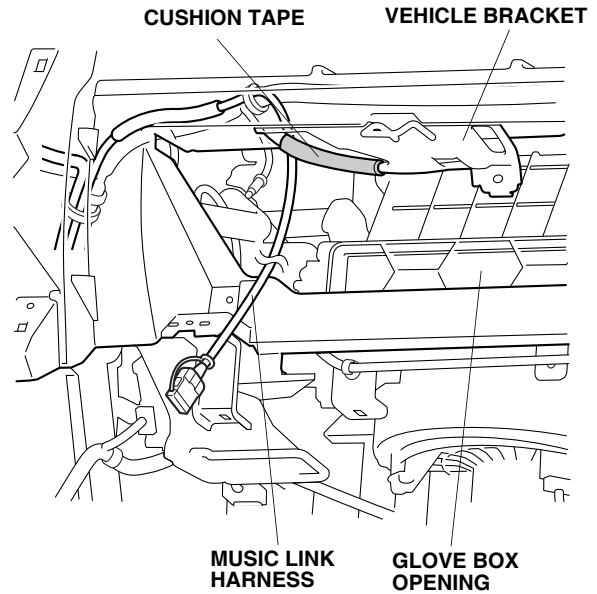

28. Secure the Music Link harness to the vehicle bracket with one wire tie.

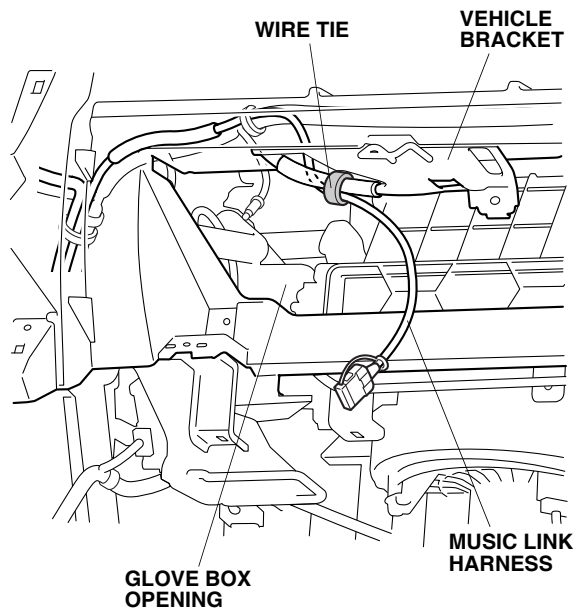


29. Align the adapter unit 14-pin connector to the vehicle 14-pin connector at the audio opening as shown.

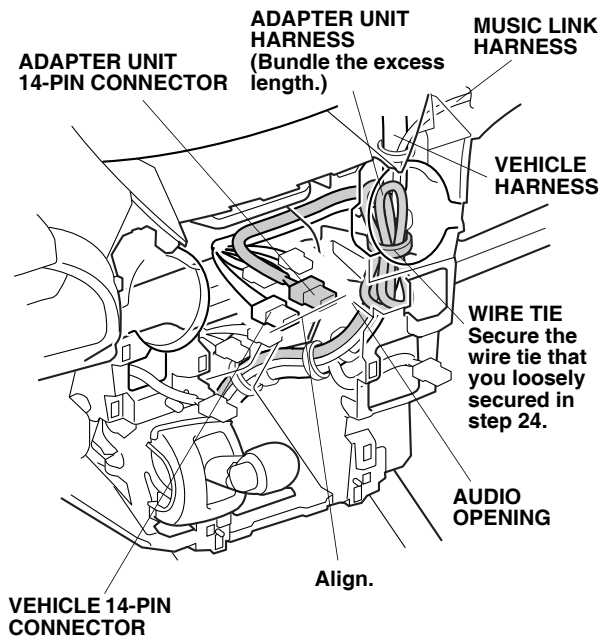

30. Bundle up the excess adapter unit harness, and secure it and the Music Link harness to the vehicle harness with the wire tie loosely secured in step 24.

If the vehicle is equipped with the vehicle 14-pin connector or another accessory 14-pin connector, continue with step 31 and 32.

31. Plug the adapter unit 14-pin connector and the other 14-pin connector to the bus cable 2-port 14-pin connector.

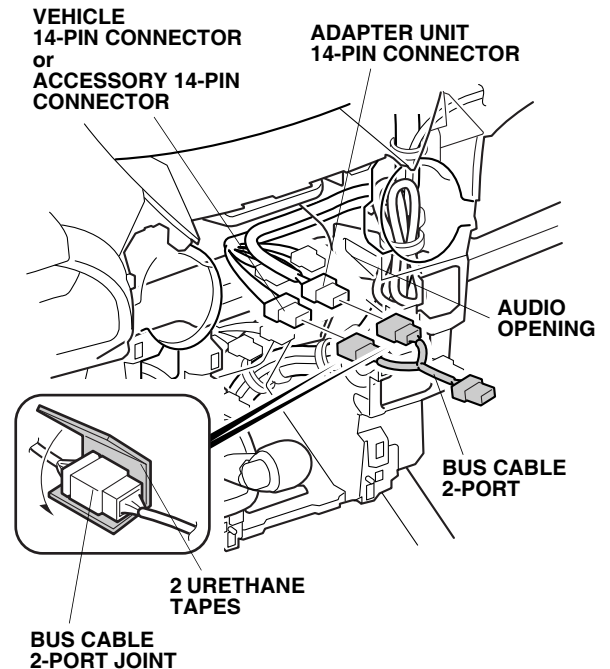

32. Attach one urethane tape around each bus cable 2-port 14-pin connector.
33. Check that all wire harnesses are routed properly and all connectors are plugged in.
34. Reconnect the negative cable to the battery.
35. If equipped with navigation, enter the navigation code.
36. Enter the customer's audio system anti-theft code.
37. Reset the clock on models without navigation.
38. Check operation of the security system according to the security system user's information provided.
39. Turn the radio unit ON. Set mode to Honda Music Link by pressing "AUX" until display "CDC" or "CD4" is shown on the radio display. If "CD-C EJECT" is on the display, the unit is working properly.