
INSTALLATION	Accessory ENGINE BLOCK HEATER	Application 2012 FIT	Publications No. All 45993 Issue Date
PARTS LIST Engine Block Heater kit P/N 08T44-SNA-101	Eng P/N	gine Block Heater Bracket kit 08T44-TK6-100	AUG 2011
Engine block heater	Bra	cket	
Aluminum washer	Wa	sher-bolt	
Heater harness	Rat	<b>DLS AND SUPPLIES REQUIR</b> chet nm, 19 mm, and 24 mm Socke	
Protective cap	100 Tor Dia Hea	mm (4 in.) Extension que wrench gonal cutters avy gloves	15
12 Black wire ties (6 not used)	Tap Wh Hor	in pan e measure ite marker nda All Season Antifreeze/Cool ider cover	ant Type 2
7 Wire ties with clip (3 not used)			
5 White wire ties (Not used)			

Illustration of the Engine Block Heater installed in the vehicle

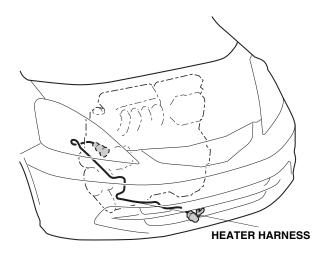

## INSTALLATION

## NOTE:

- Always use Honda All Season Antifreeze/Coolant Type 2. Using a non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail.
- To avoid burning out the element, do not operate the engine block heater until it is installed in the vehicle and you have added coolant.


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

- 1. Make sure you have the anti-theft code for the audio unit and navigation system (if equipped), then write down the radio station presets.
- 2. Disconnect the negative cable from the battery.
- 3. Allow the engine and all cooling system components to cool down.


4. Place a clean drain pan under the radiator drain plug, then remove the drain plug from the bottom of the radiator to drain the coolant. Remove the radiator cap to increase the flow.

## NOTICE

Radiator coolant will damage paint. Quickly rinse any spilled coolant from painted surfaces.

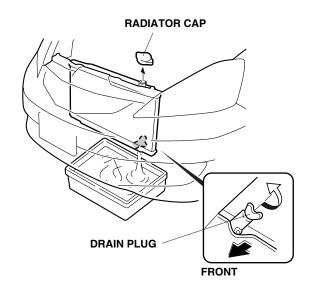


5. With the vehicle on a lift, remove the engine splash guard (one screw and three clips).

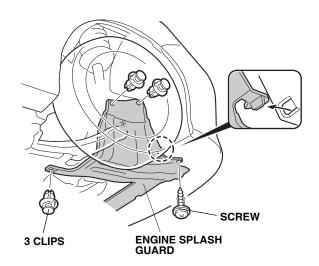


6. Using a 19 mm socket, remove the drain bolt and washer from the engine block. Coolant remaining in the engine jackets will flow out the hole when the plug is removed. Retain the plug; it will be used if the engine block heater is removed.


NOTE: Use a new washer if the drain bolt is reinstalled.

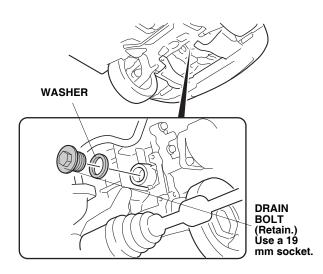


 Install the engine block heater with aluminum washer into the engine block using a 24 mm socket with a 100 mm (4 in.) extension. Torque the engine block heater to 60 N·m (44 lbf-ft). Using an extension longer than 100 mm (4 in.) will give you an incorrect torque reading.

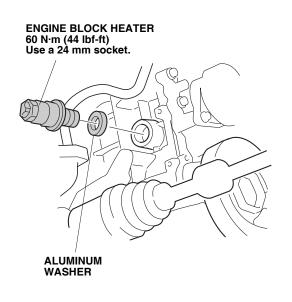

8. Measure and mark the heater harness at the point shown. Install a wire tie with clip to the heater harness at each of the measurements shown.

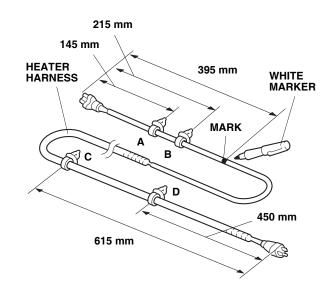


9. Plug the heater harness connector into the engine block heater. Temporarily place the entire heater harness on top of the engine.

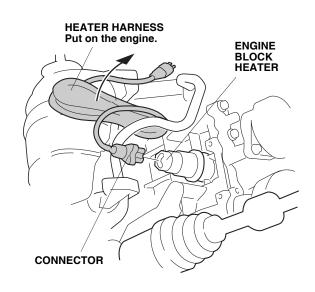


10. Lower the vehicle.


11. Remove the grille cover (eight clips).

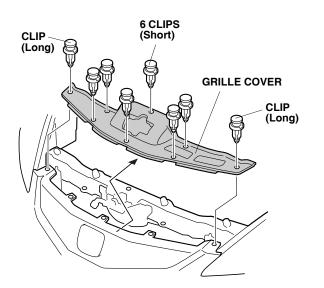


12. Using one washer-bolt, install the bracket as shown.

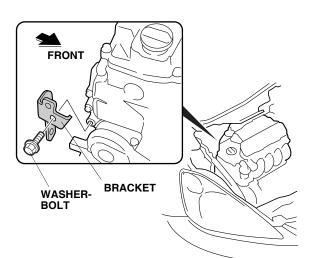


13. Route the heater harness as shown, and secure the two wire ties with clips (points A and B) to the bracket.

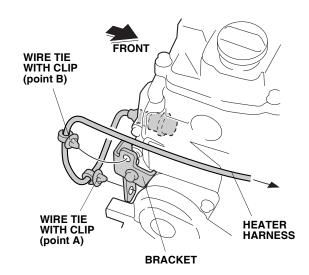


14. Route the heater harness as shown. Using two black wire ties, secure the heater harness to the vehicle harness.

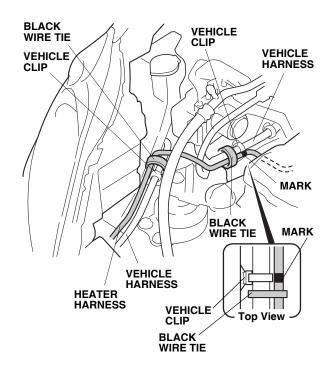


15. Route the heater harness as shown and secure the two wire ties with clips (points C and D) to the vehicle frame.

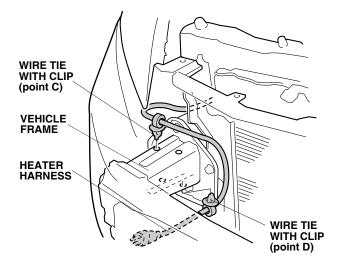


16. Bundle the excess of the heater harness. Using three black wire ties, secure the harness to the vehicle harness.

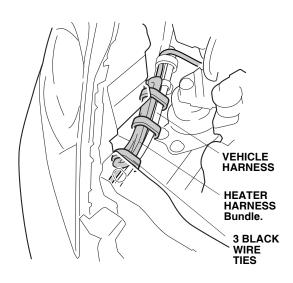

- 17. Route the heater harness:
- Sport model: Route the heater harness as shown. Using one black wire tie, secure the heater harness to the front grille. Attach the protective cap to the front grille, and plug the connector on the heater harness into the protective cap.

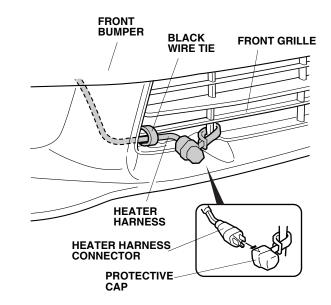

• Base model: Route the heater harness as shown. Using one black wire tie, secure the heater harness to the front grille. Attach the protective cap to the front grille, and plug the connector on the heater harness into the protective cap.

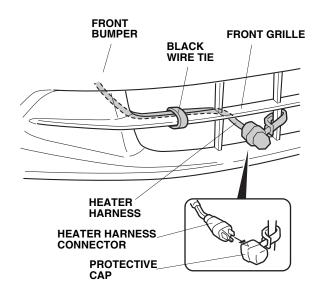

- 18. Reinstall all removed parts.
- 19. Reinstall the radiator drain plug.
- 20. Fill the system with coolant. Follow the instructions in the service manual to fill and bleed the cooling system.
- 21. Check the coolant reservoir for the correct level and check the cooling system for signs of leakage. Repair as necessary.
- 22. Check that the heater harness is routed properly and all connectors are plugged in.
- 23. Put the drain plug (removed in step 6) in the glove box.
- 24. Reconnect the negative cable to the battery.
- 25. Enter the audio unit anti-theft code, and reset the radio station presets.
- 26. Reset the clock.