



# INSTALLATION INSTRUCTIONS

Accessory <b>18" ALUMINUM WHEEL</b> P/N 08W18-TRT-100	Application <b>2017 CLARITY</b>	Publications No. <b>VERSION 1</b>
		Issue Date <b>JUL 2017</b>

## PARTS LIST

Aluminum wheel  
(The illustration may differ from the actual wheel.)



Wheel center cap  
(The illustration may differ from the actual center cap.)



Valve



Wheel cleaning information  
(Give this information to your customer.)



## TOOLS AND SUPPLIES REQUIRED

19 mm Socket  
Torque wrench

## SPECIFICATIONS

Rim size	18 x 8J (inset 50)
Tire size	235/45R18 94V
Bolt hole PCD	114.3 (5 holes)

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:

- The illustrations of the aluminum wheels are shown for reference purposes only.
- Install the correct size tire.
- Use a tire changer to install and remove the tires as described in the operation manual furnished with the tire changer. Do not use a tire lever to install and remove the tires as it may cause damage to the tire and aluminum wheel.
- The wheel nut torque is 108 N·m (80 lb·ft).
- Be sure to give the wheel cleaning information to your customer.