



INSTALLATION INSTRUCTIONS

Accessory
ALL-SEASON FLOOR MATS
P/N 08P13-T7S-100

Application
2017 HR-V

Publications No.
VERSION 1

Issue Date
SEP 2016

PARTS LIST

Driver's all-season floor mat



Passenger's all-season floor mat




Left rear all-season floor mat



Right rear all-season floor mat



Illustration of the All-season Floor Mats in the Vehicle

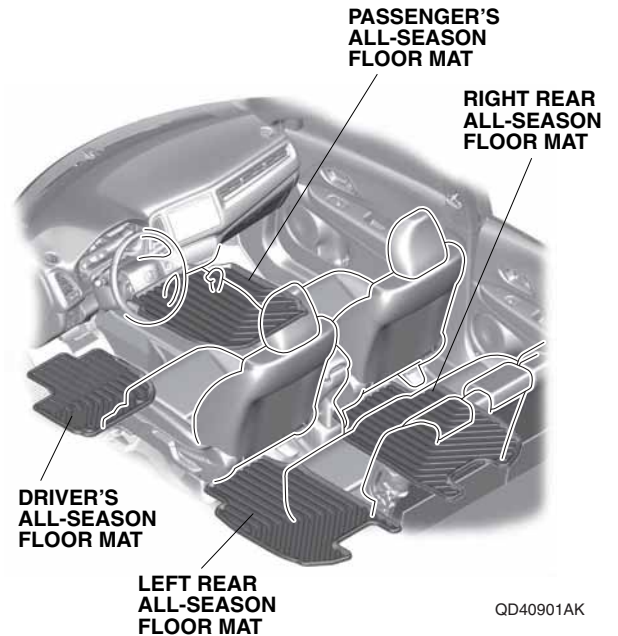

QD40901AK


INSTALLATION

NOTE:

- Before installing the mats, identify their installation positions.
- Connect the mat to the anchors to prevent the mat from sliding forward and possibly interfering with the pedals.
- If you remove a mat, make sure you re-anchor it when you put it back in your vehicle.
- If you replace a mat, use a factory mat designed to be used with the anchors.
- If you use a non-factory mat in the driver's footwell, make sure it fits properly and that it can be used with the anchors.
- Do not put an additional mat on top of the anchored mat. An additional mat may slide forward and possibly interfere with the pedals.


Installing the All-season Floor Mats

1. If equipped, remove the standard floor mats as described in the vehicle Owner's Manual.

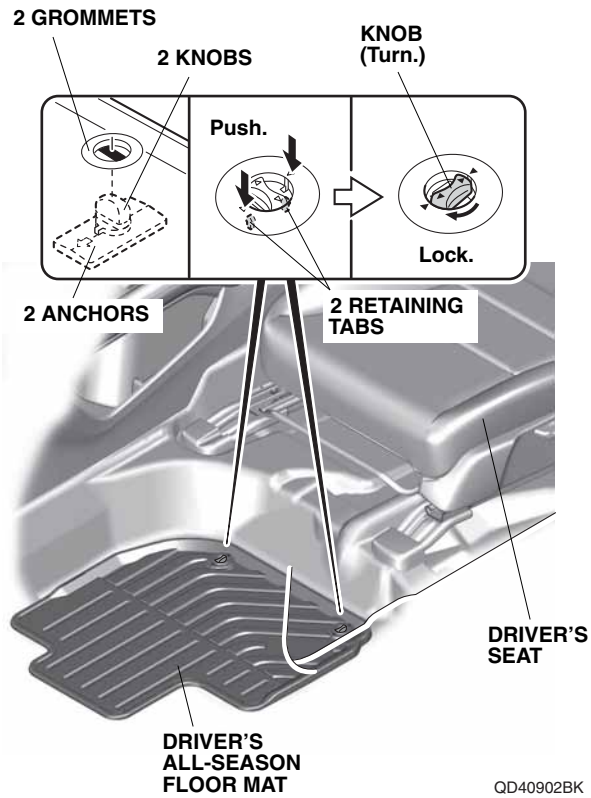

2. Place the grommets in the driver's all-season floor mat over the anchors. Push the grommets into the anchors to secure the retaining tabs, then turn the knobs 90° to secure the all-season floor mat.

3. Place the passenger's all-season floor mat as shown.

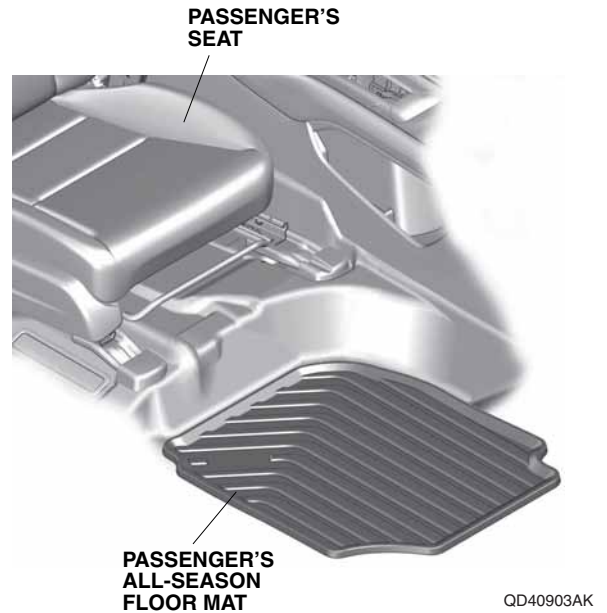

4. Place the left and right rear all-season floor mats as shown.

