



INSTALLATION INSTRUCTIONS

Accessory
DOOR EDGE GUARDS
P/N 08P20-TG7-100A

Application
2017 PILOT

Publications No.
VERSION 1

Issue Date
OCT 2016

PARTS LIST

Right front door edge guard



Left front door edge guard




Right rear door edge guard



Left rear door edge guard



Seam sealant cutting tool

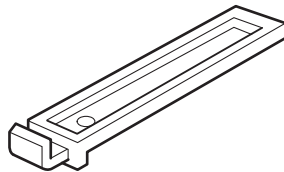


TOOLS AND SUPPLIES REQUIRED

Rubber mallet

Felt-tip pen

Touch-up paint

Illustration of the Door Edge Guards on the Vehicle

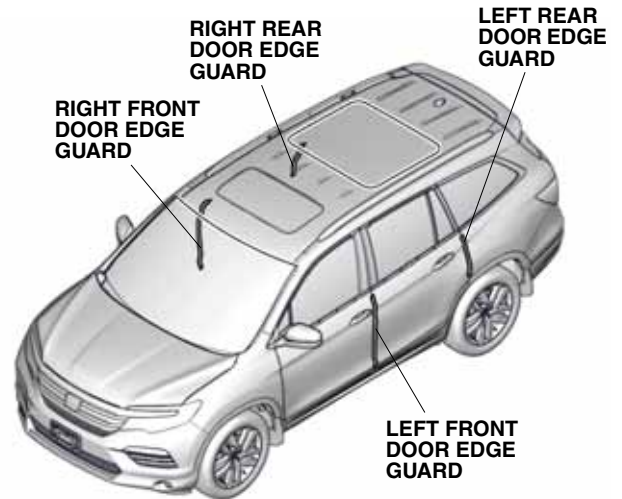

QDN0501AA


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE: These instructions show the left door edge guards being installed. The same procedure applies to installing the right door edge guards.

1. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.
2. Clean and wax the areas to be covered with a high quality paste wax.

3. Gently place the left front door edge guard on the left front door. Align the left front door edge guard with the contour of the door. Mark the inner door lip at the top edge and the sealant at the bottom edge of the left front door edge guard.

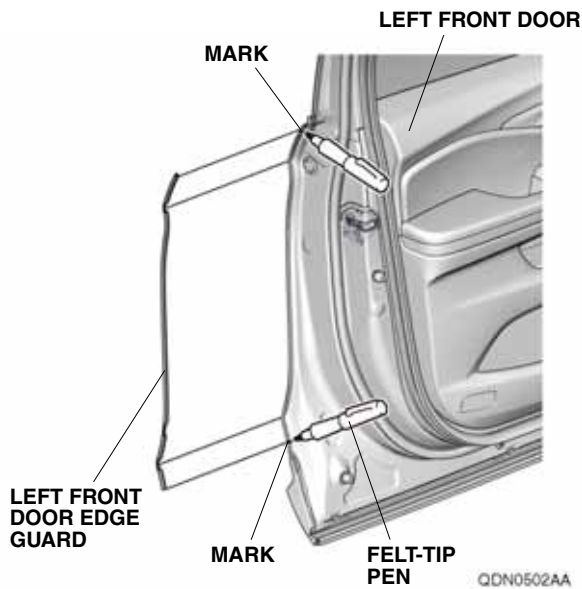


4. Remove the left front door edge guard.
5. Position the cutting edge of the seam sealant cutting tool against the door edge and carefully trim the seam sealant from mark to mark. The cutting tool cuts in one direction only.

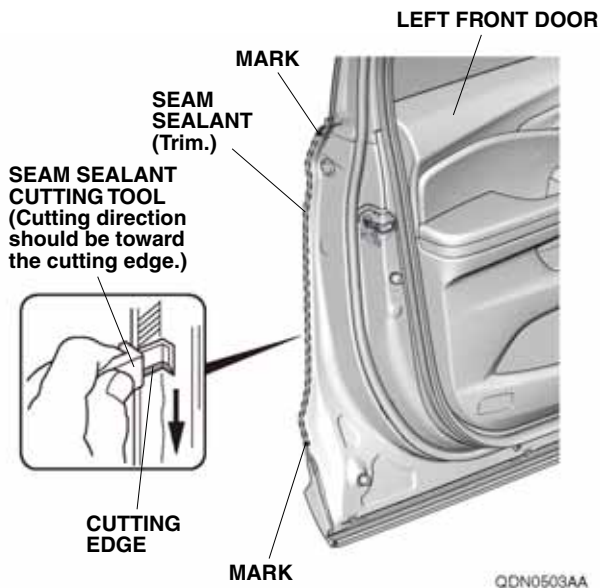


6. Apply touch-up paint to the cut seam sealant area, and let it dry thoroughly.
7. Repeat steps 3 through 6 on the right front door.

8. Peel back the left rear door seal, and secure it to the left rear door panel with masking tape as shown.

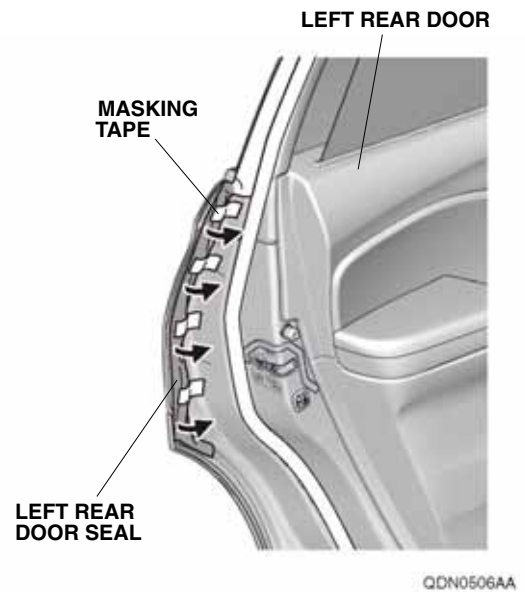


9. Gently place the left rear door edge guard on the left rear door. Align the left rear door edge guard with the contour of the door. Mark the sealant at the top and bottom edges of the left rear door edge guard.

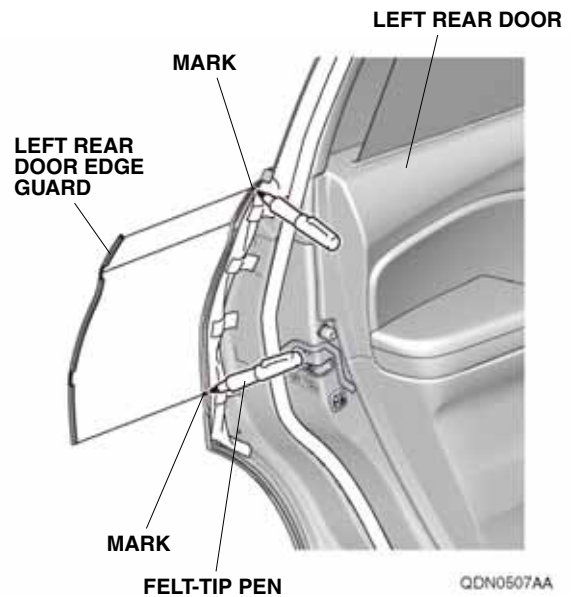


10. Remove the left rear door edge guard.


- Position the cutting edge of the seam sealant cutting tool against the door edge and carefully trim the seam sealant from mark to mark. The cutting tool cuts in one direction only.

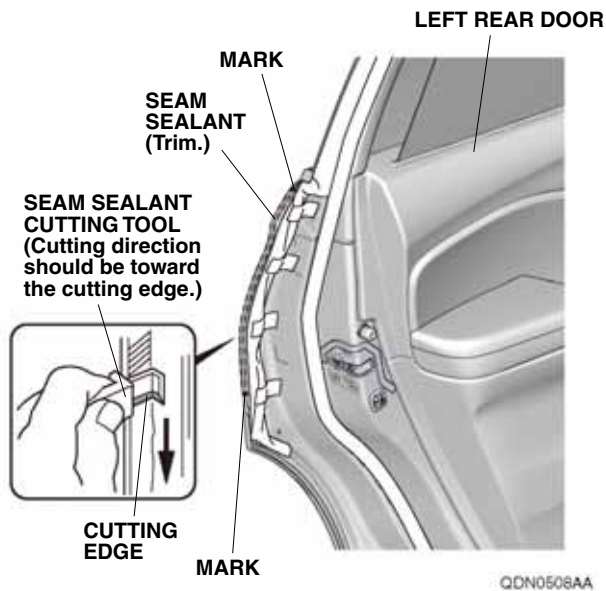

- Apply touch-up paint to the cut seam sealant area, and let it dry thoroughly.
- Repeat steps 8 through 12 on the right rear door.
- Position the left front door edge guard on the left front door edge with the contour of the door.

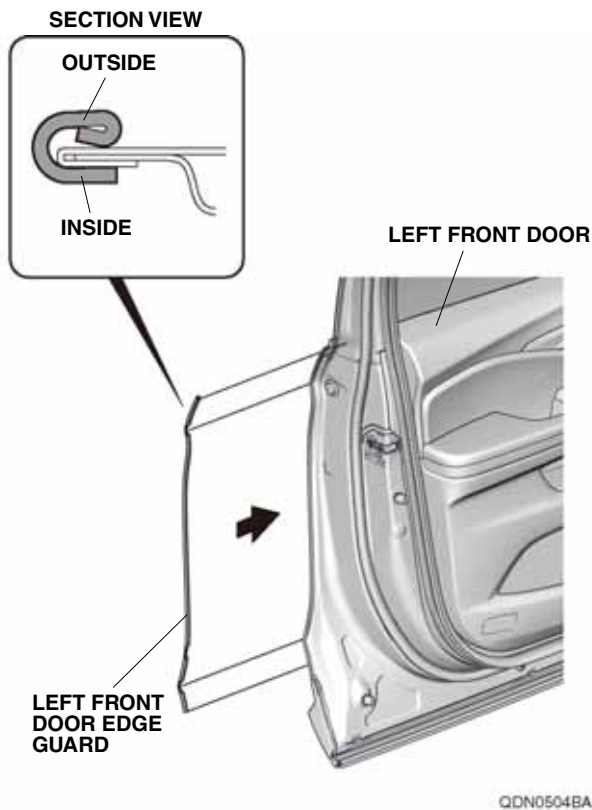


- Starting at the bottom feature line, use a rubber mallet tap the left front door edge guard into position with a series of light taps, then work up and down. Make sure the position of the left front door edge guard is correct. Once in place, do not attempt to remove, reposition, or reinstall the left front door edge guard.

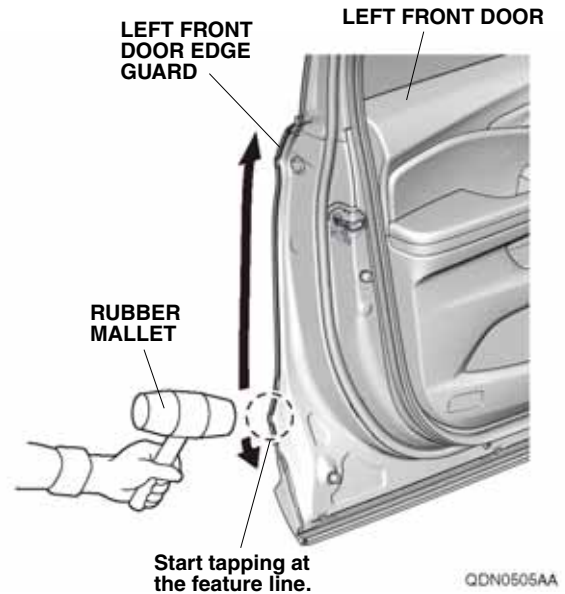


- Repeat steps 14 and 15 to install the right front door edge guard.

17. Position the left rear door edge guard on the left rear door edge with the contour of the door.

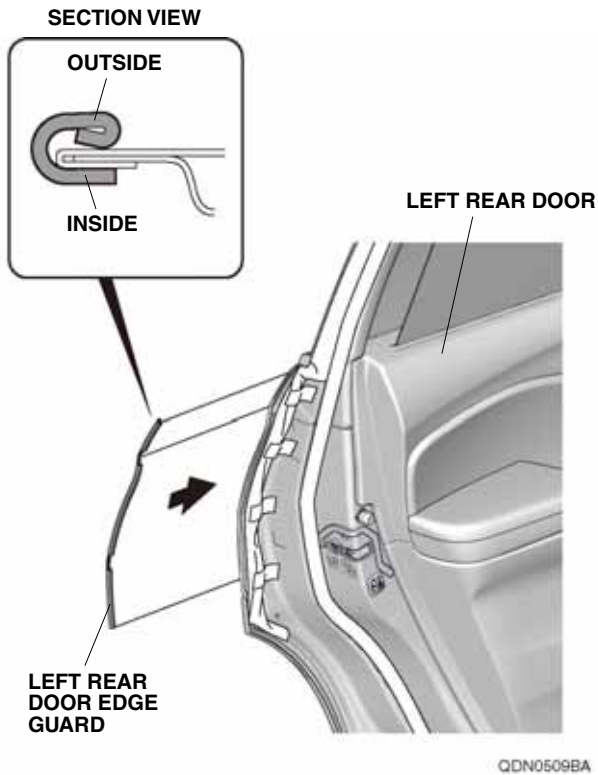

18. Starting at the top feature line, use a rubber mallet to tap the left rear door edge guard into position with a series of light taps, then work up and down. Make sure the position of the left rear door edge guard is correct. Once in place, do not attempt to remove, reposition, or reinstall the left rear door edge guard.

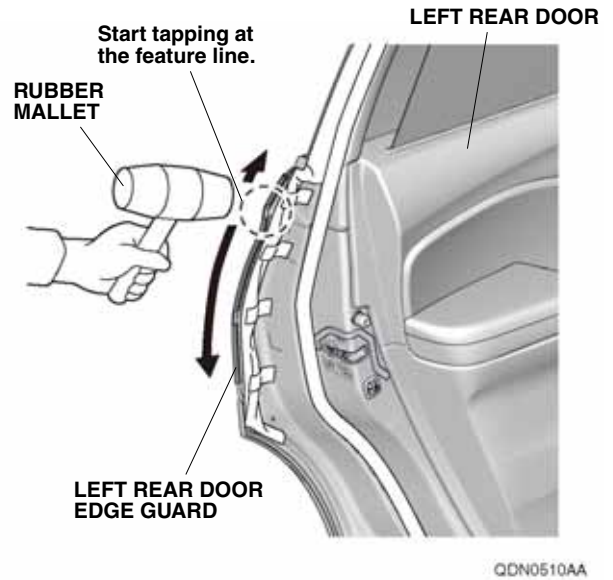

19. Remove the masking tape.
20. Repeat steps 17 through 19 to install the right rear door edge guard.