



INSTALLATION INSTRUCTIONS


Accessory
**WOOD-GRAIN TRIM KIT,
DOOR PANEL**
P/N 08Z03-S0X-100D

Application
2004 ODYSSEY


Publications No.
A11 26035
Issue Date
AUG 2003

PARTS LIST


Driver's side wood-grain switch panel trim

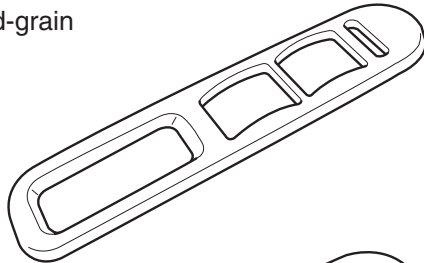

Passenger's side wood-grain switch panel trim

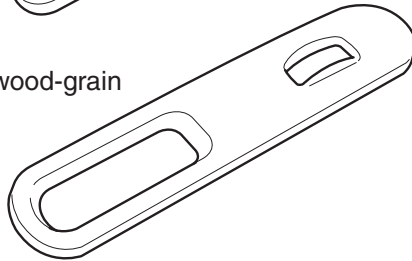

Passenger's side wood-grain vent trim

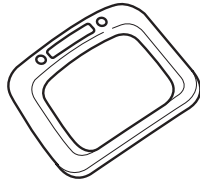

SUPPLIES REQUIRED

Isopropyl alcohol
Shop towel


INSTALLATION

NOTE: This wood panel kit should only be installed if the ambient air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the three trim pieces will attach.


2. Remove the adhesive tape backings from the driver's side wood-grain switch panel trim. Carefully position the wood-grain switch panel trim on the switch panel. Using the palm of your hand, apply pressure on the wood-grain switch panel trim for about 30 seconds.

Driver's Side Switch Panel Trim:

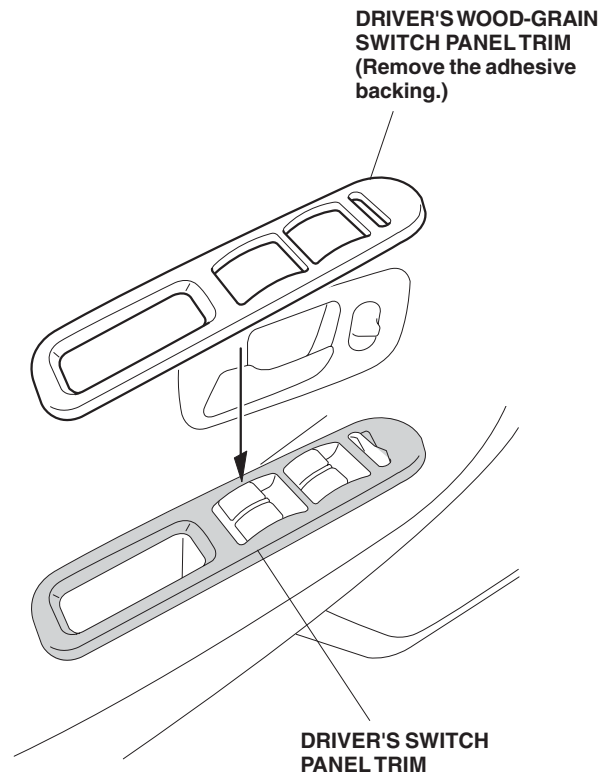

3. Remove the adhesive tape backings from the passenger's side wood-grain switch panel trim. Carefully position wood-grain switch panel trim on the switch panel. Using the palm of your hand, apply pressure on the wood-grain switch panel trim for about 30 seconds

Passenger's Side Switch Panel Trim:

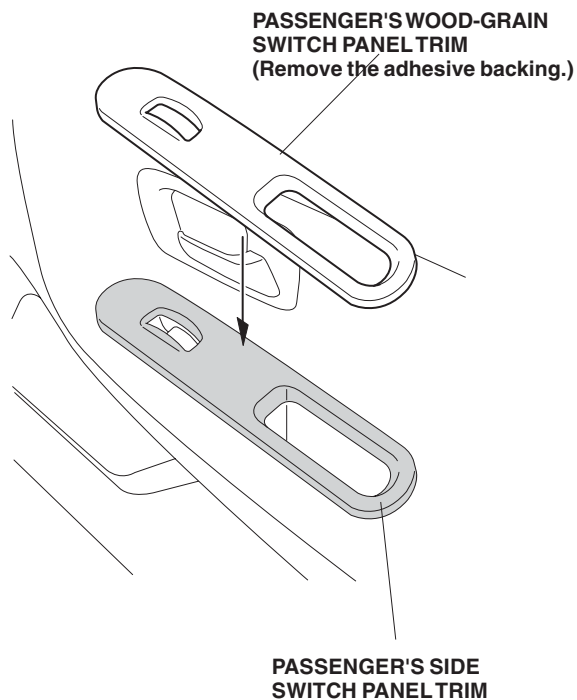

4. Remove the adhesive tape backings from the passenger's side wood-grain vent trim. Carefully position wood-grain vent trim on the vent. Using the palm of your hand, apply pressure on the wood-grain vent trim for about 30 seconds

Passenger's Side Vent Trim:

