



INSTALLATION INSTRUCTIONS

Accessory

WOOD-GRAIN TRIM KIT, RES
P/N 08Z03-S0X-100F

Application

2004 ODYSSEY

Publications No.


All 26039

Issue Date

AUG 2003

PARTS LIST

Monitor trim

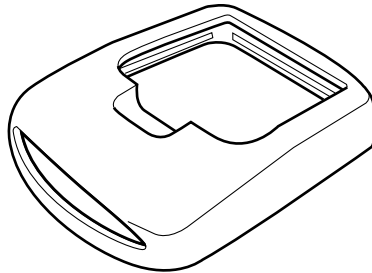

SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel


Masking tape

INSTALLATION

NOTE: This monitor trim should be installed only if the outside air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the monitor trim will be attached.
2. Attach a strip of masking tape to the end of each outer adhesive backing, and remove 2 to 3 inches of the adhesive backing. Fold the ends back, and tape them to the front of the trim. If necessary, remove and discard the inner adhesive backings.
3. Position the trim on the existing panel. While applying light pressure on the trim, carefully remove the adhesive backings.
4. After installing the trim, use the palm of your hand to hold pressure against it for 30 seconds.

TRIM ATTACHING SURFACE
Clean with isopropyl alcohol.

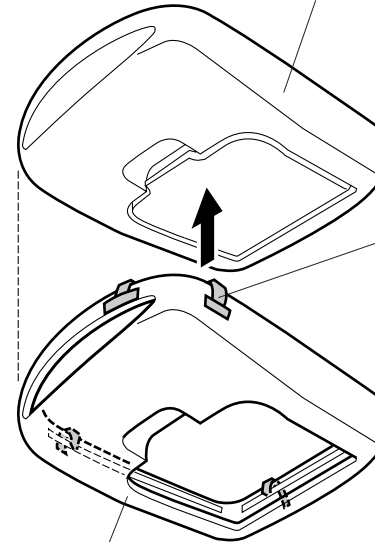

OUTER ADHESIVE BACKING
Remove 2 to 3 inches from the end, and tape it to the front of the trim.

MONITOR TRIM

USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing compounds to clean the monitor trim as they may damage the surface.