



# INSTALLATION INSTRUCTIONS

Accessory

FENDERWELL TRIM  
P/N 08P21-SDN-100

Application

2006 ACCORD  
2-DOOR

Publications No.

All 30219


Issue Date

SEP 2005


**NOTE:** This accessory *cannot* be installed on a vehicle equipped with a full, or half nose mask.

## PARTS LIST


Left front fenderwell trim

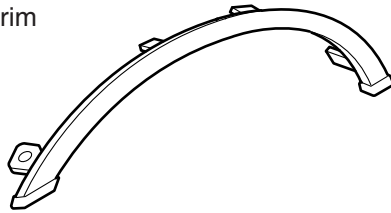


Right front fenderwell trim

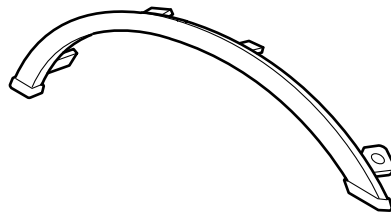


Left rear fenderwell trim

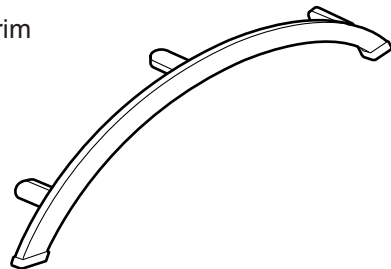

Right rear fenderwell trim

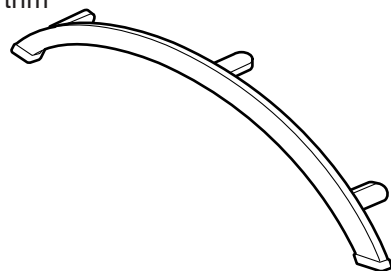

2 Inner protectors

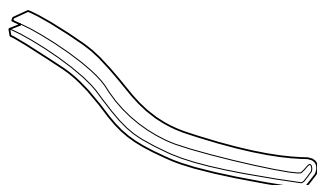

## TOOLS AND SUPPLIES REQUIRED

Clip Remover

Flat-tip screwdriver

Pliers

Diagonal cutters

Rubber mallet

File

Shop towel

Liquid dishwashing soap and water


## INSTALLATION

**NOTE:**


- These instructions show the left fenderwell trim being installed. The same procedure applies to installing the right fenderwell trim.
- The fenderwell trim is identified by a label attached to the inside surface.
- Clean the area to be covered, and wax it with a high-quality paste wax.

### Installing the Front Fenderwell Trim

1. Using a clip remover, remove the four expansion clips and one self-tapping screw securing the inner fender.

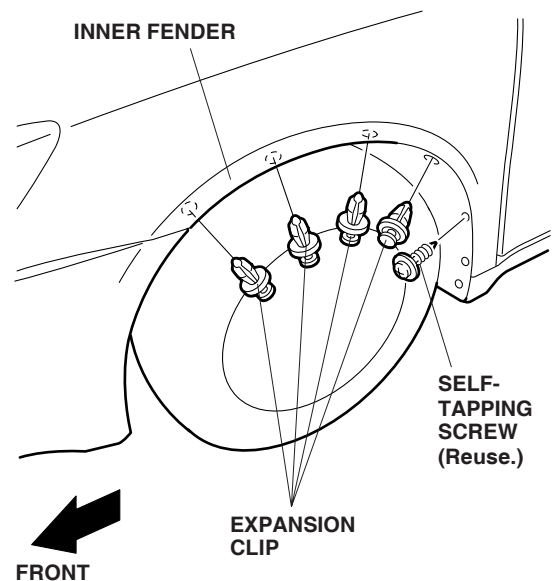


2. Pull the inner fender down, and position the left front fenderwell trim between the inner fender and the fender flange. Align the fenderwell trim with the front bumper as indicated by the arrow.

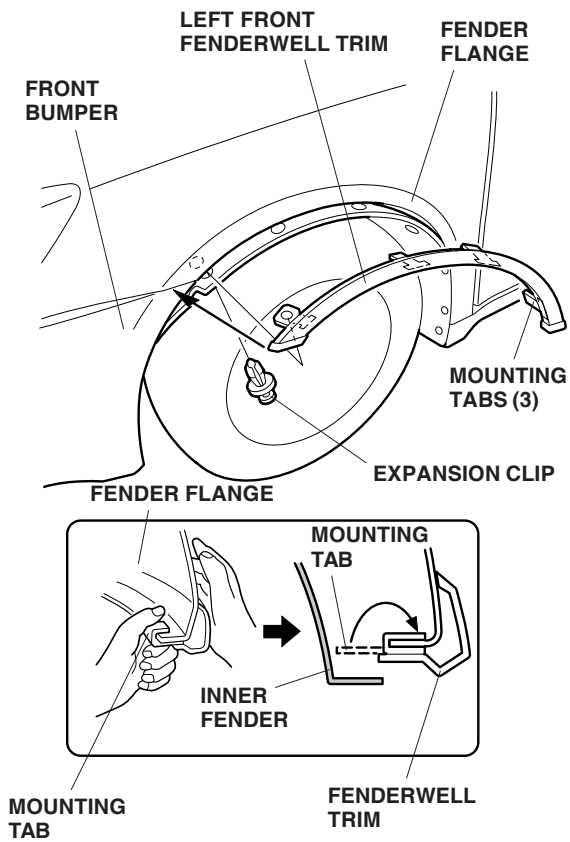


3. While holding the fenderwell trim firmly against the fender, squeeze the three mounting tabs around the fender flange as shown.
4. Attach the front of the fenderwell trim and the inner fender to the front fender with one of the expansion clips removed in step 1.
5. Reinstall the remaining three expansion clips and one self-tapping screw to secure the inner fender.
6. Repeat steps 1 thru 5 to install the right front fenderwell trim.

### Installing the Rear Fenderwell Trim


7. Using diagonal cutters, remove 50 mm from the end of each inner protector. File the cut edge smooth.

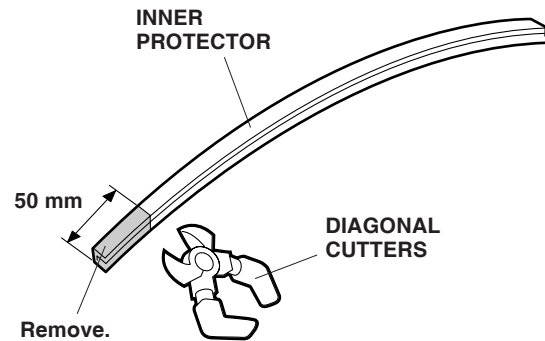

8. Position the left rear fenderwell trim on the fender flange, and align the rear end of the fenderwell trim with the rear bumper. Hold the fenderwell trim firmly against the fender, and bend the three mounting tabs around the fender flange. If necessary, use pliers over a shop towel to bend the mounting tabs around the fender flange.

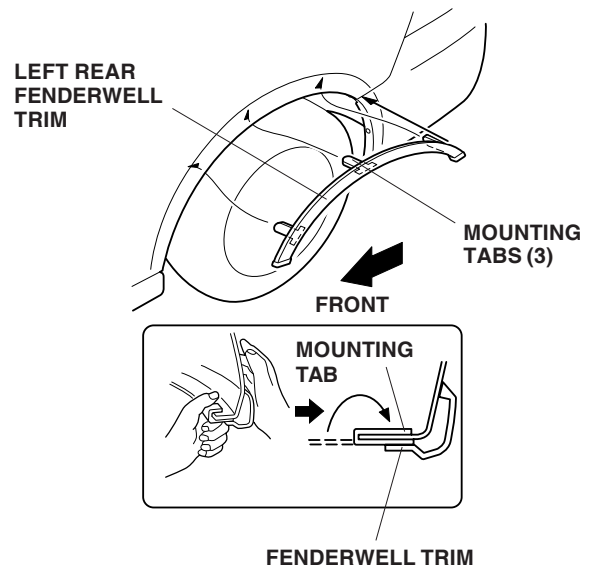

9. Fill the cavity of the inner protector with dishwashing soap and water solution as a lubricant, then drive the inner protector over the fender flange and fenderwell trim using a rubber mallet. Note the direction of the inner protector.

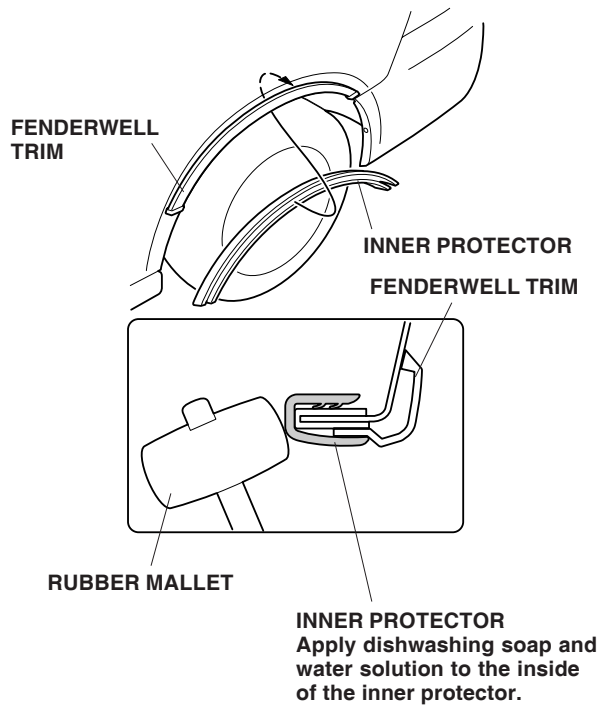

10. Repeat step 8 and 9 to install the right rear fenderwell trim.