
	Accessory	Application 2006 CIVIC	Publications No. All 29209
INSTALLATION	SPLASH GUARDS	4-DOOR	Issue Date SEP 2005
PARTS LIST		TOOLS REQUIRED Stubby Phillips screwdriver Phillips screwdriver	
Left front splash guard		Clip remover Pushpin Utility knife	
Right front splash guard		INSTALLATION NOTE:	
		<ul> <li>These instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.</li> </ul>	
		<ul> <li>Clean and wax the areas to be high-quality paste wax.</li> </ul>	covered with a
Left rear splash guard		Installing the Front Splash Guards	
		1. Turn the steering wheel all th counterclockwise.	e way
		2. Using a pushpin, make small holes through the center of the three clips.	
Right rear splash guard			LEFT FRONT INNER FENDER
8 Self-tapping screws, 5 x 20 mm			
4 Self-tapping screws, 5 x 25 mm		PUSHPIN	
4 Spring nuts			CLIP
2 Grommets			


3. Position the left front splash guard on the left front inner fender, and install the three 5 x 20 mm self-tapping screws. Tighten the three self-tapping screws in the order shown.

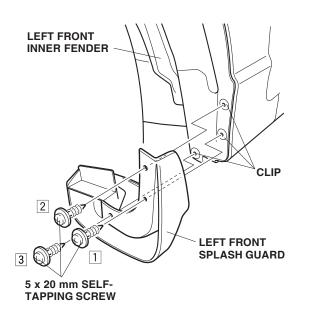


4. Turn the steering wheel all the way clockwise, and repeat steps 2 and 3 to install the right front splash guard.

## Installing the Rear Splash Guards


5. If equipped, remove and discard the left rear inner fender (two self-tapping screws and one clip).

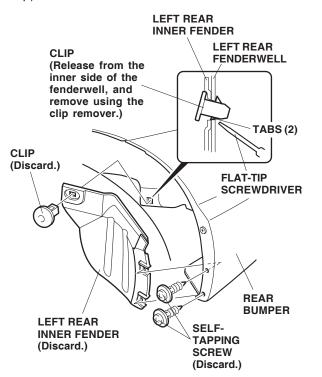

6. Install one grommet into the hole in the left rear fenderwell. Slide two spring nuts over the holes in the rear bumper.

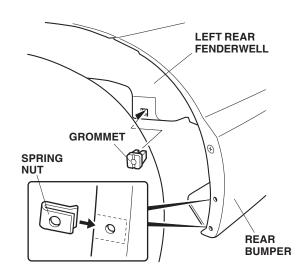

- 7. Position the left rear splash guard on the left rear fenderwell and rear bumper, then install the two 5 x 25 mm self-tapping screws and one 5 x 20 mm self-tapping screw. Tighten the three self-tapping screws in the order shown.
  - Cut off any excessive undercoat material with a utility knife.

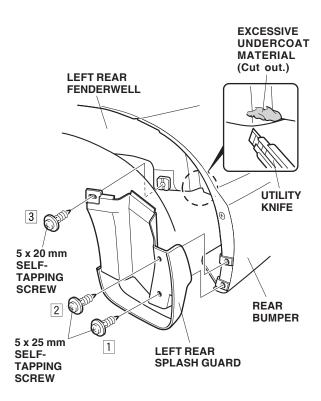

8. Repeat steps 5 through 7 to install the right rear splash guard.