

HONDA INSTALLATION INSTRUCTIONS


Accessory
CARGO NET
P/N08L96-SWA-100

Application
2007 CR-V

Publications No.
All 32965
Issue Date
SEP 2006

PARTS LIST

Cargo net

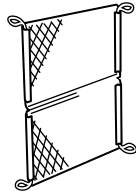


4 Snaps



INSTALLATION

Installation in the Vertical Position:

Fold the cargo net and attach the four snaps on the cargo net as shown.

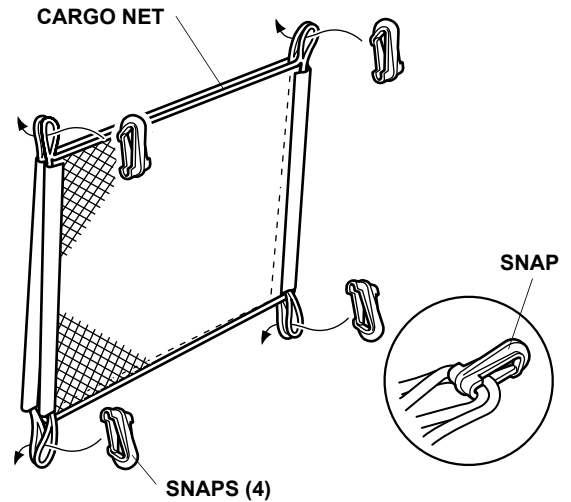

Installation in the Horizontal Position:

Attach the snaps to the tie-down hooks in the cargo area.

