

INSTALLATION **INSTRUCTIONS**

Accessory

SIDE UNDER SPOILER

Application


2007 ODYSSEY

Publications No.

All 33187


Issue Date **JULY 2006**

1. Open the front and rear doors. Remove the selftapping screw that fasten the left side sill panel to the left front inner fender. Slide the side sill panel Left side under spoiler forward, then remove it by pulling it out toward

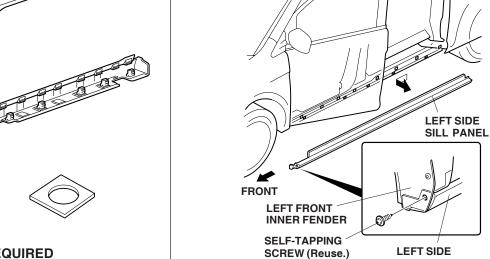


Remove the 13 clips from the side sill by turning them 45°.


SILL PANEL

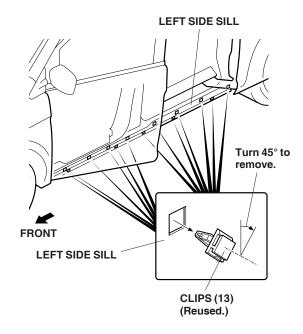

PARTS LIST



Right side under spoiler



26 Seals

TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver Blanket

INSTALLATION


NOTE:

- To prevent damage, place a blanket under the side under spoilers during installation.
- These instructions show the left side under spoiler being installed. The same procedure applies to installing the right side under spoiler.
- Optional splash guards cannot be used with the side under spoilers.


3. On the inside of the new under spoiler, install the 13 clips you removed to the holders through the cutout as shown. Make sure the clips fit properly in the cutouts.

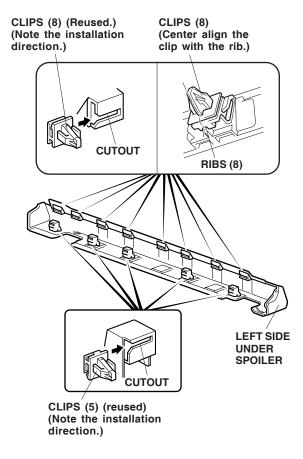


4. Remove the old seals from the 13 clips, and install the new seals from the kit.

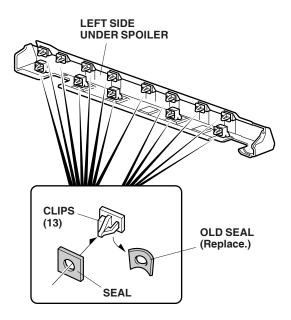

5. Position the left side under spoiler on the body under the front inner fender, and push the clips you just installed into the square holes in the body. Use the palm of your hand to click all 13 clips into place.

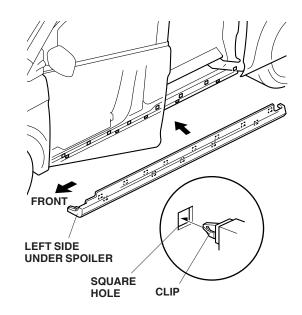

6. Reinstall the self-tapping screw removed in step 1.

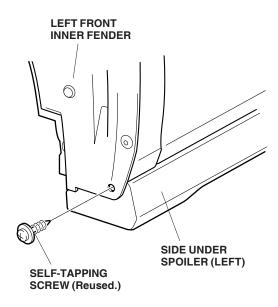

7. Repeat steps 1 thru 6 to install the right side under spoiler.