



INSTALLATION INSTRUCTIONS

Accessory
CD CHANGER ATTACHMENT


Application
2008 CIVIC 2-DOOR Si

Publications No.
All 37826
Issue Date
SEP 2007


PARTS LIST

**CD Changer Attachment (sold separately):
P/N 08B26-SVA-100**

CD changer bracket

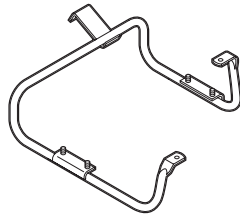


2 Side brackets



3 Clip nuts



3 EPT seals




3 Washer-bolts




4 Flange nuts




15 Wire ties




2 Wire ties with clip



9 Cushion tapes



BUS cable

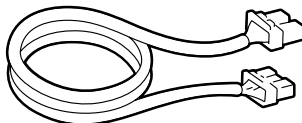


4 Washer screws




**CD Changer Kit (sold separately):
P/N 08A26-5E1-100**


CD changer

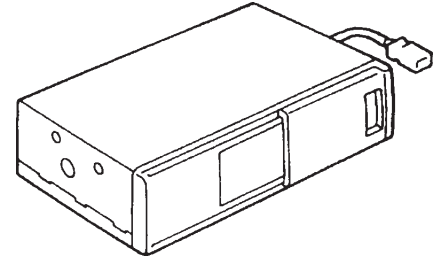

Bracket

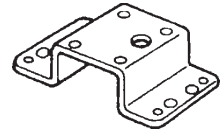


8-Disc CD magazine

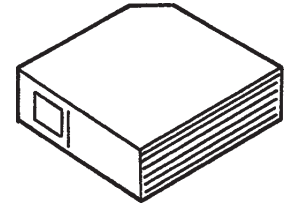

8 Washer-screws, 4 x 6 mm




Accessory User's Information Manual

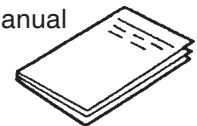

If equipped with XM® radio system

**Bus Cable 2 Port (sold separately):
P/N 08A31-0F1-000**


BUS cable 2 Port

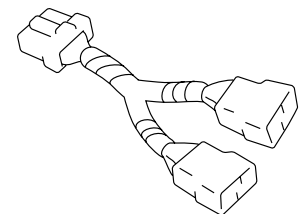

TOOLS REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Stubby Phillips screwdriver
8 mm, 10 mm, and 14 mm Combination wrenches
Clip remover
8 mm, 10 mm, and 14 mm Sockets
Ratchet
Small flat-tip screwdriver
Contact cleaner
Shop towel
Masking tape

Illustration of the CD Changer Installed on the Vehicle

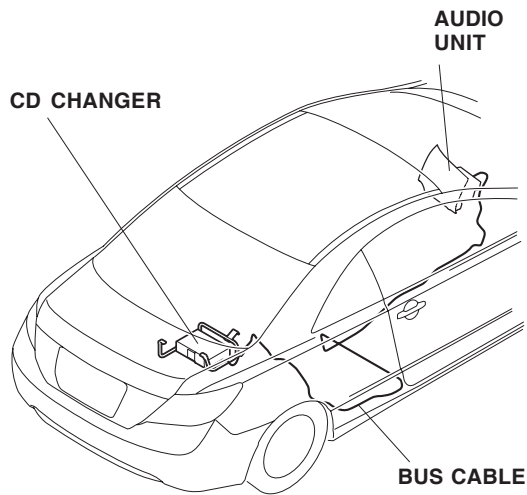


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Make sure you have the anti-theft codes for the radio and navigation system (if equipped), then write down the radio station presets.
2. Disconnect the negative cable from the battery.


3. Remove the passenger's dashboard lower cover (four clips and two pins).

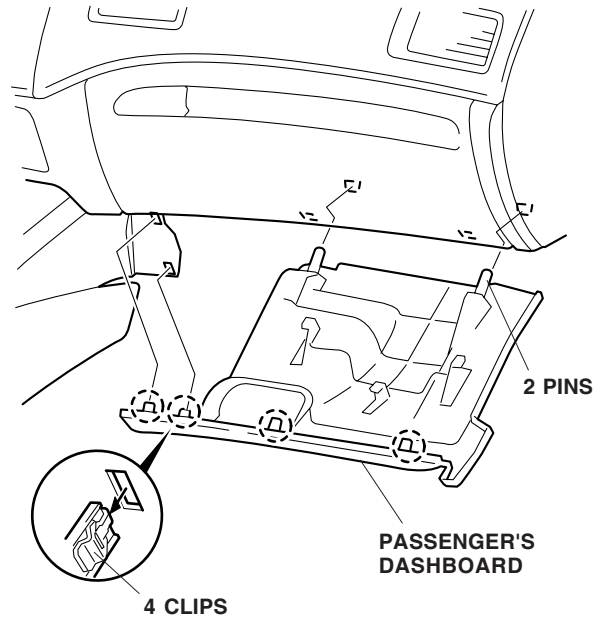

4. Remove the driver's dashboard lower cover (eight clips).

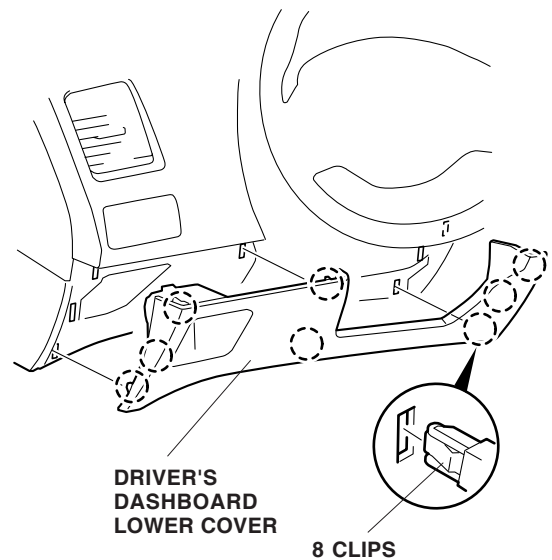


- Remove the inside cover from the front console pocket (two tabs).

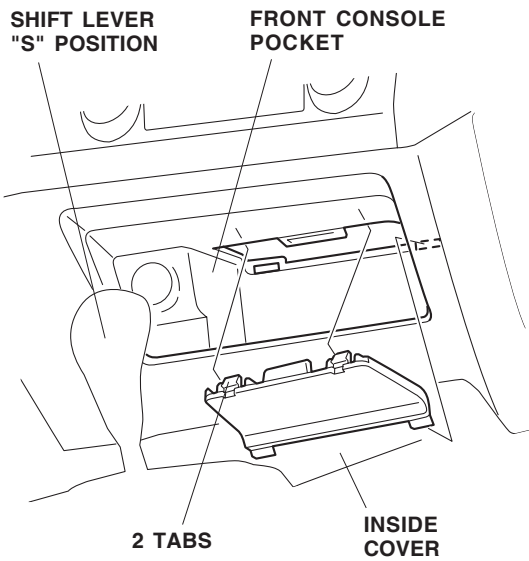


5202130T


- Lower the steering wheel lever and pull the steering toward you.

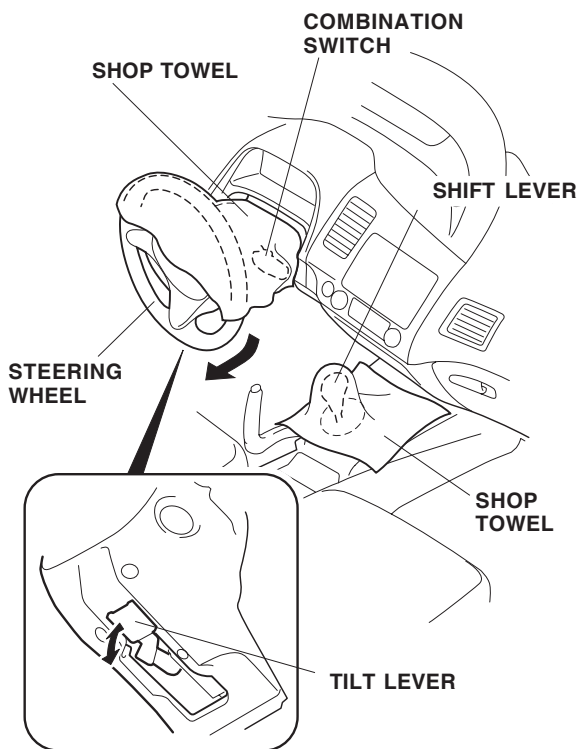


- To protect the dashboard area, place a shop towel over the steering wheel and shift lever.
- Apply masking tape to the instrument panel as shown, and remove the instrument panel (one self-tapping screw, 11 clips, and one connector).

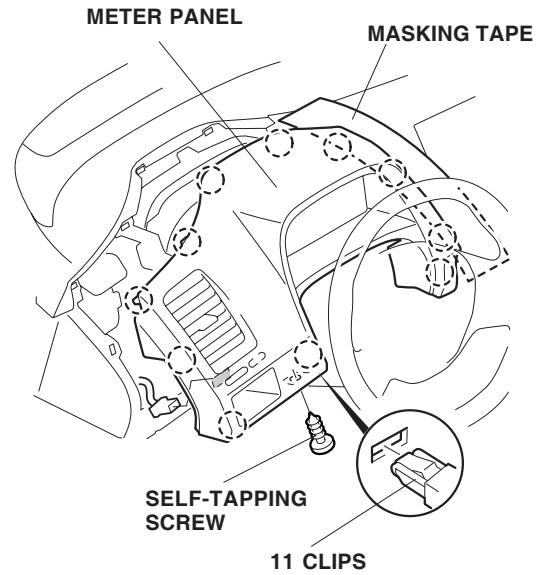

- Apply masking tape to the instrument panel as shown, and remove the center panel (two bolts, 10 retaining clips, and unplug the vehicle connectors).

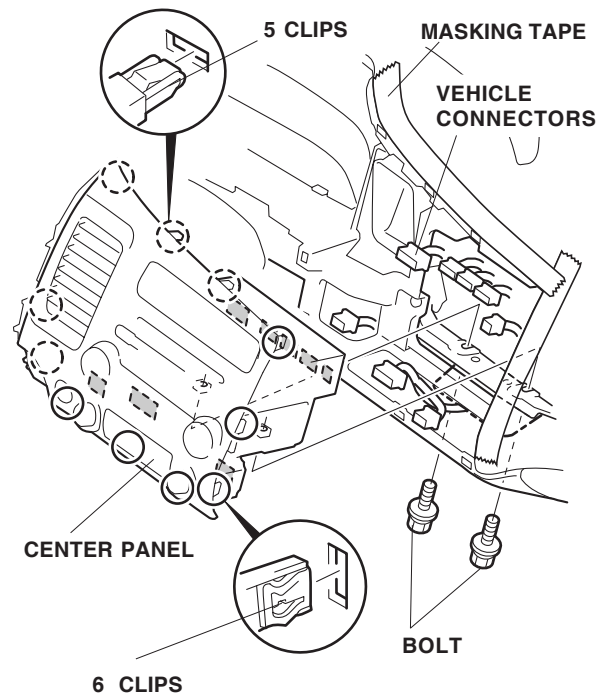


10. Remove the two seat track end covers from the rear side of the passenger's seat, then remove the two bolts that secure the passenger's seat.

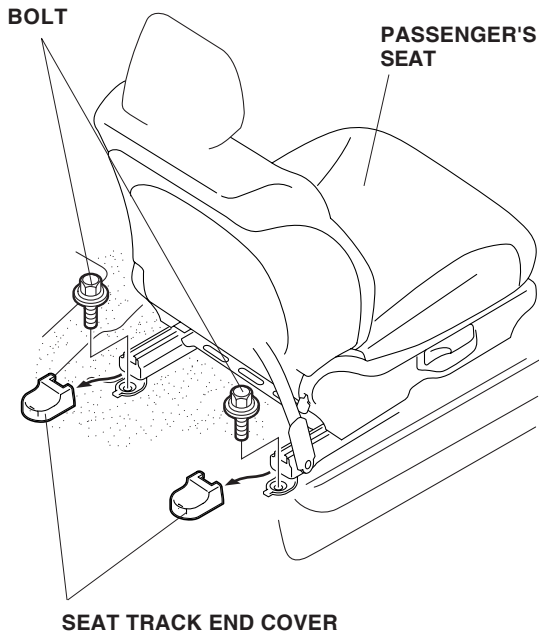


11. Remove the center console cover:

M/T Vehicle

- Pull down on the shift boot. Remove the shift knob by turning it counterclockwise.

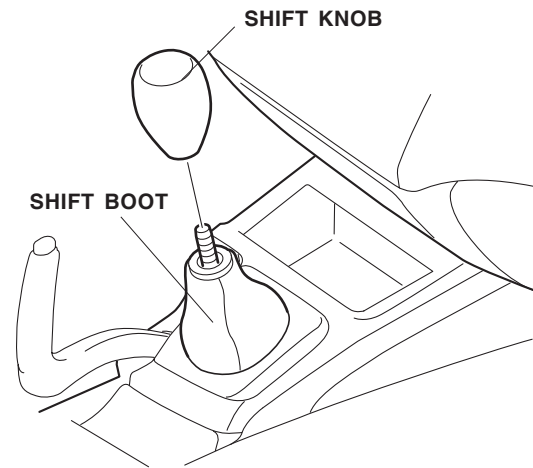


- Remove the center console cover by removing the five clips fastening the center console cover.

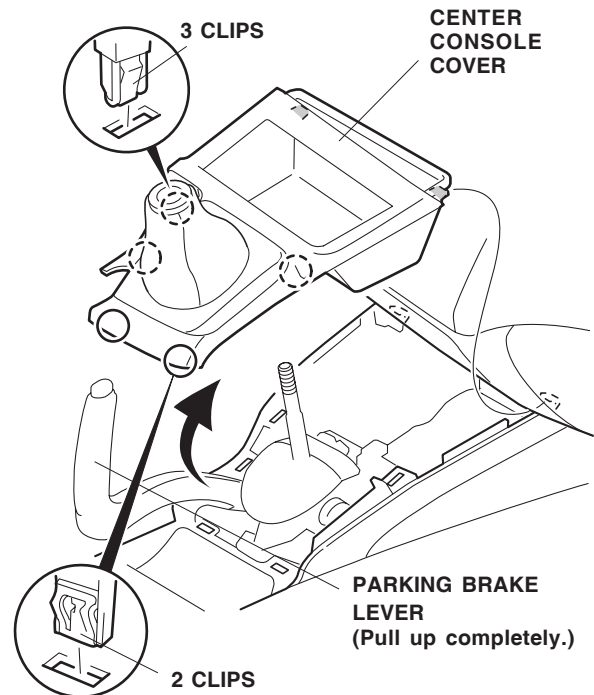


A/T Vehicle

- Remove the center console cover (five clips).

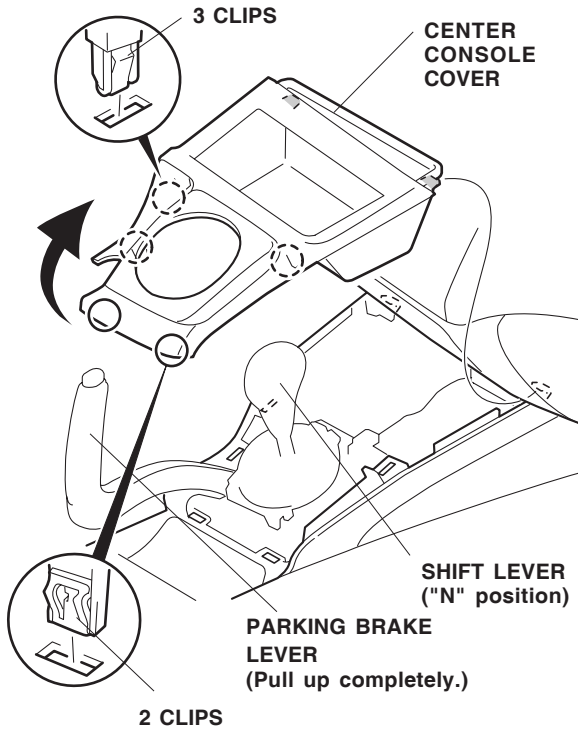


12. Open the center console lid, and remove the mat.

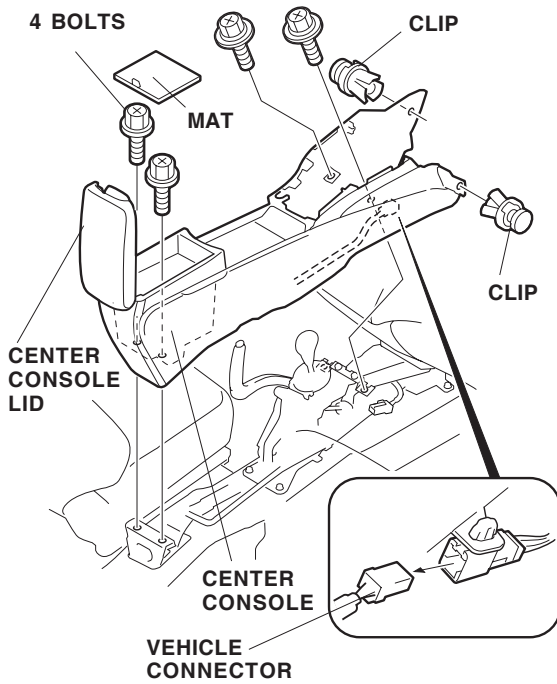


13. Remove the center console (four bolts, two clips, and the vehicle connector).


14. Inside the passenger's compartment area, remove the rear seat cushion by removing the bolt and releasing the two hooks.

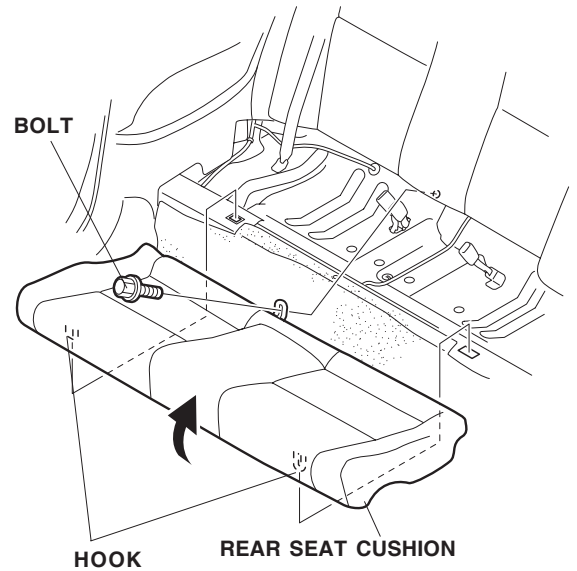


15. Open the trunk lid, and fold the rear seatback forward by pulling the levers under the rear parcel shelf. Remove the trunk floor mat (two clips).

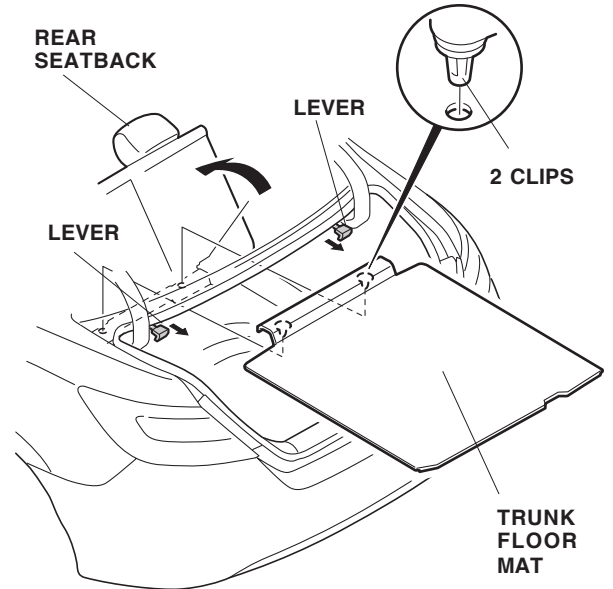

16. Remove the trunk weatherstrip from the edge of the trunk opening in the area shown.

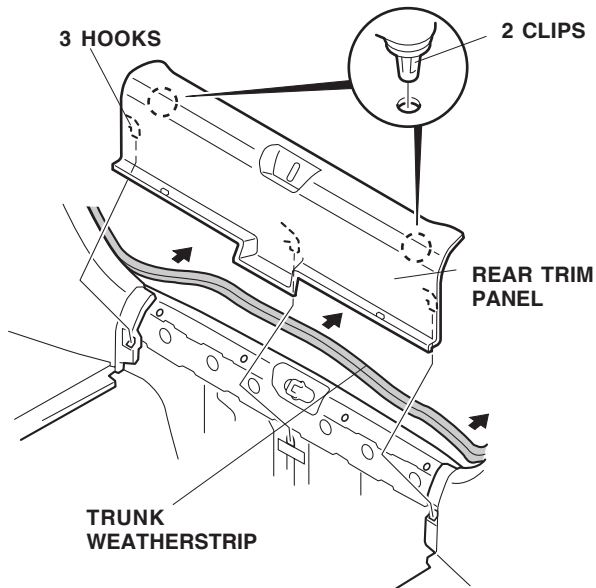


17. Remove the rear trim panel (two clips and three hooks).
18. Continue removing the weatherstrip in the area shown. Remove the five clips, then pull out on the right trunk side trim panel in the direction shown.

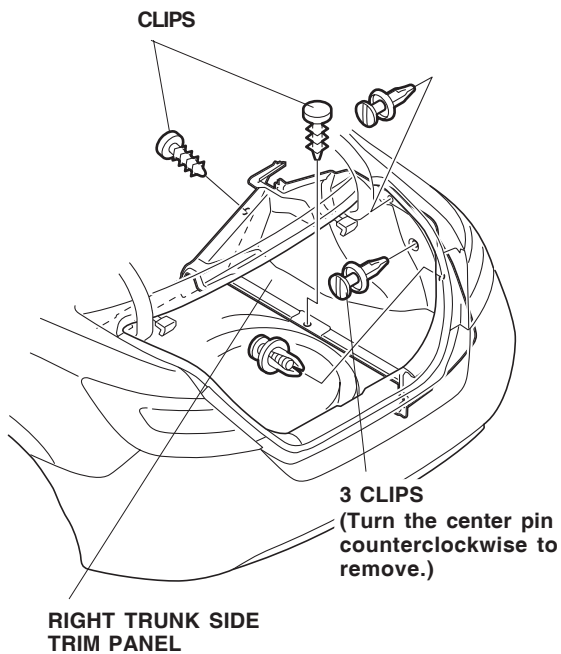


Routing the BUS Cable


19. Route the BUS cable from the trunk along the vehicle harness.

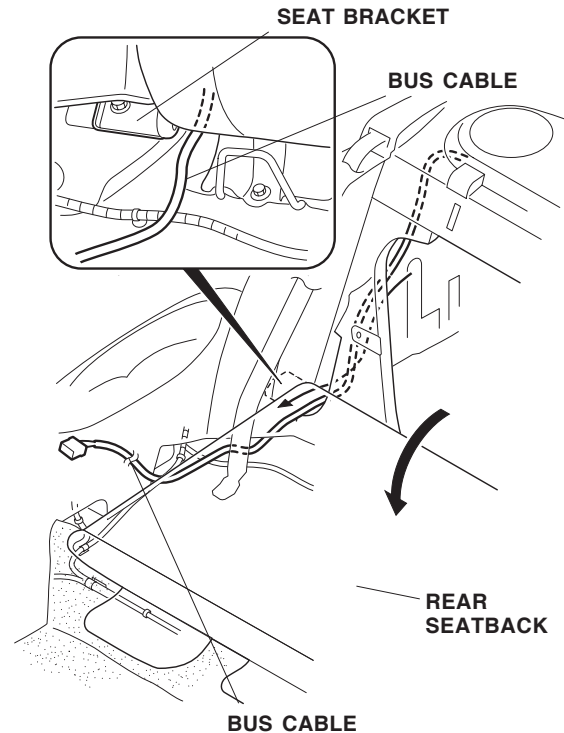


20. Lift up and lock the right rear seatback, then remove the clip that secures the floor carpet. Pull back the floor carpet

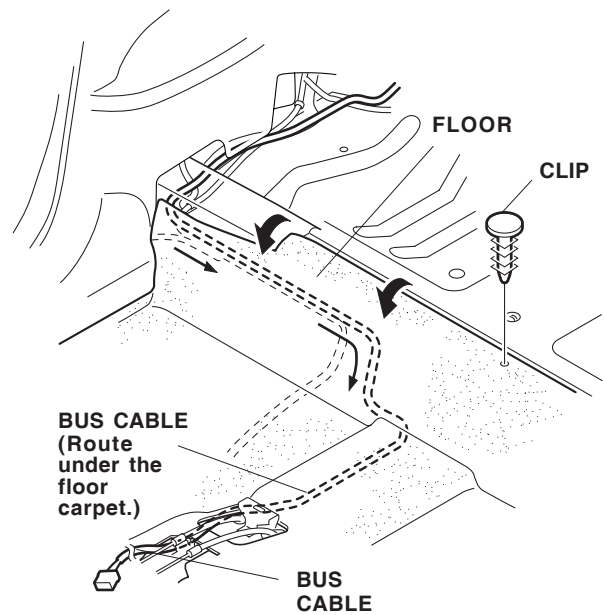


21. Route the BUS cable forward to the right front console frame along the vehicle harness.

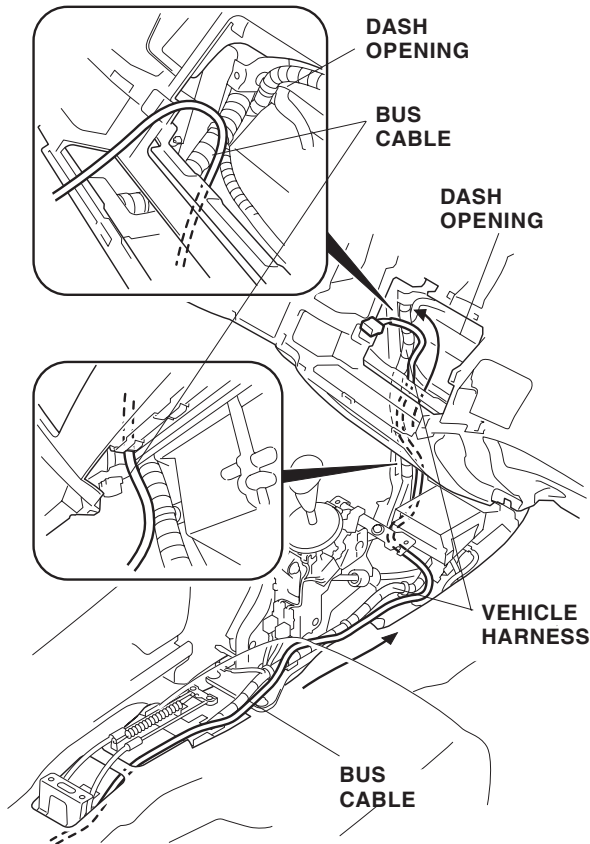

22. Continue routing the BUS cable towards the dashboard and out through the dash opening.
23. Measure 300 mm from the end of the BUS cable, then secure the BUS cable to the vehicle harness with four wire ties in the areas shown.

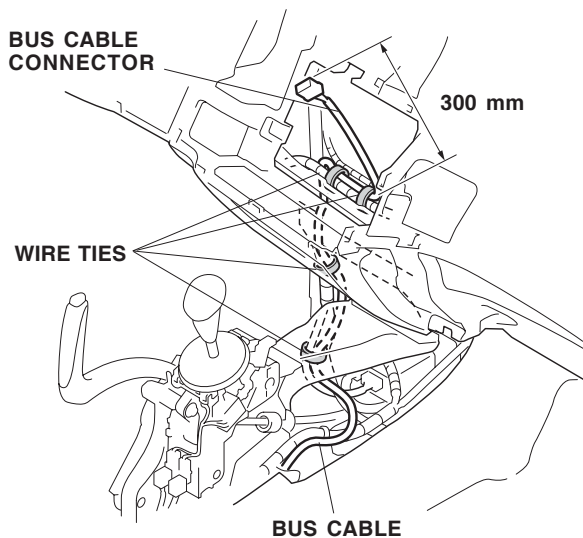


24. Along the center console area, secure the BUS cable to the vehicle harness with three wire ties.

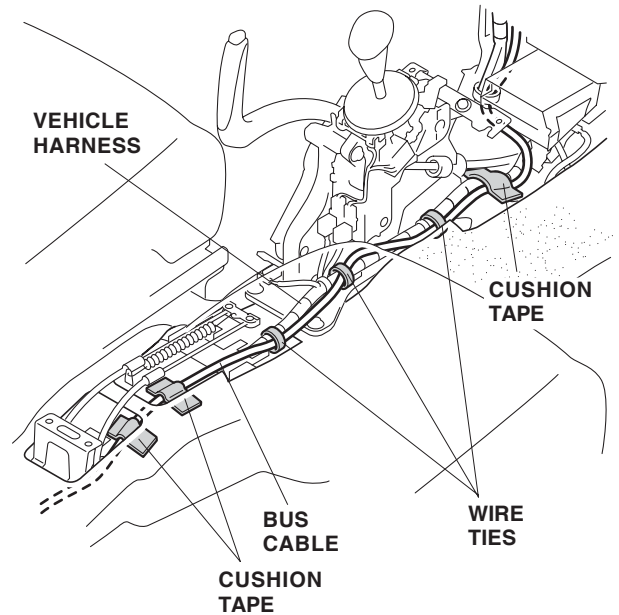


25. Using isopropyl alcohol on a shop towel, clean the areas where the cushion tape will attach. Attach the BUS cable to the floor panel with the three cushion tapes in the area shown.

26. Pull back the floor carpet, then attach the BUS cable to the floor panel with the two cushion tapes in the areas shown.
27. Secure the BUS cable to the vehicle harness with the three wire ties in the areas shown.

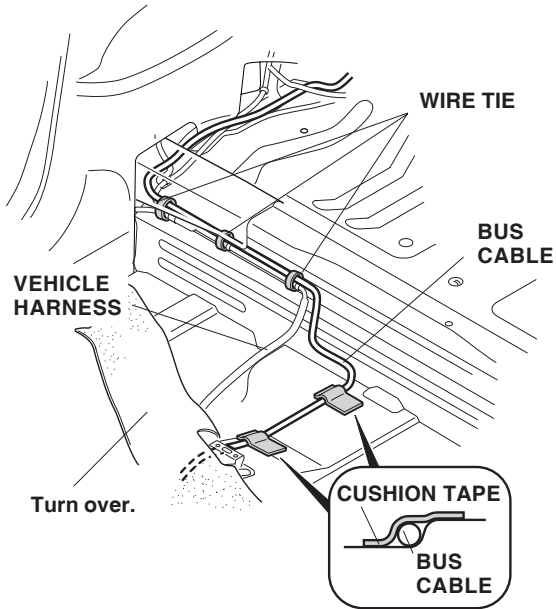


28. Secure the BUS cable to the vehicle harness with the two wire ties in the areas shown.
29. Attach the BUS cable to the floor panel with the three cushion tapes in the areas shown.

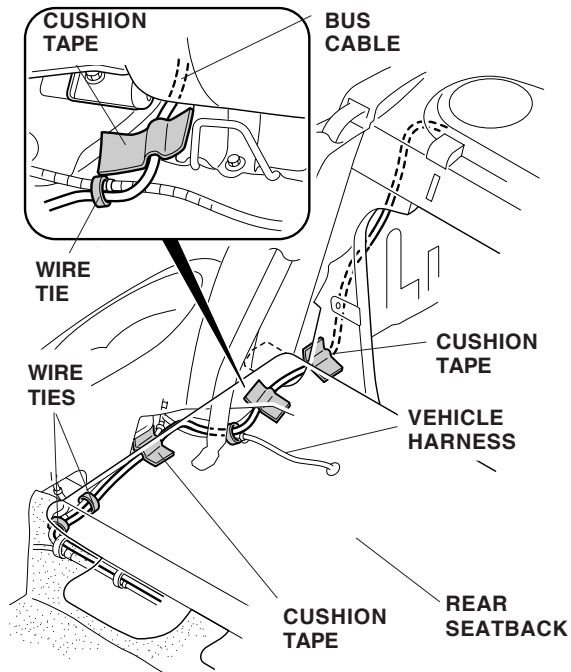


Installing the CD Changer


30. Using a flat-tip screwdriver, set the adjustment knobs in the "H: HORIZONTAL" position.

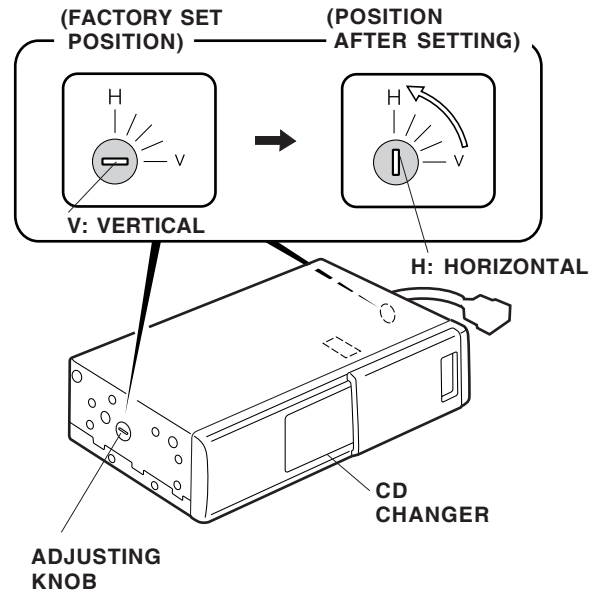


31. Position the CD changer brackets on the sides of the CD changer, then install the four 4 x 8 mm washer-screws.

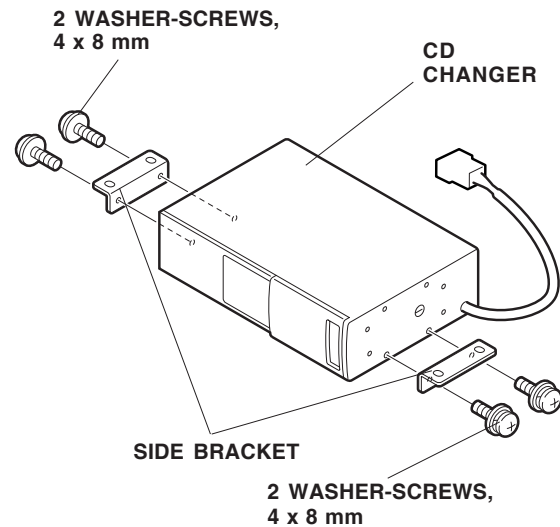


32. Position the CD changer on the CD changer bracket, then install and tighten the four 6 mm flange nuts.

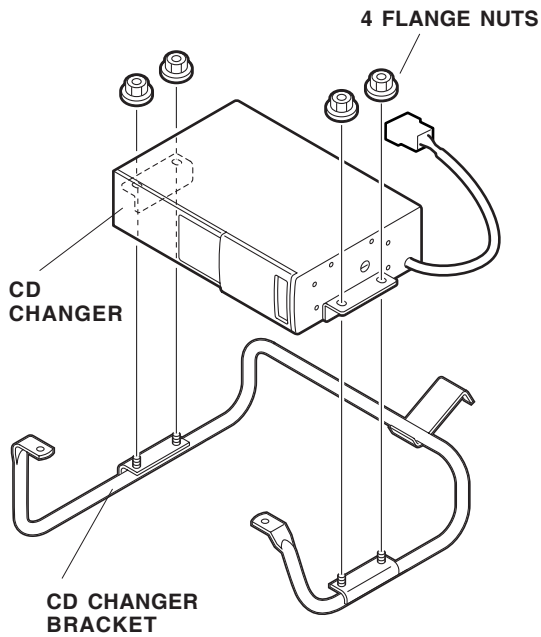

33. Wrap one EPT sealer around the BUS cable connector from the CD changer, then secure the BUS cable and connector to the CD changer bracket with two wire ties.

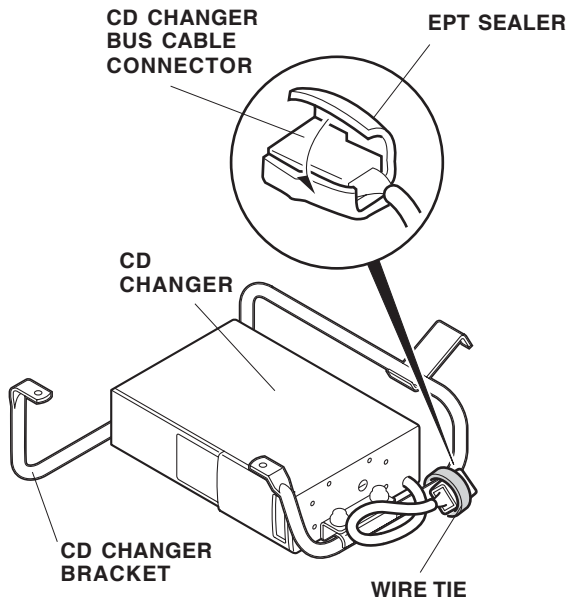


34. In the trunk, slide the clip nut into position on the rear seat panel through the hole in the panel. If necessary, spread the clip nut open with a small flat-tip screwdriver.

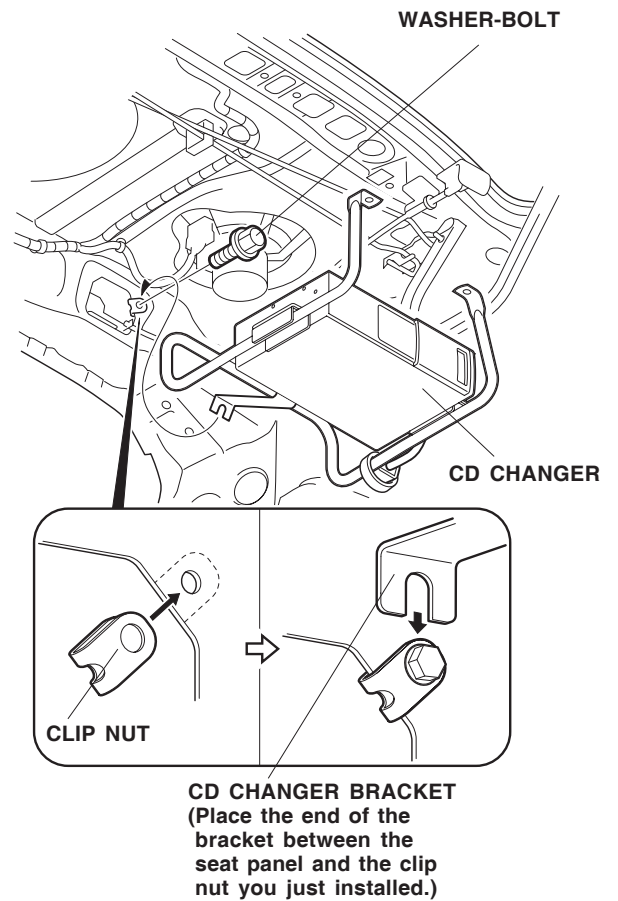


35. Loosely install the washer-bolt to the rear seat panel first. Place the end of the CD changer bracket between the seat panel and the clip nut you just installed.


36. Slide the two clip nuts onto the CD changer bracket and parcel shelf through the holes in the parcel shelf, and align their holes as shown. Install the two washer-bolts and tighten them securely.

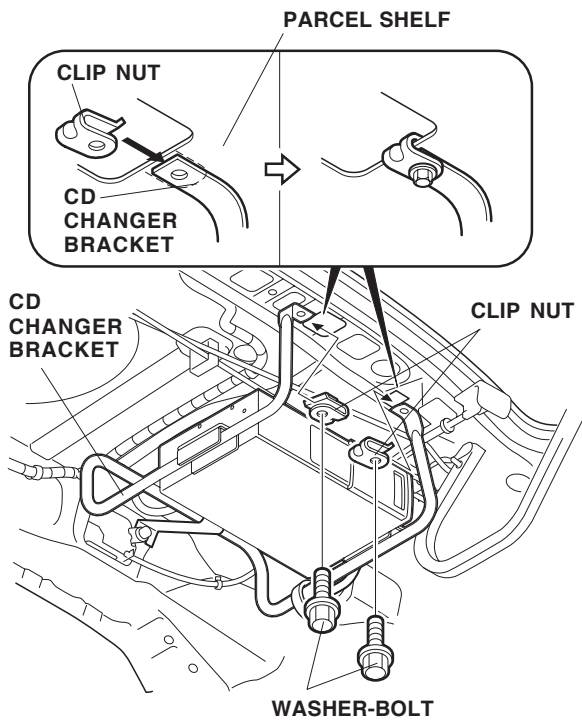

37. Connect the BUS cable connector to the connector on the CD changer.

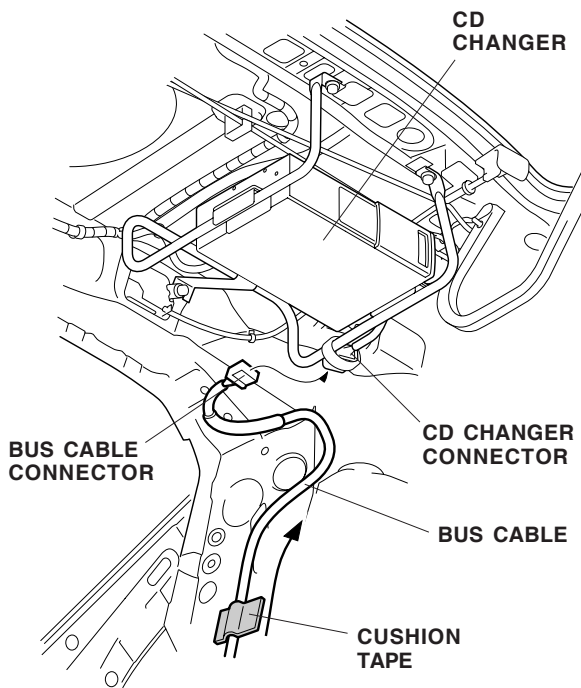


38. Fold the excess BUS cable, and secure the BUS cable to the holes in the rear seat panel with the two wire ties with clip.

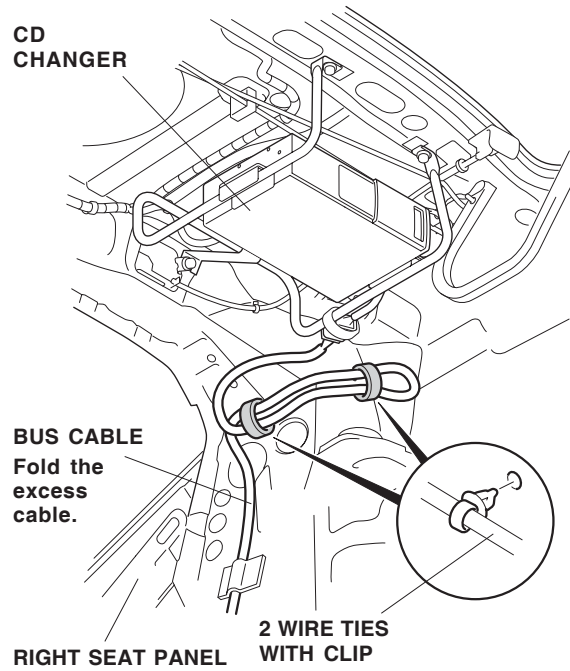

If the vehicle you're working on is equipped with XM radio, continue with step 39; otherwise, go to step 41.


39. Plug the BUS cable 2-port connectors to the two BUS cables.

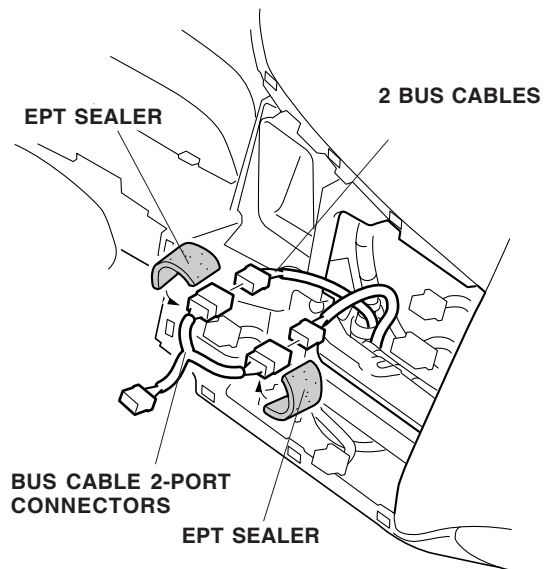


40. Wrap the two connectors with two EPT sealers.

41. Plug the BUS cable connector into the rear of the head unit.


Standard Audio Unit

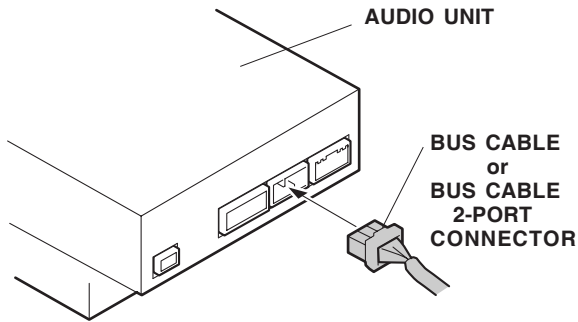


Multi-Control CD Tuner Unit

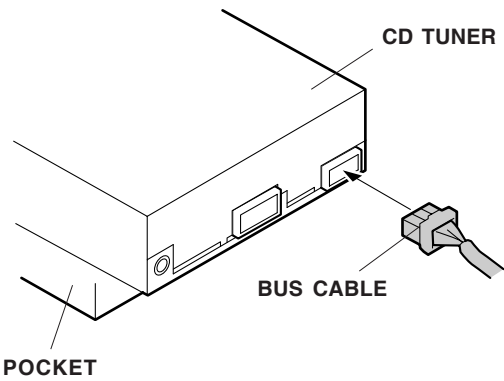


CD Tuner With Cassette Player

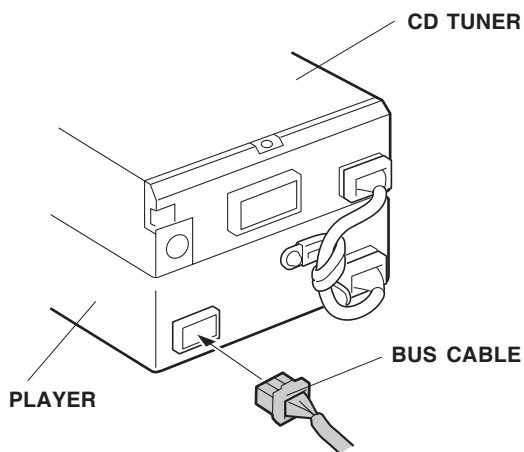


CD Tuner With Media Player

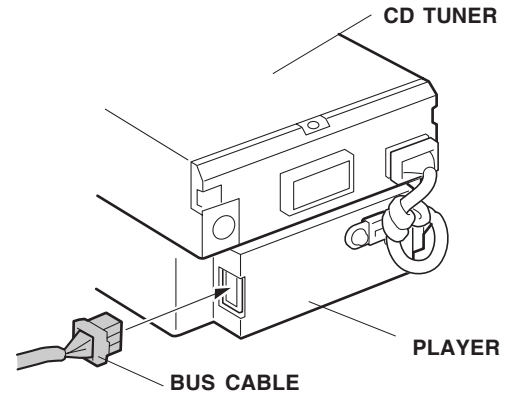

Navigation Head Unit

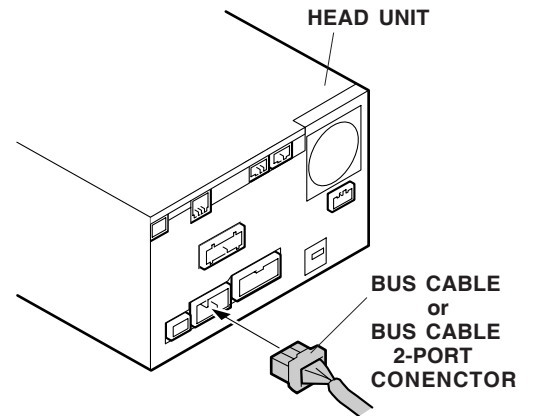

42. Connect the vehicle connectors to the center panel, and reinstall the center panel.

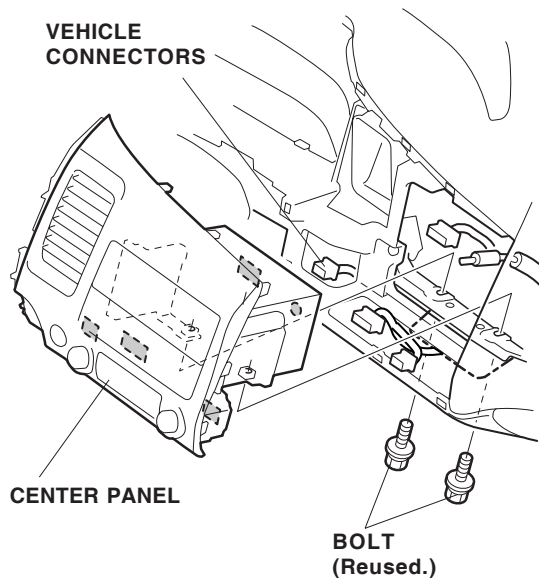

43. Check that all wire harnesses are routed properly and all connectors are plugged in.
44. Reconnect the negative cable to the battery.
45. Check the operation of the CD changer as described in the Accessory User's Information Manual supplied.
46. Reset the clock.
47. Enter the customer's radio and navigation (if equipped) anti-theft codes, and reset the radio station presets.
48. Reinstall all removed parts.
49. Put the CD changer Accessory User's Information Manual in the glove box for your customer.

NOTE: When the battery is disconnected, the driver's window AUTO function is disabled.

- Start the engine. Push down on the driver's window switch until the window is fully open.
- Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
- Lower and raise the driver's window to check operation of the driver's window AUTO function.