



PARTS LIST

Exhaust pipe finisher



Flange bolt




TOOLS AND SUPPLIES REQUIRED

Ratchet wrench

10 mm Socket

Illustration of the Exhaust Pipe Finisher on the Vehicle

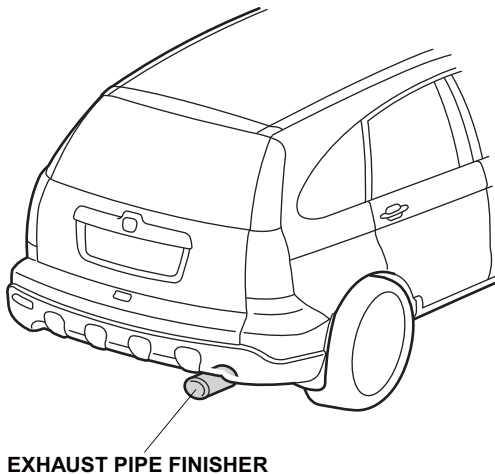


INSTALLATION


NOTE:

- Allow the exhaust pipe to cool down before you install the exhaust pipe trim.
- These instructions show the right exhaust pipe trim being installed. The same procedure applies to installing the left exhaust pipe trim.

1. Partially thread the supplied flange bolt into the new exhaust pipe trim.

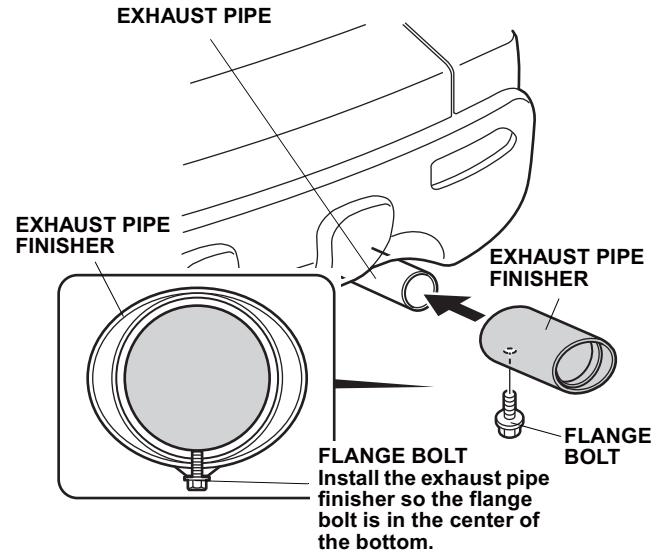

2. With the flange bolt on the bottom, slide the exhaust pipe trim onto the exhaust pipe until it bottoms.

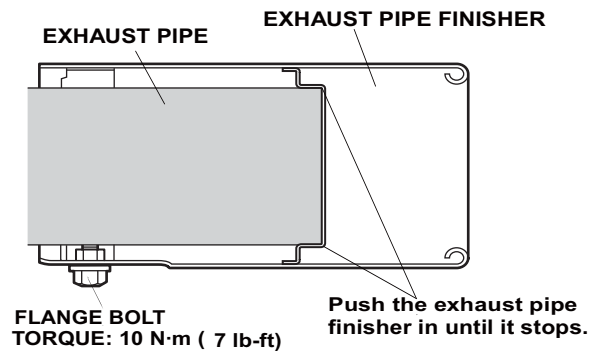

3. While pushing the exhaust pipe trim firmly against the exhaust pipe tighten the flange bolt. Torque to 10 N·m (7 lb-ft).
4. Repeat steps 1 thru 4 to install the other exhaust pipe trim.
5. Start the engine, and rev it a few times. Listen for vibration from the exhaust pipe trim and adjust if necessary.

NOTE: Do not clean the exhaust pipe finisher using a wax that contains abrasive material, as it can scratch the accessory.