

# Accessory

## SPLASH GUARDS P/N 08P00-SCV-100B

Application

# 2009 ELEMENT (SC)

Publications No. All 40539

Issue Date
OCT 2008

#### **PARTS LIST**

Left front splash guard



Right front splash guard



Left rear splash guard



Right rear splash guard



6 Self-tapping screws, 5 x 20 mm



2 Self-tapping screws, 5 x 23 mm



2 Self-tapping screws, 5 x 30 mm



4 Clip nuts



2 Screw grommets



#### **TOOLS AND SUPPLIES REQUIRED**


Stubby Phillips screwdriver Phillips screwdriver

#### INSTALLATION


NOTE: These installation instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.

#### **Installing The Front Splash guards**

- 1. Make sure the area to be covered is clean and has been waxed with a high-quality paste wax.
- 2. Turn the steering wheel fully counterclockwise.
- 3. Remove four self-tapping screws from the left front inner fender.

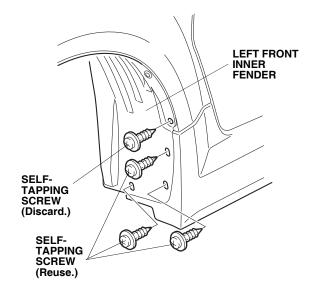


4. Place the left front splash guard on the left inner fender as shown.

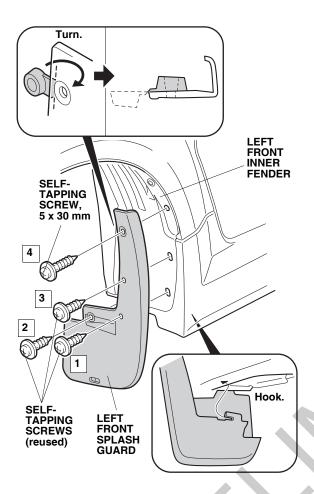

- 5. Install the left front splash guard with one 5 x 30 mm self-tapping screw and the three self-tapping screws removed in step 3. Do not tighten the self-tapping screws yet.
- 6. While holding the left front splash guard against the left front inner fender, tighten the self-tapping screws in the order shown.
- 7. Turn the steering wheel all the way clockwise, and repeat steps 3 through 6 to install the right front splash guard.


### **Installing The Rear Splash Guards**

8. Remove and discard the self-tapping screw from the rear fenderwell.

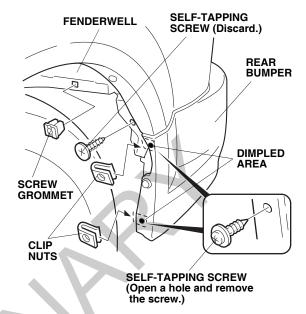

- 9. Using a self-tapping screw, pierce the two dimpled areas of the rear bumper, then install two clip nuts over the holes.
- 10. Press one screw grommet into the hole in the fenderwell.

11. Install the left rear splash guard on the rear bumper with three 5 x 20 mm self-tapping screws, and one 5 x 23 mm self-tapping screw. Do not tighten the self-tapping screws yet.

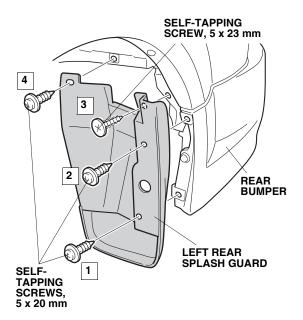

- 12. While holding the left rear splash guard against the left rear bumper, tighten the self-tapping screws in the order shown.
- 13. Repeat steps 8 through 12 to install the right rear splash guard.