

INSTALLATION	Accessory SKI / SNOWBOARD ATTACHMENT P/N 08L03-E09-100	Application 2011 PILOT	Publications No. All 43333 Issue Date MARCH 2010
Put this in	formation in the glove b	box with the vehicle owner	's manual.
PARTS LIST 2 Ski / snowboard attachments		Illustration of the Ski / Snowboard Attachment on the Vehicle	
		SKI / SNC ATTACHI	WBOARD MENTS
Wrench			
2 Keys			
8 Collars			
	P I	NSTALLATION	
4 Brackets		Customer Information: The in installation instruction is intend technicians who have the prop training to correctly and safely vehicle. These procedures sho "do-it-yourselfers."	ed for use only by skilled er tools, equipment, and add equipment to your
8 Bolts		NOTE: This ski / snowboard attachm exclusively with the crossbar separately. Do not use non-Honda acces attachment sets with this ski kit. Install the ski / snowboard at the crossbars on the roof.	s, which are sold ssories, carriers or / snowboard attachment tachment after installing other finished surfaces of

Installing the Ski / Snowboard attachment


1. Insert the key and turn it clockwise to unlock the ski / snowboard attachment.

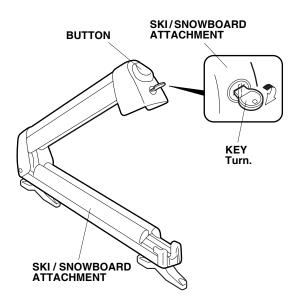


- 2. Push the button and raise the holder block of the ski / snowboard attachment.
- 3. Turn two brackets on the ski / snowboard attachment as shown.

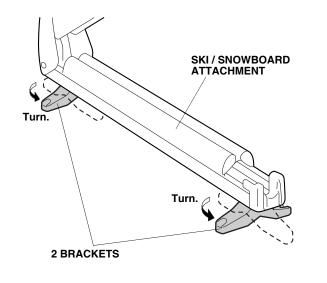


4. Using a wrench, install the ski / snowboard attachment to the front crossbar with four bolts, four collars, and two brackets.

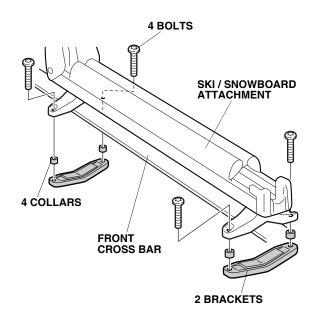

- 5. Repeat steps 1 through 4 for the other ski/snowboard attachment on the rear crossbar.
- 6. After installation, rock the ski / snowboard attachment in all directions to check if it is installed securely without play or rattle. If you find abnormal play or rattle, retighten the bolts.

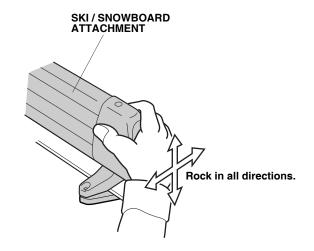

7. Write down the key number in the box below in case the key is lost or stolen.

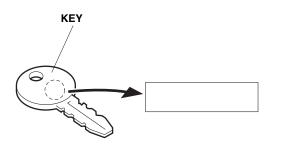


How to Load Skis on the Ski / Snowboard Attachment


8. Load the skis with the rear of the skis facing the front of the vehicle.


9. If the bindings cannot be positioned between the front and the rear attachments, install the skis with the rear bindings behind the rear attachment as shown.

ENOUGH SPAN

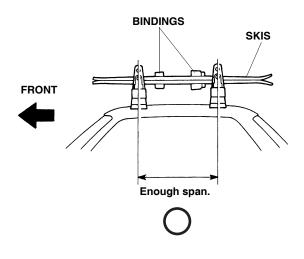


NOT ENOUGH SPAN

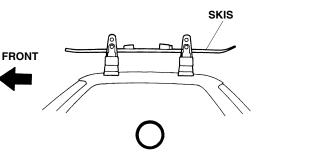

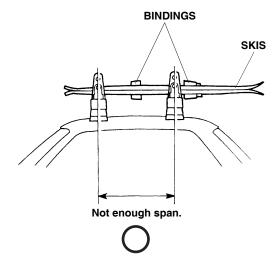


How to Load a snowboard on the Ski / Snowboard Attachment

10. Load the snowboard with its bindings positioned between the front and the rear attachments.

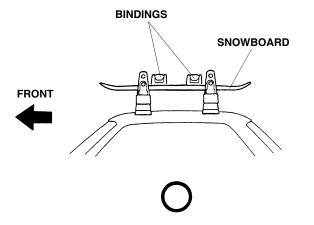

11. If the bindings cannot be positioned between the front and the rear attachments, install the the rear binding behind the rear attachment as shown.

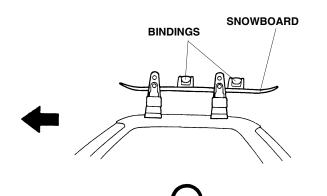

USE AND CARE

- Do not carry more than four pairs of skis or more than one snowboard on the attachment.
- The ski / snowboard attachment raises the overall height of the vehicle. Pay attention to overhead obstacles when driving with the ski / snowboard attachment.
- Before and after driving, or after loading skis or snowboard on the attachment, check the security of the attachment mounts and retighten them as necessary.

PRECAUTION

- Avoid sudden starts or stops with the attachment on the vehicle. It may cause bolts and other fasteners to loosen.
- Obey local laws and regulations.
- Before driving, check that the attachment is locked securely regardless of whether or not skis or a snowboard is mounted on the attachment.
- Do not use the ski / snowboard attachment with vehicles other than those specified.