



INSTALLATION INSTRUCTIONS

Accessory

CARGO COVER
P/N 08U35-S0X-160 (Gray)
P/N 08U35-S0X-170 (Beige)

Application

2004 ODYSSEY

Publications No.


AII 26002

Issue Date

AUG 2003

PARTS LIST

Cargo cover

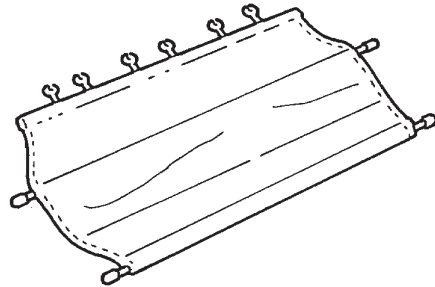

4 Rubber grommets
(Replacement grommets:
P/N 08U35-S10-100R1)



TOOLS AND SUPPLIES REQUIRED

Center punch

Water-soluble pen


Drill

3 mm, 8 mm, and 16 mm Drill bits

Eye protection (face shield, safety goggles, etc.)


Tape measure

Illustration of the Cargo Cover Installed in the Vehicle

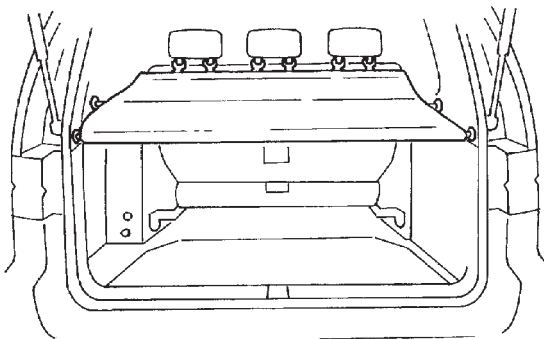


INSTALLATION


1. On the left (driver's) side of the cargo area, measure 70 mm toward the rear from the front corner of the quarter pillar trim panel, and 13 mm upward from the rear side trim panel as shown. Mark the spot with a water-soluble pen.

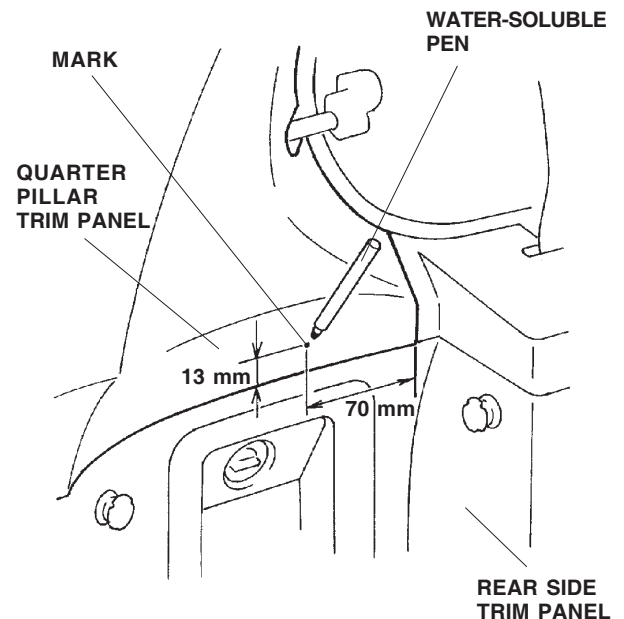


2. On the right (passenger's) side of the cargo area, measure 60 mm toward the rear from the front corner of the right quarter pillar trim panel, and measure 13 mm upward. Mark the spot with a water-soluble pen.

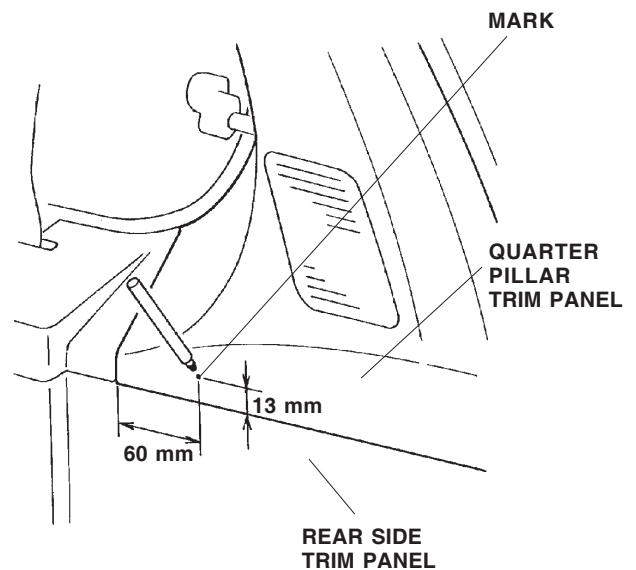

- On one side of the cargo area, measure 25 mm toward the front from the rear end of the quarter pillar trim panel, and 13 mm up from the rear side trim panel. Mark the spot with a water-soluble pen. Repeat the measurement and mark the spot on the other side of the cargo area.

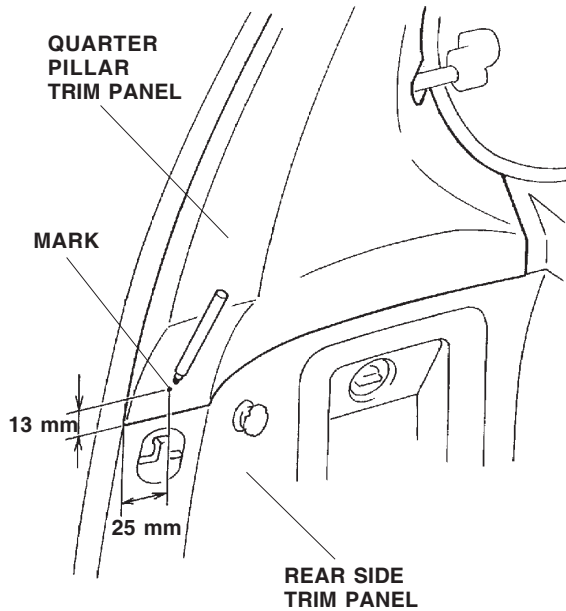

- While wearing eye protection, center-punch and drill a 16 mm hole at the centers of the four marks you made. First drill with the 3 mm drill bit, then drill with the 8 mm drill bit, and finish with the 16 mm drill bit.
- Insert the four rubber grommets into the four holes you drilled.
- With the six cargo cover hooks toward the front of the vehicle, gently bend the cargo cover, and insert its ends into the rubber grommets.

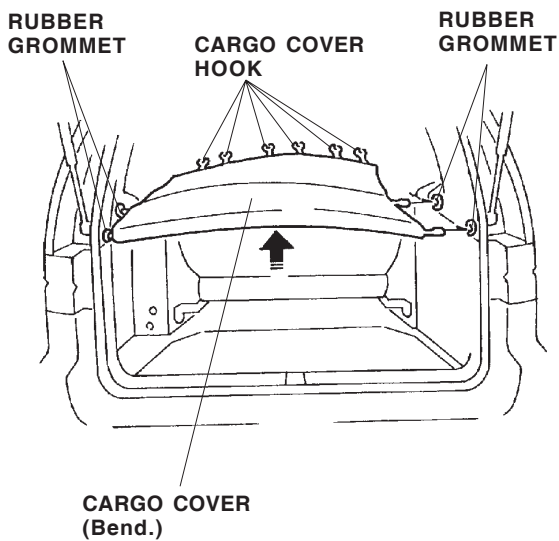

- Attach the six cargo cover hooks to the rear seat headrest stays as shown.

NOTE: Be sure to tell your customer to remove the cargo cover hooks before tilting the rear seats forward.

