



# INSTALLATION INSTRUCTIONS


Accessory  
**WOOD-GRAIN TRIM KIT,  
CARGO LIGHT  
P/N 08Z03-S0X-100E**

Application  
**2004 ODYSSEY**

Publications No.  
**All 26034**  
Issue Date  
**AUG 2003**

## PARTS LIST

Wood-grain  
cargo light trim

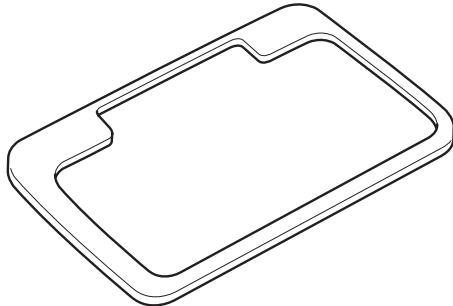

2 Wood-grain  
coat hanger trims



## SUPPLIES REQUIRED

Isopropyl alcohol  
Shop towel


## INSTALLATION

NOTE: This wood panel kit should only be installed if the ambient air temperature is 15°C (60°F) or above.

1. Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the three trim pieces will attach.

2. Remove the adhesive tape backings from the wood-grain cargo light trim. Carefully position the wood-grain cargo light trim on the cargo light. Using the palm of your hand, apply pressure on the wood-grain cargo light trim for about 30 seconds.

### *Cargo Light Trim:*

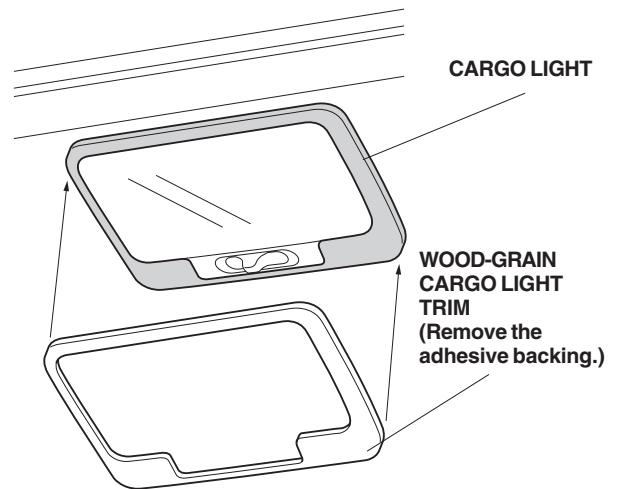

3. Remove the adhesive backings from the wood-grain coat hanger trims, and carefully attach them to the coat hangers. Using the palm of your hand, apply pressure on the wood-grain coat hanger trims for about 30 seconds.

### *Coat Hanger Trims:*

