



INSTALLATION INSTRUCTIONS

Accessory
**TRIM KIT
(CARBON FIBER-LOOK)
08Z03-S5T-100B**


Application
2005 CIVIC Si

Publications No.
All 27944


Issue Date
AUG 2004

PARTS LIST

Center panel

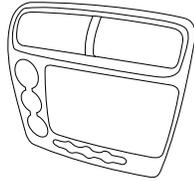

Shift panel

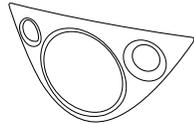

Left outlet panel



Right outlet panel



TOOLS REQUIRED

Contact cleaner
Shop towel
Masking tape


INSTALLATION

NOTE:


- Be extremely careful not to damage the panel.
- The panel should be installed only if the ambient air temperature is 60°F (15°C) or above.

Installing the Center Panel

1. Position the center panel on the existing center panel, and note its location for proper installation. Remove the center panel. Using isopropyl alcohol on a shop towel, clean the area where the center panel will attach.
2. On the inside of the center panel, attach a strip of masking tape to each end of the outer backing shown, and remove 39 to 50 mm (1 1/2 to 2 in.) of the backing. Fold the ends back and tape them to the front of the center panel. Remove all remaining backing from the center panel.

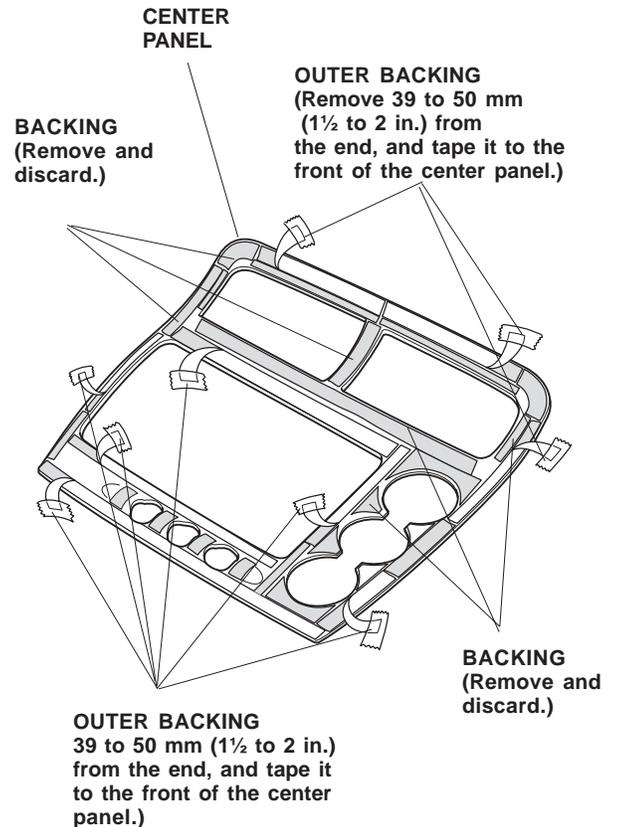


3. Angle the center air outlet louvers down. Position the center panel on the existing center panel in the position noted in step 1. As you apply light pressure to the center panel, slowly and carefully remove the backing from the center panel. Hold the new center panel firmly against the existing center panel with the palm of your hand for 30 seconds, particularly at the edges.

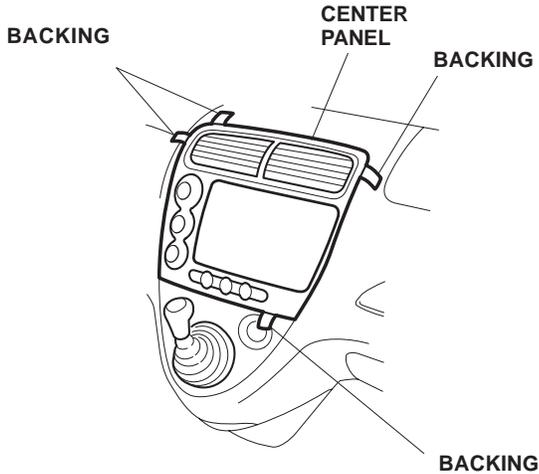


Installing the Shift Panel

4. Position the new shift panel on the existing shift panel, and note its location for proper installation. Remove the shift panel. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the shift panel will attach.
5. On the inside of the shift panel, attach a strip of masking tape to each end of the outer backing, and remove 3 to 5 cm (1 to 2 in.) of the backing. Fold the ends back and tape them to the front of the center panel. If necessary, remove all remaining backing from the shift panel.
6. Position the shift panel on the existing center panel in the position noted in step 4. As you apply light pressure to the shift panel, slowly and carefully remove the backings from the shift panel. Hold the shift new panel firmly against the existing shift panel with the palm of your hand for 30 seconds.

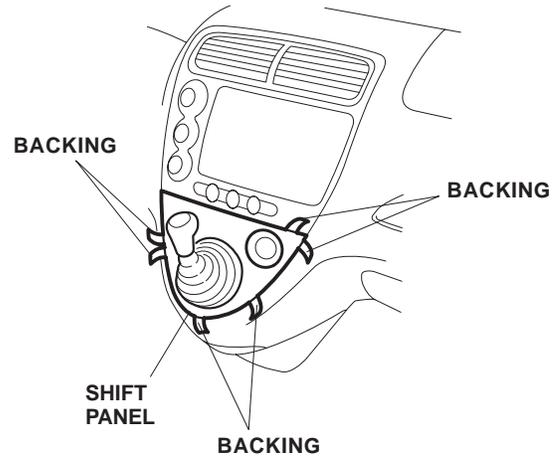


Installing the Outlet Panel

7. Position the left outlet panel on the left outlet, and note its location on the left outlet for proper installation. Remove the panel. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the outlet panel will attach.
8. On the inside of the outlet panel, attach a strip of masking tape to each end of the outer backing, and remove 3 to 5 cm (1 to 2 in.) of the backing. Fold the ends back and tape them to the front of the outlet panel. Remove all remaining backing from the outlet panel.

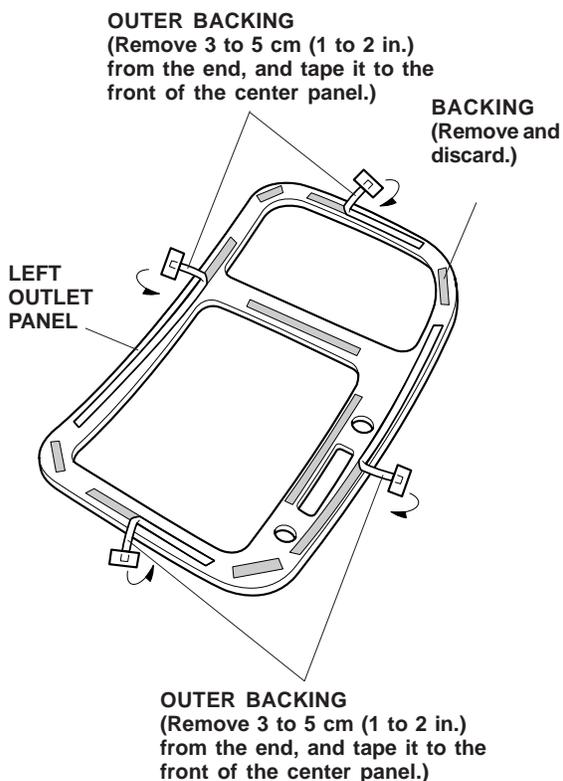

9. Position the left outlet panel on the outlet in the position noted in step 7. As you apply pressure to the outlet panel, slowly and carefully remove the backing from the outlet panel. Hold the shift panel firmly against the existing shift panel with the palm of your hand for 30 seconds.

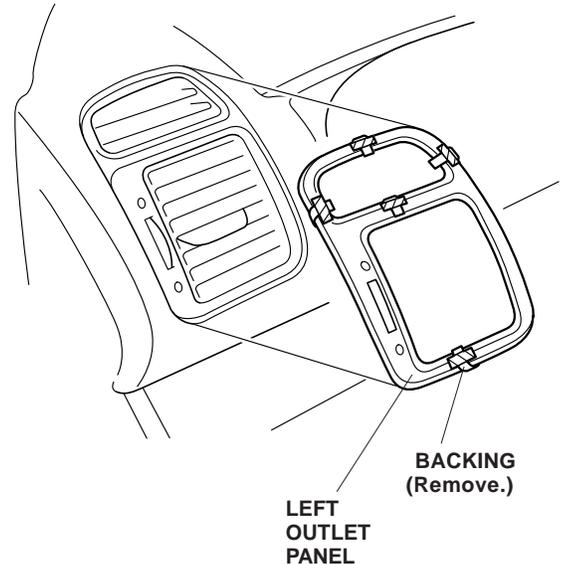

10. Repeat steps 7 through 9 to install the right outlet panel on the right side of the vehicle.

USE AND CARE

Use a soft cloth or sponge dampened with a mild detergent and water solution to clean the panel. Do not use polishing waxes containing abrasive compounds or degreasing agents to clean the panel.