



# INSTALLATION INSTRUCTIONS

Accessory

HALF NOSE MASK  
P/N 08P35-SDA-102

Application

2007 ACCORD  
HYBRID

Publications No.

All 32765

Issue Date


JULY 2006

Put this instruction in the glove box with the vehicle owner's manual.


**NOTE:** The nose mask cannot be installed on a vehicle equipped with fenderwell trim.

## PARTS LIST


Nose mask

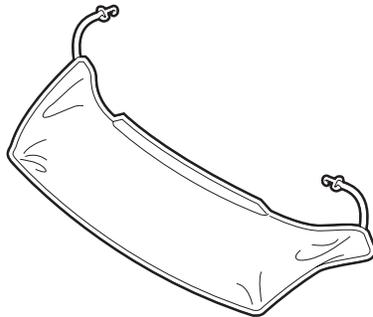

Right fender mask

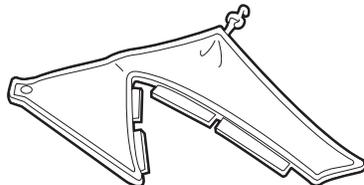

Left fender mask

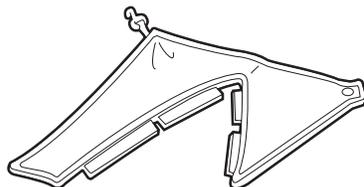

2 Snap-screws



2 Washers



2 Fenderwell nuts



## TOOLS REQUIRED

Stubby #2 Phillips screwdriver

Flat-tip screwdriver

Clip remover


## INSTALLATION

**NOTE:**

- Make sure the vehicle and the nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove it and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure you install the nose mask securely. If the nose mask starts to flap or comes loose while driving, safely pull off the highway, stop the vehicle, and secure or remove the mask.

### Installing the Hood Section


1. Open the hood, and remove the two hood insulator clips. (Do not discard the insulator clips; they can be reinstalled if the mask is removed.)

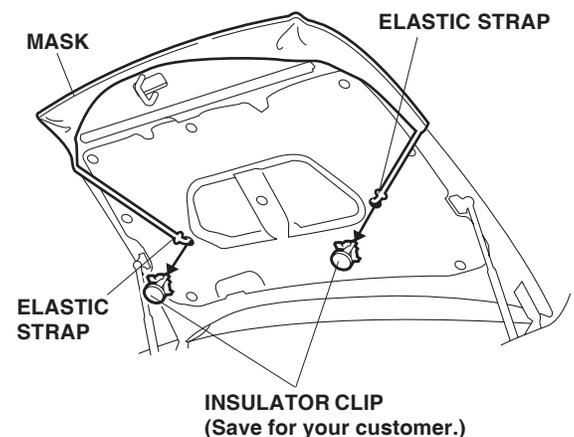

2. Fit the corners of the mask around the hood, and adjust the mask so it fits smoothly over the edges. Secure the mask by hooking the two elastic straps into the holes in the hood.


## Installing the Fender Section

- Turn the steering wheel all the way clockwise.
- Pry out the plastic pin, and remove expansion clip that holds the left inner fender to the fender; remove and retain the expansion clip, then clean the area around the hole.

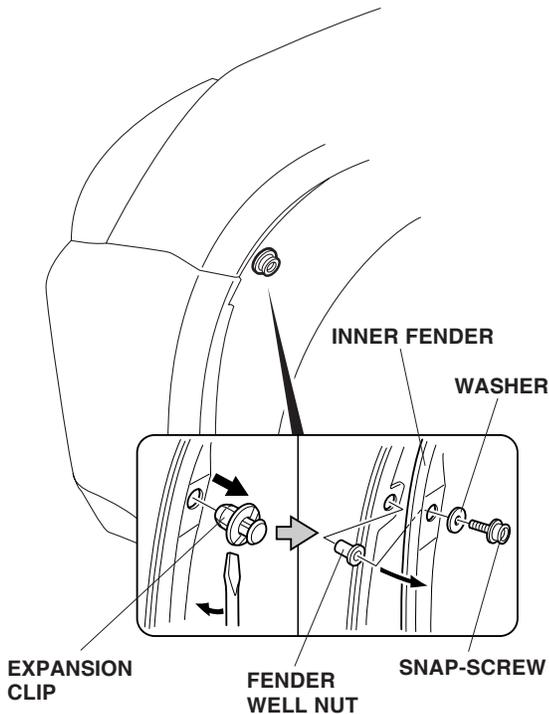


- Pull out on the inner fender, and press a fenderwell nut into the hole in the fender flange.
- With its washer in place, securely tighten a snap-screw into the fenderwell nut.
- Turn the steering wheel all the way counterclockwise, and repeat steps 4 through 6 for the right side.

- Slip the two pockets of the left fender mask onto the corners of the left front fender, and hook the elastic strap to the hole in the fender. Insert the four tabs between the fender and the headlight. It may be necessary to apply downward pressure on the bumper to install the fender pockets.

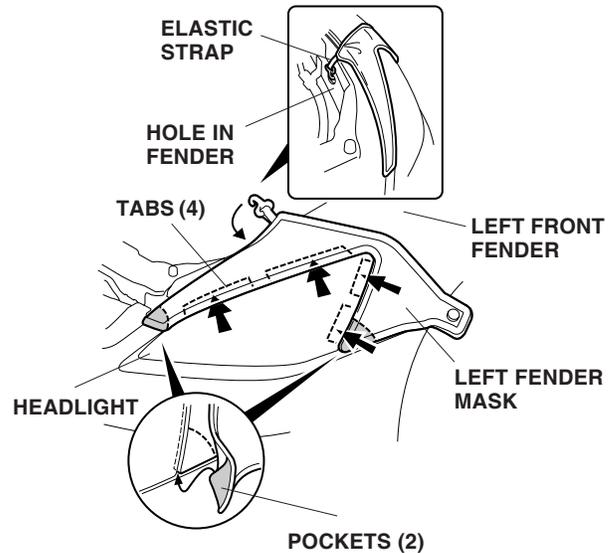

- Pull the fender mask back toward the wheelwell, smooth out any wrinkles, and snap the fender mask onto the snap-screw.

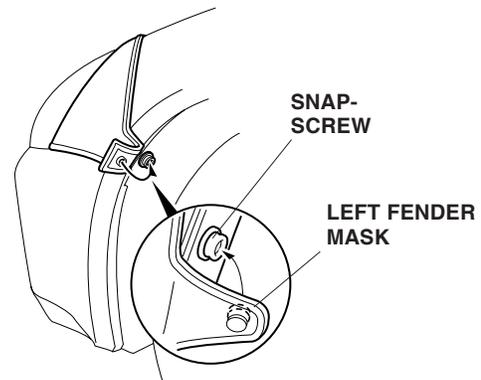

- Repeat steps 8 and 9 on the other side.
- Put these instructions along with the insulator clips (removed in step 1) and the expansion clips (removed in step 4) into the glove box for future use.

## CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry out of direct sunlight. Make sure the mask is completely dry before you reinstall it.