



# INSTALLATION INSTRUCTIONS

Accessory

REAR SPLASH GUARDS  
P/N 08P09-S9V-101

Application

2007 PILOT

Publications No.


A11 33076

Issue Date


JULY 2006

## PARTS LIST


Left rear splash guard

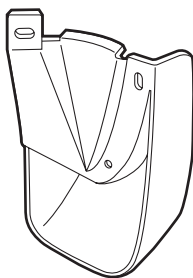

Right rear splash guard

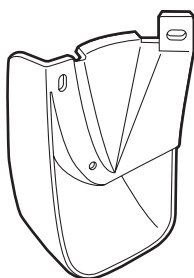

6 Self-tapping screws, 5 x 25 mm



2 Clip nuts



## TOOLS REQUIRED


Stubby Phillips screwdriver

Phillips screwdriver


## INSTALLATION

NOTE: These installation instructions show the left rear splash guard being installed; the same procedure applies to installing the right rear splash guard.

1. Remove the two self-tapping screws from the rear bumper and the inner fender.

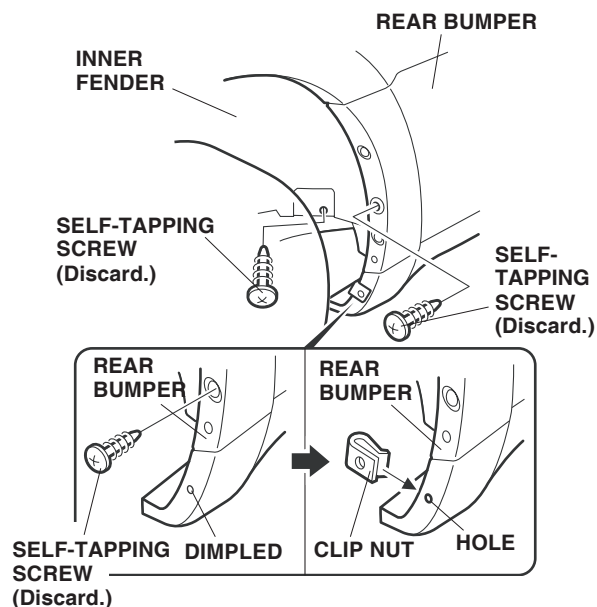

2. Piece the dimpled area of the rear bumper with a self-tapping screw. Remove the screw, and slide one clip nut over each dimpled hole.
3. Position the left rear splash guard on the inner fender and rear bumper, and install the three 5 x 25 mm self-tapping screws.

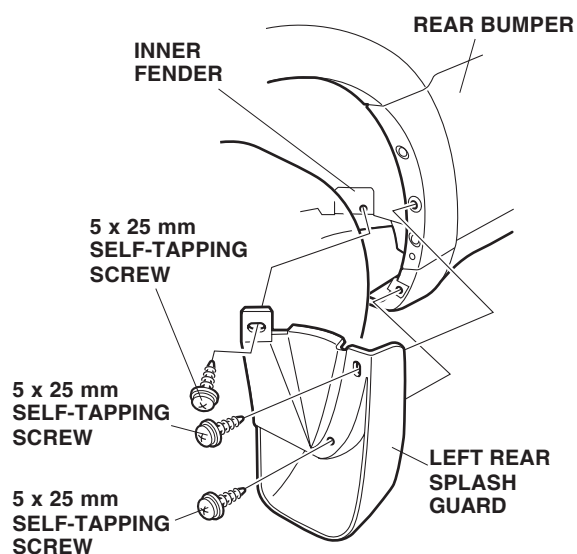

4. Repeat steps 1 through 3 to install the right splash guard.