

Accessory

SPLASH GUARDS P/N 08P00-TE0-100 Application

2008 ACCORD 2-DOOR Publications No.
All 37571

Issue Date SEP 2007

## **PARTS LIST**

Right front splash guard



Left front splash guard



Right rear splash guard



Left rear splash guard



12 Self-tapping screws, 5 x 25 mm



2 Clips



## **TOOL AND SUPPLIES REQUIRED**

Stubby Phillips screwdriver Pushpin


# **INSTALLATION**

#### NOTE:

- These instructions show the left splash guard being installed. The same procedure applies to installing the right splash guard.
- The splash guard cannot be installed with the rear or side under spoiler.
- Clean and wax the areas to be covered with a high-quality paste wax.


# **Installing the Front Splash Guards**

- 1. Turn the steering wheel all the way counterclockwise.
- 2. Remove the clip from the left front inner fender as shown.
- 3. Using a pushpin, make small holes through the center of the three clips.

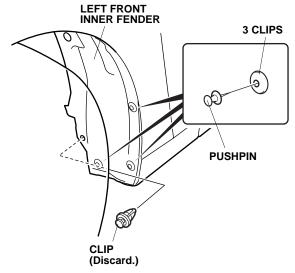


7125560B

- 4. Install the left front splash guard using the three 5 x 25 mm self-tapping screws and one clip. Do not tighten the 5 x 25 mm self-tapping screws yet.
- 5. While holding the left front splash guard against the left front inner fender, tighten the 5 x 25 mm self-tapping screws in the order shown 1 → 2 → 3 → 4.
- 6. Turn the steering wheel all the way clockwise, and repeat steps 2 thru 5 to install the right front splash guard.

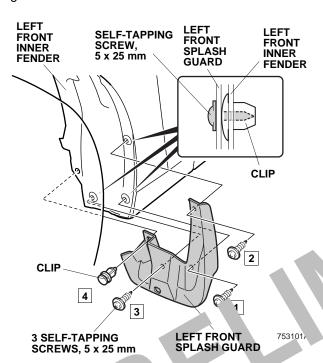


# Installing the Rear Splash Guards

7. Loosen three self-tapping screws from the left rear inner fender as shown.

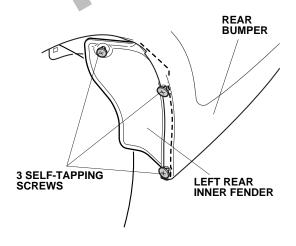

- 8. Place the left rear splash guard over the left rear inner fender. Remove the self-tapping screw and install 5 x 25 mm self-tapping screws on three places on the left rear splash guard.
- While holding the left rear splash guard against the left rear bumper, tighten the 5 x 25 mm self-tapping screws in the order shown (1→2→3).
- 10. Repeat steps 7 thru 9 to install the right rear splash guard.

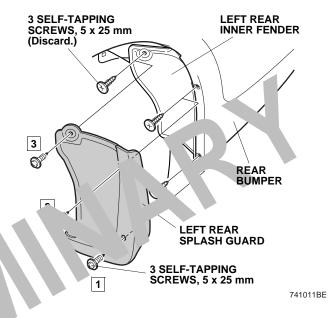

741010BE