



# INSTALLATION INSTRUCTIONS


Accessory  
**AIR DEFLECTOR**  
P/N 08P47-SCV-100A

Application  
**2009 ELEMENT**


Publications No.  
**All 40555**  
Issue Date  
**OCT 2008**

## PARTS LIST


Air deflector

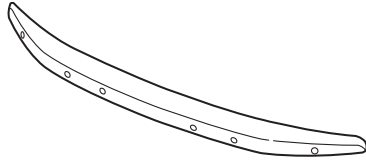


2 Inner brackets

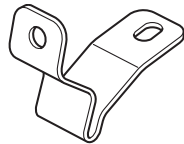

2 Middle brackets

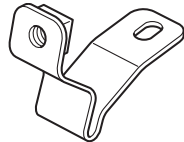

2 Outer brackets

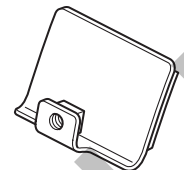

4 Plastic grommets




4 Screws, 10 x 24 mm




4 Screws, 6 x 10 mm



4 Protective tapes

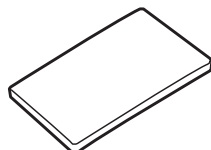

Alcohol pad

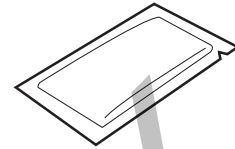


2 Clips




4 Collars



Template

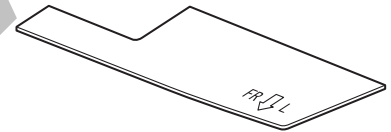

Warning label

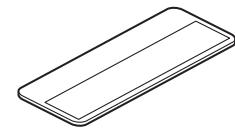

## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Masking tape

Felt-tip pen


## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


### NOTE:

- Be careful not to damage the body paint finish.
- This air deflector kit should be installed only if the ambient air temperature is above 15°C (60°F).
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.

1. Open the hood. Under the rubber molding, locate the four square holes on the inside of the hood. Push one plastic grommet into each square hole.

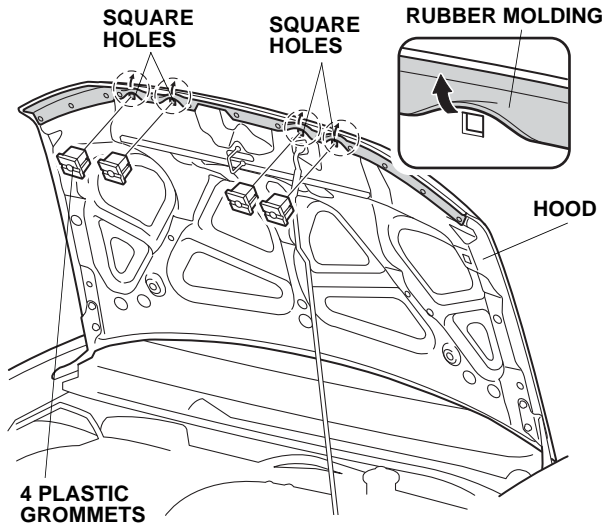


2. Using the alcohol pad, clean the hood where the protective tapes will attach. Allow the alcohol to dry.

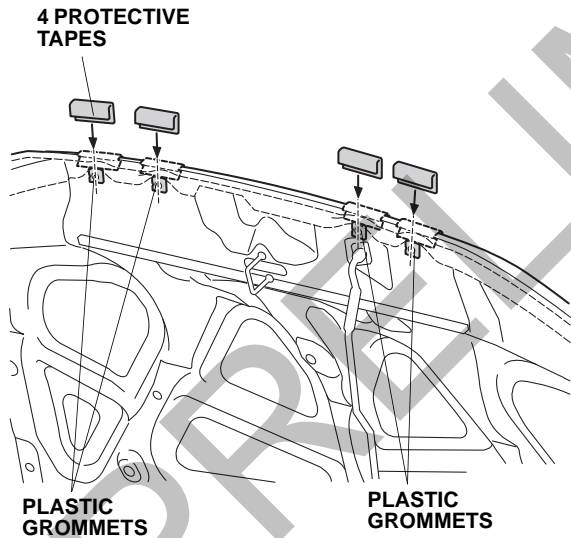


3. Locate the hood area above the four holes where you installed the plastic grommets. Attach four protective tapes around the front lip of the hood at each grommet location.

4. Install two inner brackets and two mid brackets over the protective tapes of the hood using four 10 x 24 mm screws. Do not tighten the screws yet. Push the inner bracket and the mid bracket against the hood and install them.

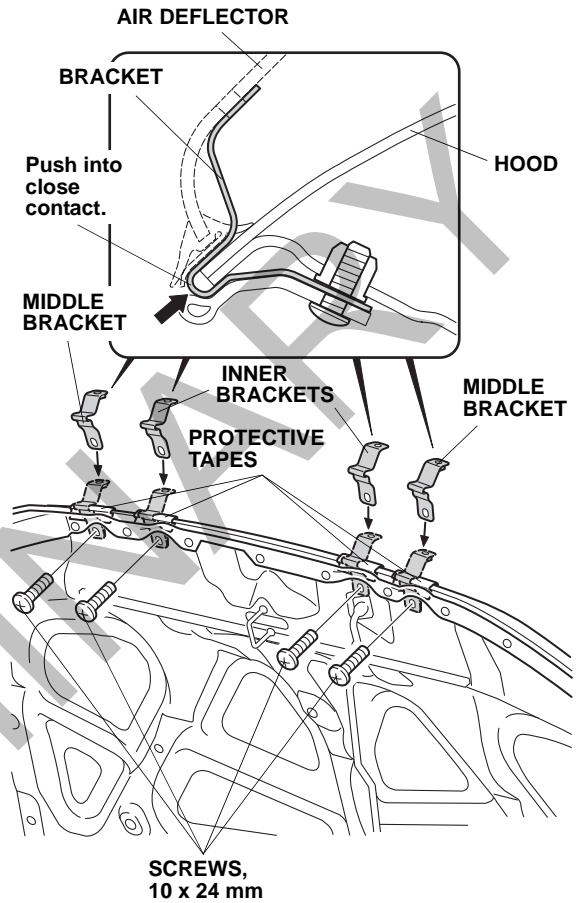


5. Close the hood. Position the template on the hood, and align its edges with the edges of the hood. Secure the template with masking tape as shown.

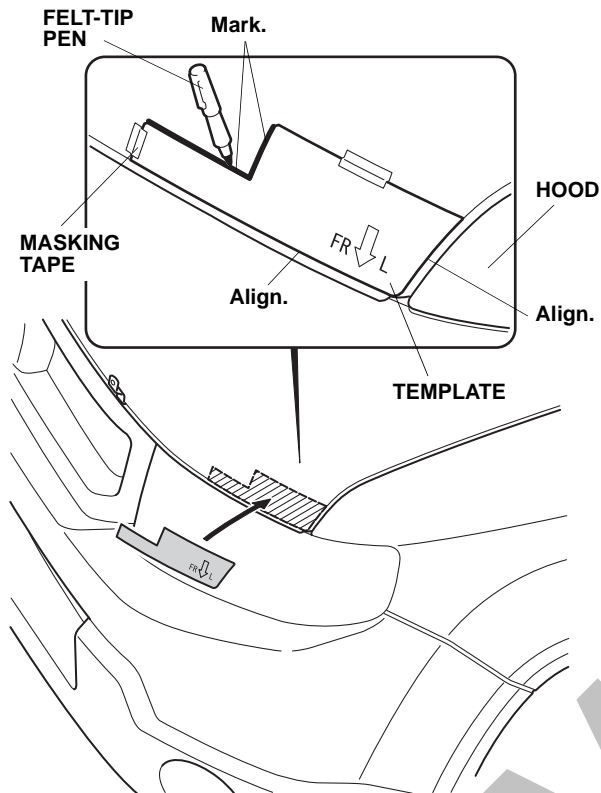


6. Using a felt-tip pen, mark the hood along the template as shown.  
7. Remove the template.

8. Using the alcohol pad, clean the hood where the outer brackets will attach. Allow the alcohol to dry.

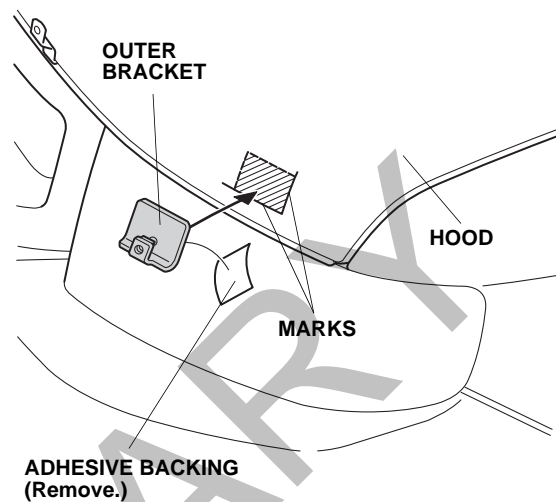

9. Remove the adhesive backing from the outer bracket, and attach it to area of the hood shown.  
10. Turn the template over and repeat steps 5 thru 9 to attach the outer bracket on the right side of the hood.

11. Position the air deflector on the hood, and align the holes in the air deflector with the holes in the six brackets.

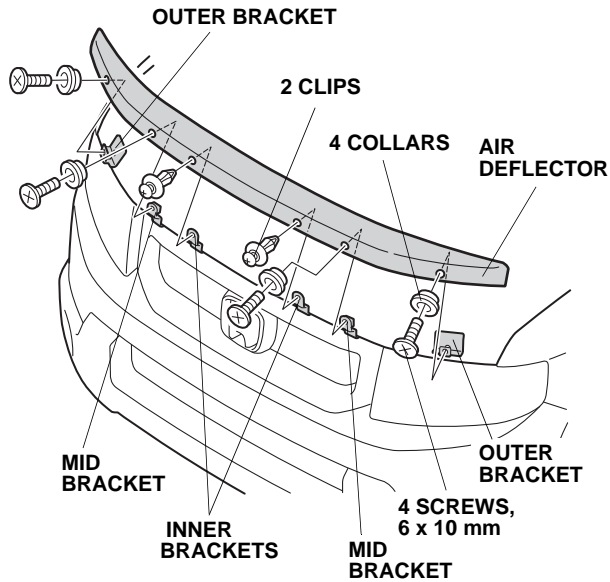

12. Install the four 6 x 10 mm screws and collars to the middle bracket, and outer bracket holes, and two clips to the inner bracket holes.
13. Open the hood, and tighten the four screws installed in step 4.
14. Apply warning label under the hood in the location shown.

