




# INSTALLATION INSTRUCTIONS


<b>Accessory</b> <b>A/T SPORT PEDALS</b> <b>P/N 46545-XTK-000</b>	<b>Application</b> <b>2009 FIT MUGEN</b>	<b>Publications No.</b> <b>All 41066</b>
		<b>Issue Date</b> <b>APRIL 2009</b>

## PARTS LIST


Mugen accelerator pedal cover

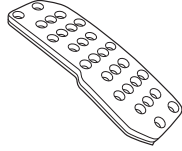

Rubber template

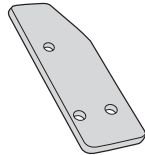


Mugen brake pedal cover

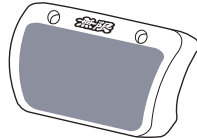


Brake pedal bracket



Accelerator pedal top bracket

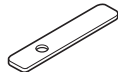

Accelerator pedal bottom bracket

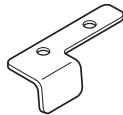


2 Bolts (4 mm)




3 Rivet spacers



3 Rivets

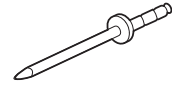

3 mm Hex wrench

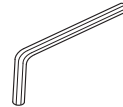

Alcohol wipe



## TOOLS AND SUPPLIES REQUIRED

Drill

3 mm Drill bit

Eye protection (safety goggles, face shield, etc.)

File

Felt-tip pen (white)

Pushpin

Rivet tool (MAR3900)


Electrical tape

## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

## Installing the Accelerator Pedal Cover


1. Remove the adhesive backing from the rubber template, and attach it to the top of accelerator pedal. Make sure the template is flush with the left and bottom edges of the accelerator pedal.

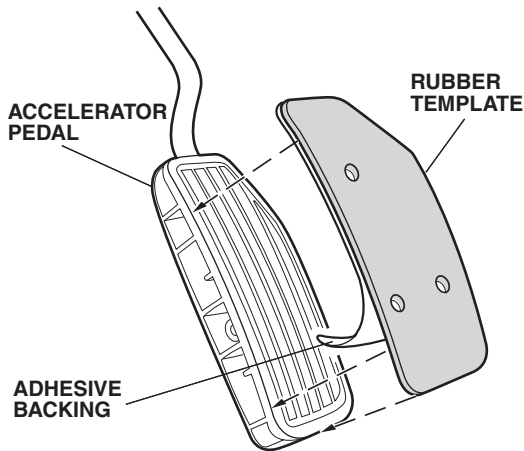


2. Using a pushpin, pierce the accelerator pedal at the center of each hole in the rubber template. Remove the rubber template.

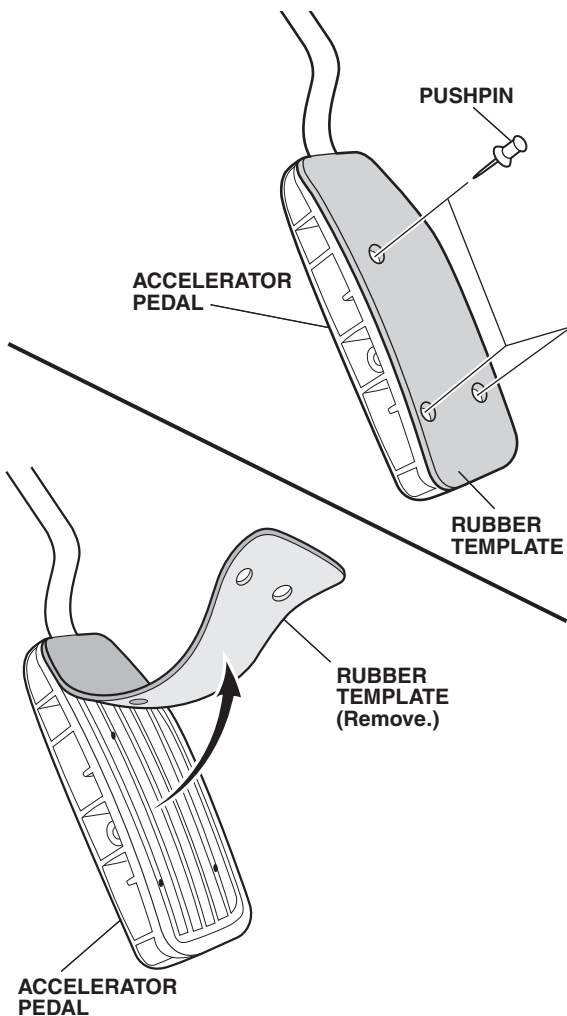


3. While wearing eye protection, drill the accelerator pedal at the pierced marks:
  - Wrap electrical tape around the drill bit 7 mm from the tip.
  - Place a block of wood under the accelerator pedal.
  - While holding the accelerator pedal against the wood block, drill each pierced mark with a 3 mm drill bit. Drill only through the first layer of the pedal. Do not drill completely through the pedal.
  - Using a file, remove the burrs from the edge of the holes.

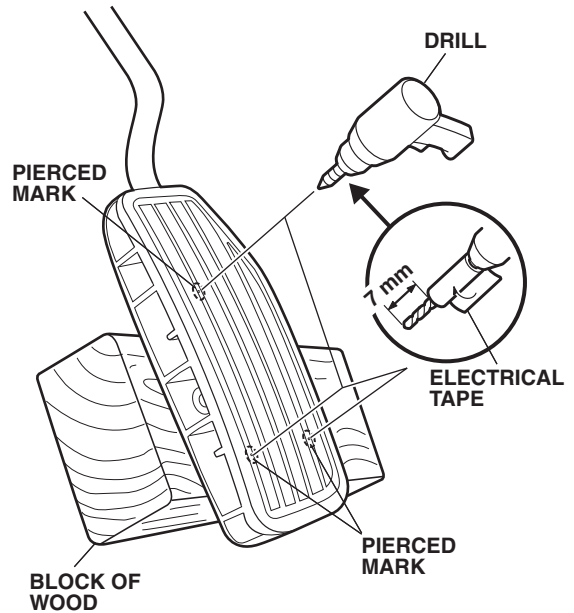


4. Insert the top and bottom brackets into the accelerator pedal in the direction shown.

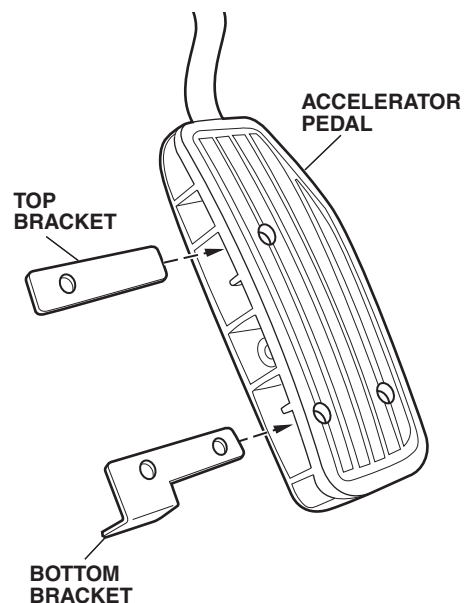

- Place the Mugen accelerator pedal cover on the accelerator pedal with the top edge and the side edge of the rubber spacer tight against the pedal. Insert the three rivets through the pedal, the brackets, and the pedal cover at the holes shown.

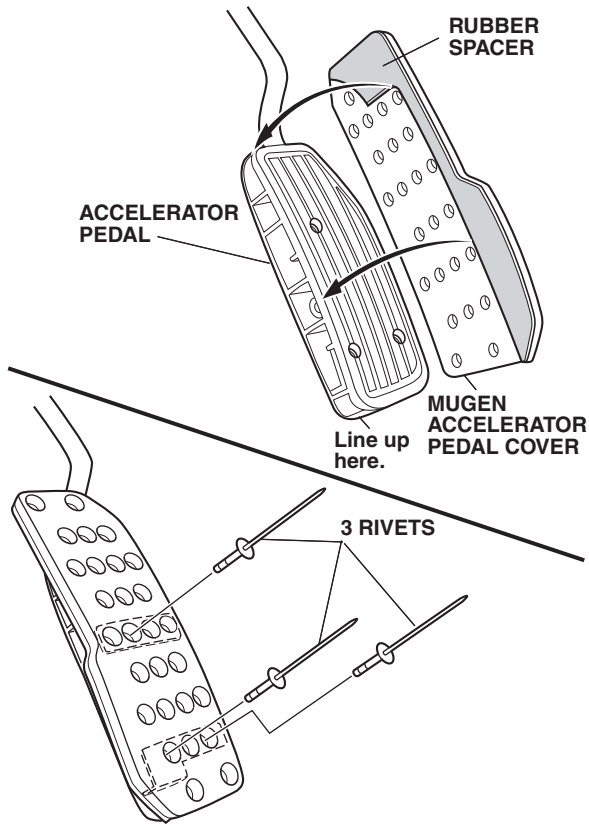


- Place one spacer on each rivet. Using the rivet tool, compress each rivet while holding the spacer tight against the pedal. Remove the spacers.

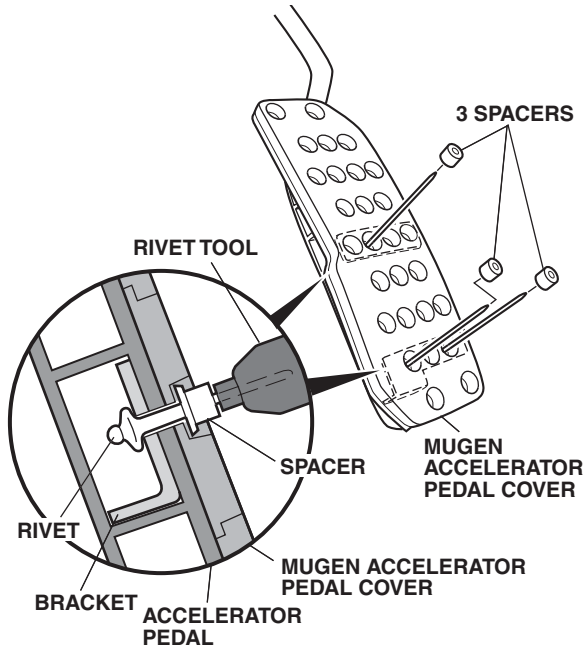


### Installing the Brake Pedal Cover

- Remove the vehicle brake pedal pad for the brake pedal.

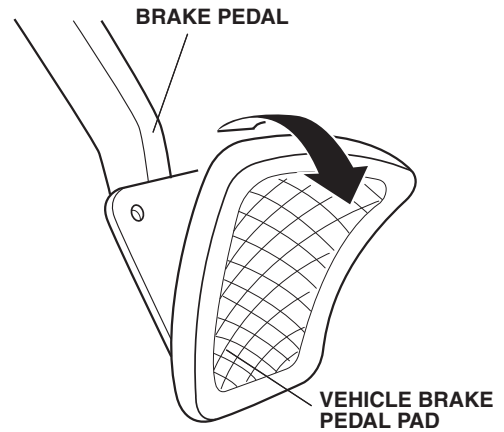

- Using isopropyl alcohol on a shop towel, clean the brake pedal. Allow the alcohol to dry.

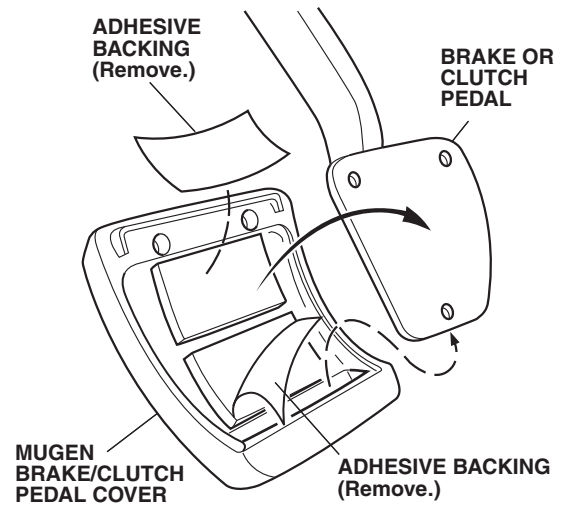

- Remove the adhesive backing from the Mugen brake pedal cover. Align the top of the brake pedal cover over the brake pedal as shown, and press the pedal cover into position.

10. Attach the brake pedal cover to the brake pedal using the bracket and the two 4 mm bolts.

