



INSTALLATION INSTRUCTIONS

Accessory

**EXHAUST PIPE FINISHER
P/N 08F53-SCV-100**

Application

2010 ELEMENT

Publications No.


All 42676

Issue Date


SEPT 2009

PARTS LIST

Exhaust pipe finisher

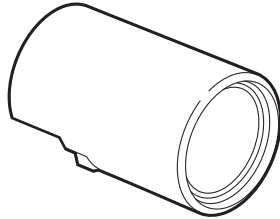

Flange bolt



TOOLS REQUIRED

10 mm Socket


Torque wrench

INSTALLATION

NOTE:


Allow the exhaust pipe to cool down before you install the exhaust pipe finisher.

1. Partially thread the flange bolt into the exhaust pipe finisher.

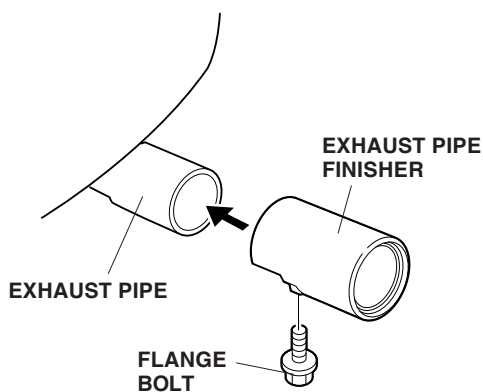

2. With the flange bolt facing down, slide the exhaust pipe finisher onto the exhaust pipe until it bottoms.

3. While pushing the exhaust pipe finisher firmly against the exhaust pipe, tighten the flange bolt. Torque the flange bolt to 10 N·m (1 kgf·m, 7 lbs-ft.)

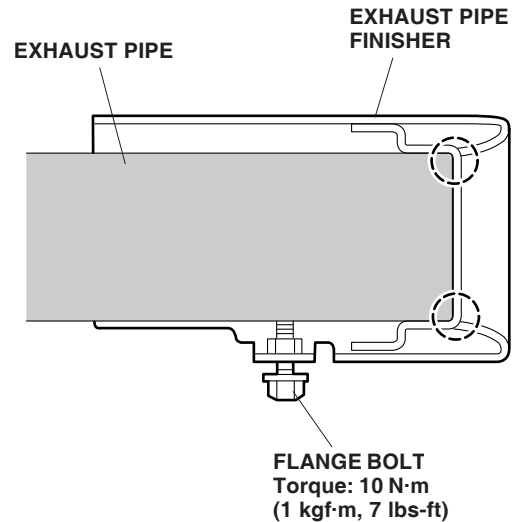

4. Start the engine and rev it up a few times. Listen for vibration from the exhaust pipe finisher and adjust if necessary.