

INSTALLATION INSTRUCTIONS

Accessory

LUGGAGE BASKET P/N 08L04-S9V-100 Application

2010 ODYSSEY

Publications No.

AII 41840

Issue Date **JUNE 2009**

Put this information in the glove box with the vehicle owner's manual.

| PARTS LIST | | 8 Self-ta |
|--------------------|-----------|------------------------|
| 2 Frames A | | 8 Nuts |
| 2 Frames B | | 8 Wash |
| | | Hex wre |
| 9 Pipes | | 4 Brack |
| Flap | | 8 Squar |
| | | 8 Socke |
| 4 L-brackets | | 8 Rubbe |
| 4 Bracket covers A | | TOOLS Phillips 10 mm (|
| 4 Bracket covers B | W | INSTAL |
| | | NOTE: • Be c |
| 4 Brackets A | | surfa bask |
| 8 Bolts | | Be c Chec wash |
| | | • The 110 lb |
| 8 Screws | | • Do n and roof |
| | \bigcup | • A Hc |

apping screws





ners



ench



kets B



re nuts



et bolts



er pads




REQUIRED

screwdriver Combination wrench


LLATION

- careful not to damage the roof and finished aces of the body when installing the luggage ket.
- careful before entering automatic car washes. ck the vehicle height limit of the automatic car sh and the height of the vehicle.
- maximum load capacity for this product is lb (50 kg); approximate product weight is b (5 kg).
- not allow the combined weight of the accessory cargo to exceed the carrying capacity of the roof rack.
- A Honda roof rack or crossbars are required to install the luggage basket.


 Insert the nine pipes into frame B. Press down on the button on the end of each pipe, and push the end into the hole in frame B. Repeat on the other side.

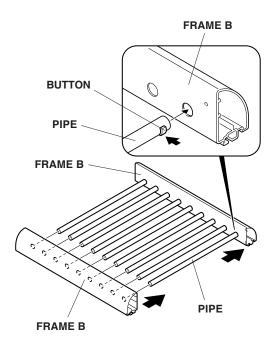


2. Slide one flap into the groove of one frame A. This will be the front of the basket.

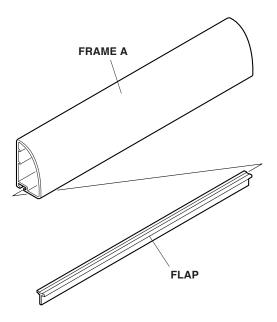

3. Attach one L-bracket on each end of frame A, using one screw for each bracket.

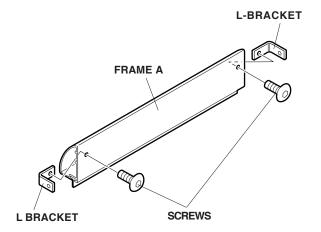


- 4. Install L-brackets on the other frame A.
- 5. Attach frame A to frame B by sliding the L-brackets into each frame B and installing one screw in each bracket.

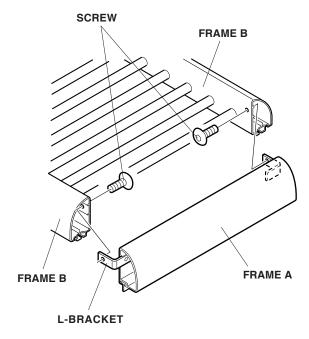


6. Attach the remaining frame A to frame B in the same way.


7. Slide four square nuts into the groove in each frame B.

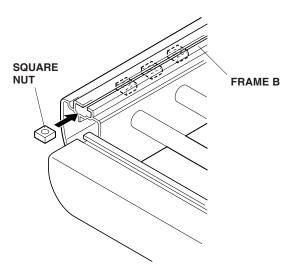


8. Position four bracket covers A over the corners, then install four bracket covers B. Install self-tapping screws to secure the covers.

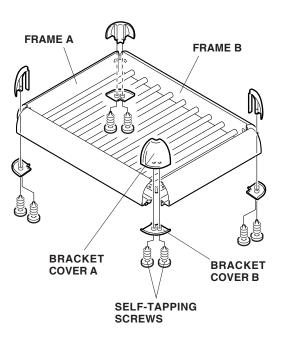

 Position two brackets B to each side of the basket at the measurement shown. Install two socket bolts into the two square nuts to mount each bracket B. Install the rubber pads into the brackets B as shown.

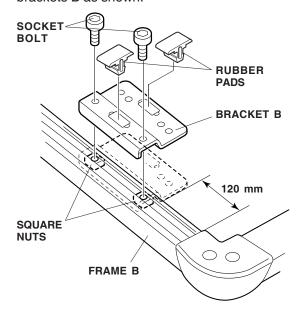

 Attach one bracket A to each bracket B. Use two bolts, two washers and two nuts for each bracket A. Face the cutout in each bracket A to the outside. Do not tighten the bolts yet.

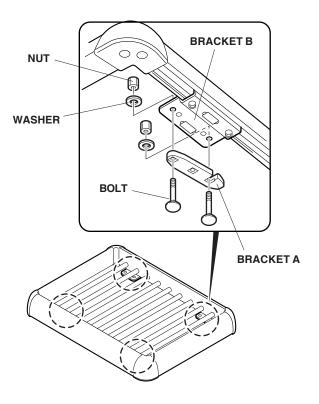

11. Position the luggage basket on the roof rack, with the flap on frame A facing forward. Attach the basket to the crossbars by sliding bracket A around the crossbar and tightening the nuts. Tighten the nuts evenly.

