



# INSTALLATION INSTRUCTIONS

Accessory  
**FRONT UNDER SPOILERS**  
P/N 08F01-TE0-100A


Application  
**2011 ACCORD**  
**2-DOOR**

Publications No.  
**All 44005**


Issue Date  
**AUG 2010**

## PARTS LIST

Left front under spoiler

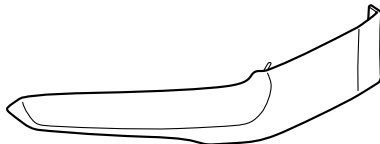

Right front under spoiler

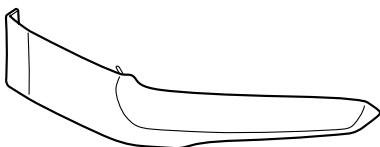

4 Spring nuts




4 Self-tapping screws




4 Clip retainers



2 Clips

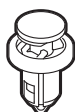

8 Seals

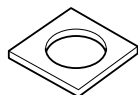

## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Blanket

10 mm Open end wrench

Pushpin

Drill

3 mm, 5 mm, and 10 mm Drill bits

File

Eye protection (safety goggles, face shield, etc.)

Diagonal cutters

Tape

Masking tape


Isopropyl alcohol

Shop towel

Trim Tool Set (T/N SOJATP2014)

Rubber Roller (T/N MHLE54D)

***Illustration of the Front Under Spoilers Installed on the Vehicle***

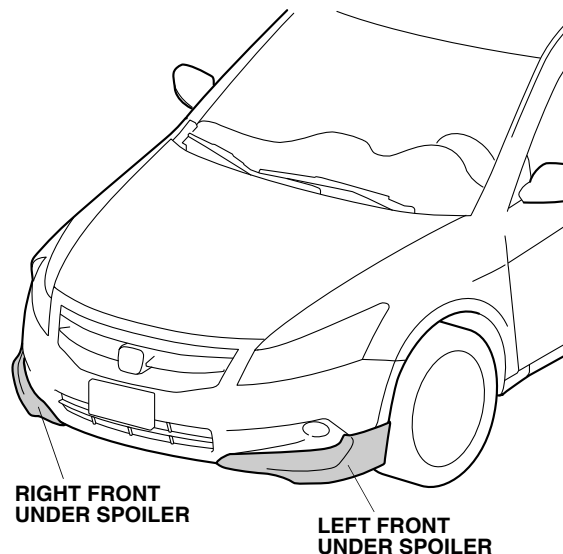

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


### NOTE:

- The nose mask can not be installed if the vehicle is equipped with front under spoilers.
- Be careful not to damage the body paint finish.
- Use isopropyl alcohol on a shop towel to thoroughly clean the areas where the front under spoilers will attach. Wipe up any spilled alcohol at once. Allow the isopropyl alcohol to dry thoroughly before proceeding to the next step.
- The front under spoilers should be installed only if the ambient air temperature is 15°C (60°F) or above.
- Clean and wax the area to be covered with a high-quality paste wax.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.


1. Make sure you have the anti-theft code for the audio and navigation system (if equipped).
2. Disconnect the negative cable from the battery.

### Removing Parts From the Vehicle

3. Remove the seven clips from the front bulkhead cover.

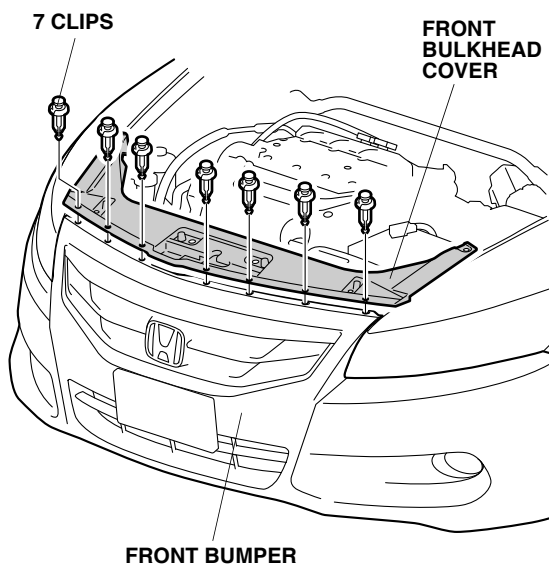

4. Attach tape to the front bumper as shown.

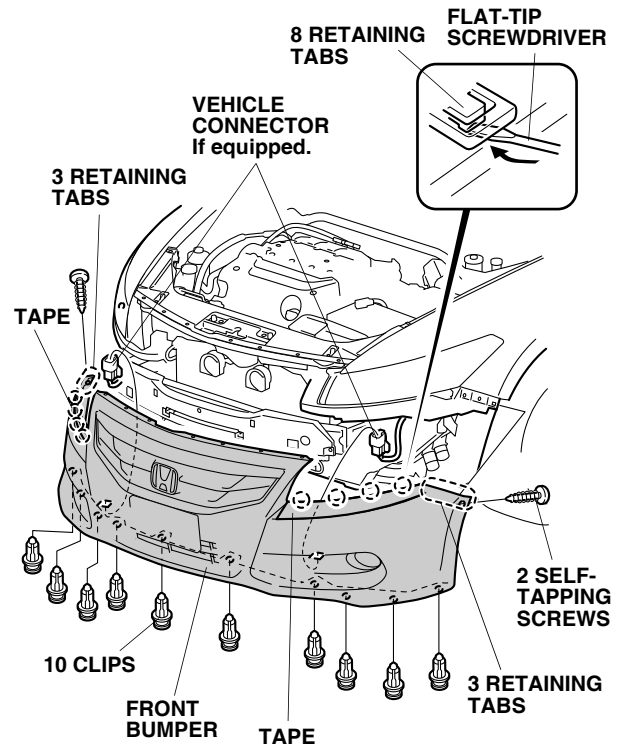


5. Remove two self-tapping screws and ten clips.
6. Remove the front bumper (fourteen retaining tabs and unplug the vehicle connectors, if equipped).

**NOTE:** Have an assistant help you when removing the front bumper. Place the front bumper on a blanket after removal.

If the vehicle is equipped with fog lights, continue with step 7; if not, go to step 9.

With fog lights


7. Remove the left fog light (four self-tapping screws).

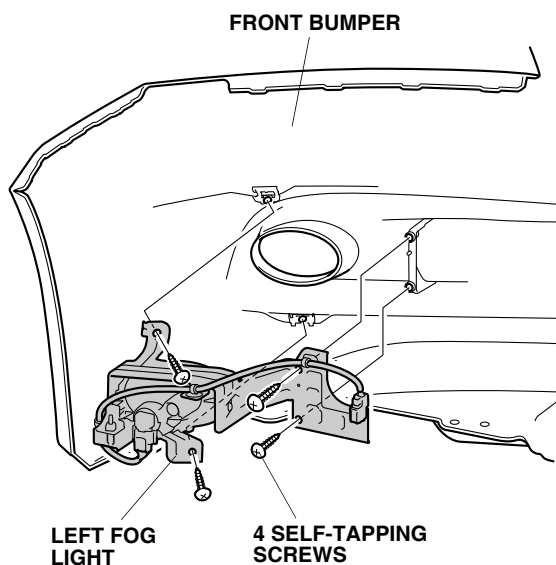

8. Repeat step 7 on the right side of the bumper.


### Installing the Front Under Spoilers

9. Using a pushpin, pierce three scribe marks on the front bumper.

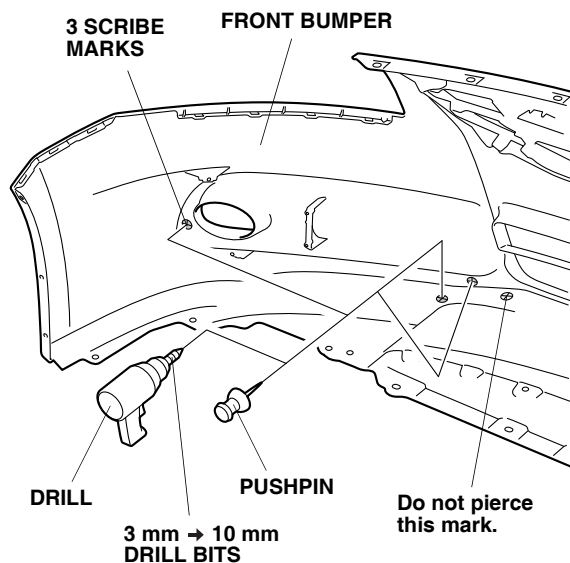


10. While wearing eye protection, drill the three pierced marks on the front bumper with a 3 mm drill bit, then enlarge the holes with a 10 mm drill bit. Remove any burrs.


11. Drill two holes at the two dimples in the front bumper with a 5 mm drill bit. Remove any burrs.

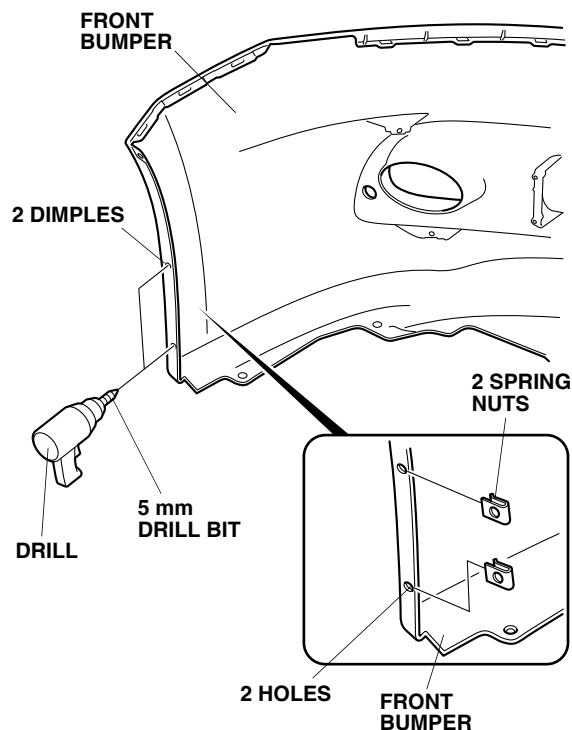


12. Insert two spring nuts over the two holes made in the front bumper in step 11. Make sure to install the spring nuts in the correct position and orientation.
13. Repeat steps 9 through 12 on the right side of the bumper.
14. Attach pieces of masking tape to the ends of the adhesive backings as shown. Peel back the adhesive backings 1-1/2 to 2 inches and temporarily attach them to the outer surface of the left front under spoiler.

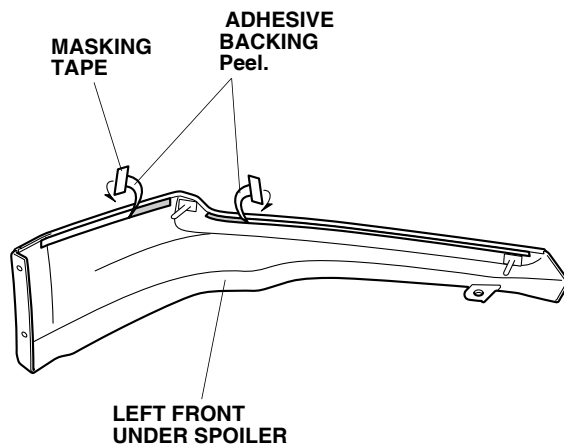


15. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the left front under spoiler will attach.

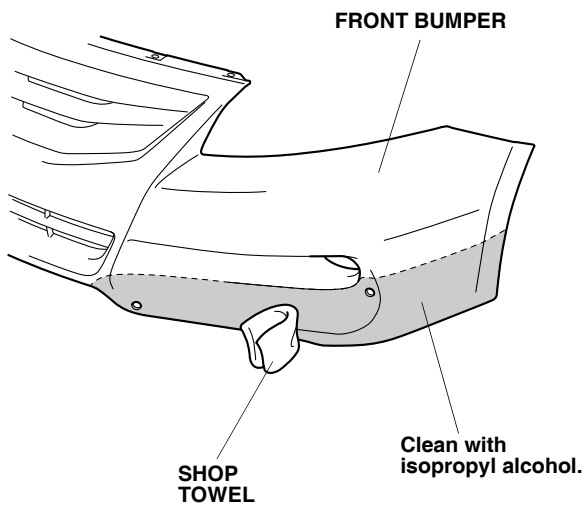


16. Install the left front under spoiler to the front bumper in the order shown.

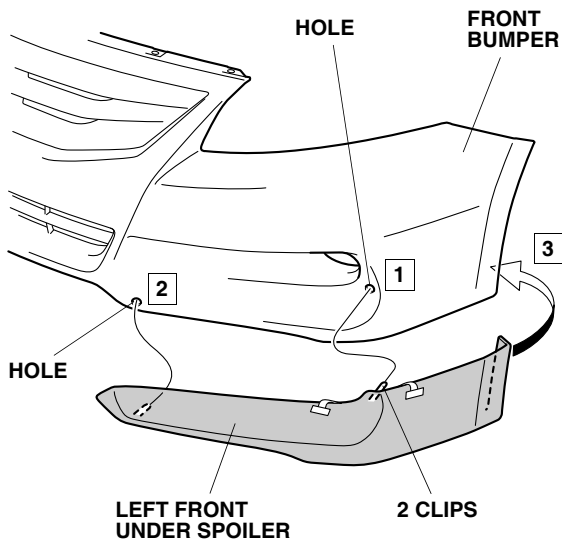


17. Loosely install two self-tapping screws to the left front under spoiler and bumper.

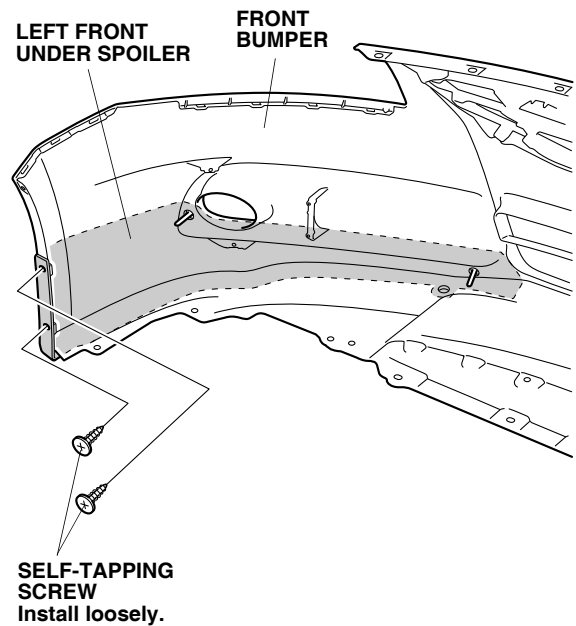

18. Secure the left front under spoiler to the front bumper with two clip retainers and four seals. Using diagonal cutters, cut the excess off the two clips as shown.

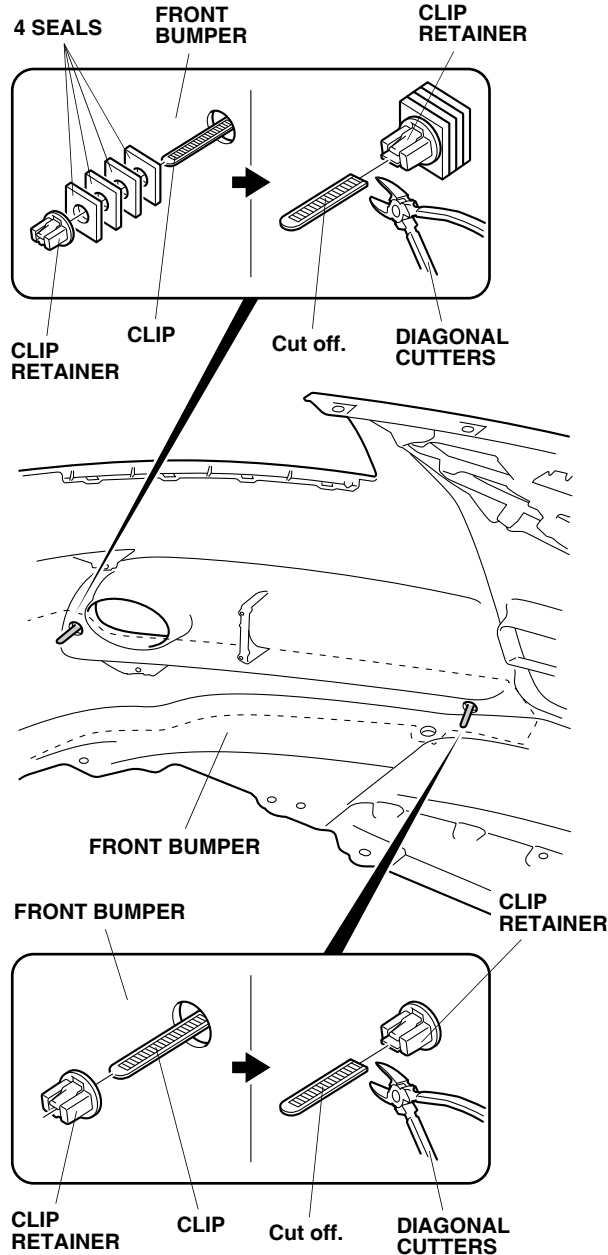


19. Secure the left front under spoiler to the front bumper with one clip.

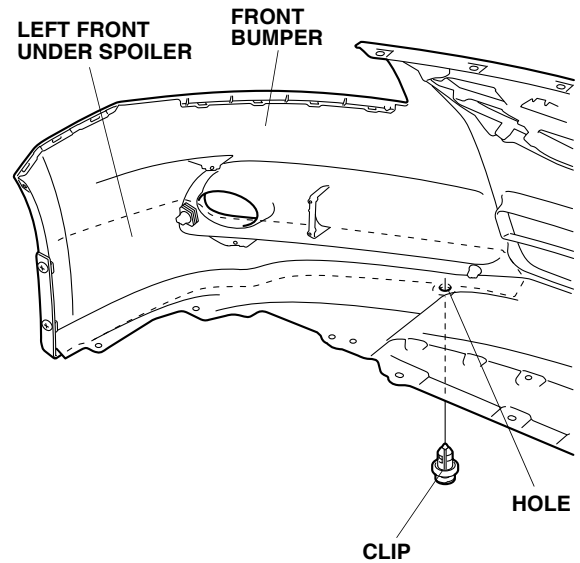

20. Repeat steps 14 through 19 on the right side of the bumper.  
 21. Reinstall the fog lights to the front bumper, if equipped, then reinstall the front bumper.


**NOTE:** Have an assistant help you when installing the front bumper.

22. Align the character line on the left front under spoiler and the front bumper as shown. While applying light pressure against the left front under spoiler, carefully remove the taped adhesive backings.

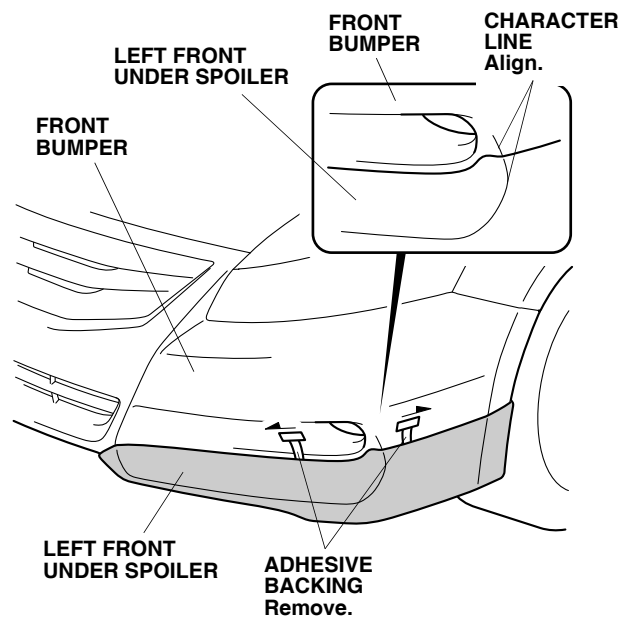

23. Using the palms of your hands, firmly press the left front under spoiler against the front bumper.

24. Using a rubber roller, apply pressure against the left front under spoiler and roll from one end to the other.

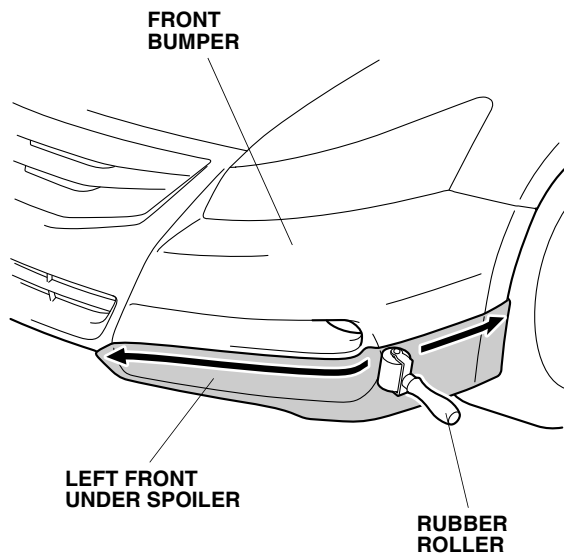

25. Tighten the two self-tapping screws loosely installed in step 17.
26. Repeat steps 22 through 25 on the right side of the vehicle.
27. Reinstall all removed parts.
28. Reconnect the negative cable to the battery.
29. Enter the anti-theft code for the radio and navigation system, if equipped, and reset the radio station presets.
30. Reset the clock.