

Accessory

TRUNK TRAY P/N 08U45-T3V-100 Application

2014 ACCORD HYBRID

Publications No. All 50535

Issue Date
OCT 2013

PART LIST


Trunk tray



TOOLS AND SUPPLIES REQUIRED

Utility knife

Illustration of the Trunk Tray in the Vehicle

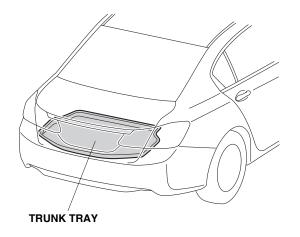


QBN1204AY

INSTALLATION

If the vehicle is equipped with the cargo net, go to step 2; otherwise, continue with step 1.


Without Cargo Net

1. Open the trunk lid. Place the trunk tray on the trunk floor.

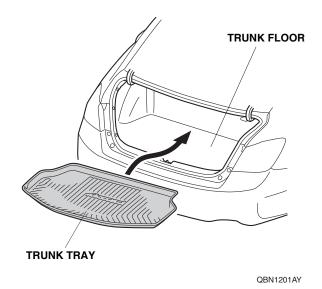

With Cargo Net

2. Using an utility knife, cut off the trunk tray as shown.

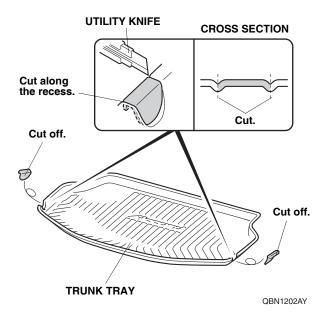

3. Open the trunk lid. Place the trunk tray on the trunk floor.

