



INSTALLATION INSTRUCTIONS

Accessory
SKI / SNOWBOARD
ATTACHMENT
P/N 08L03-E09-100


Application
2015 CROSSTOUR

Publications No.
VERSION 1
Issue Date
AUG 2014

Put this information in the glove box with the vehicle owner's manual.

PARTS LIST

2 Ski / snowboard attachments

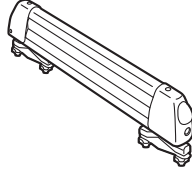

Wrench




2 Keys



8 Collars



4 Brackets

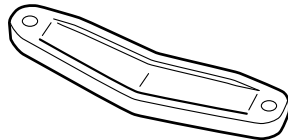

8 Bolts





Illustration of the Ski / Snowboard Attachment on the Vehicle

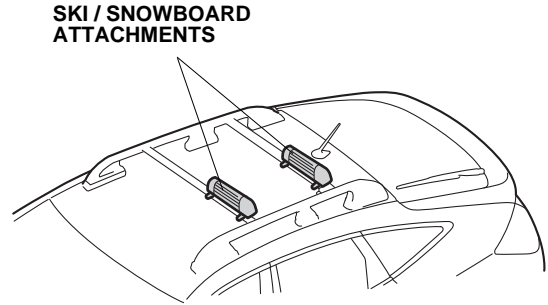

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- This ski/snowboard attachment is designed to be used exclusively with the crossbars, which are sold separately.
- Do not use non-Honda accessories, carriers or attachment sets with this ski/snowboard attachment kit.
- Install the ski/snowboard attachment after installing the crossbars on the roof.
- Do not damage the roof and other painted surfaces of the body when installing the ski/snowboard attachment.

Installing the Ski / Snowboard attachment


1. Insert the key and turn it clockwise to unlock the ski/snowboard attachment.

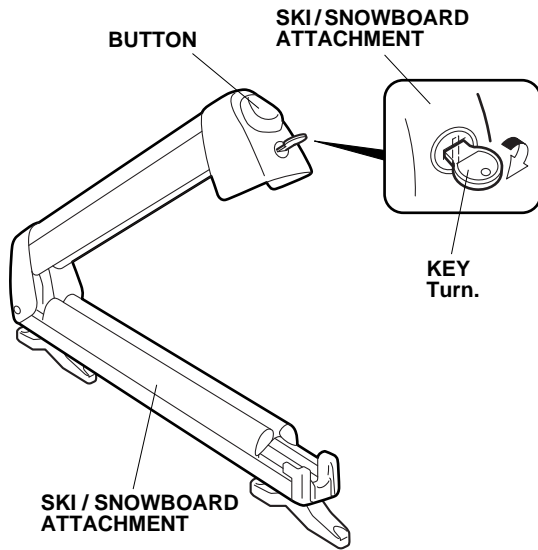


2. Push the button and raise the holder block on the ski/snowboard attachment.
3. Turn the two brackets on the ski/snowboard attachment as shown.

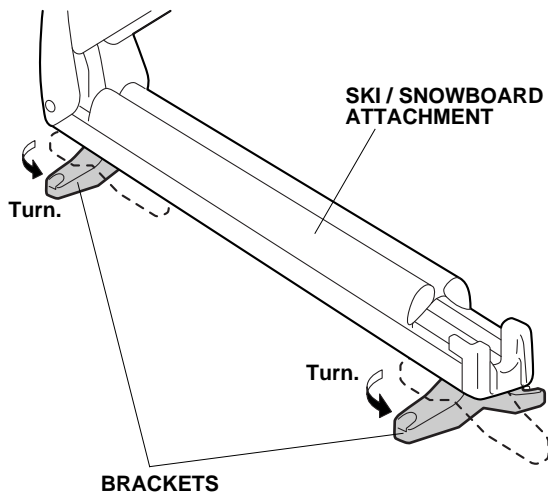


4. Using the supplied wrench, install the ski/snowboard attachment to the front crossbar with four bolts, four collars, and two brackets.

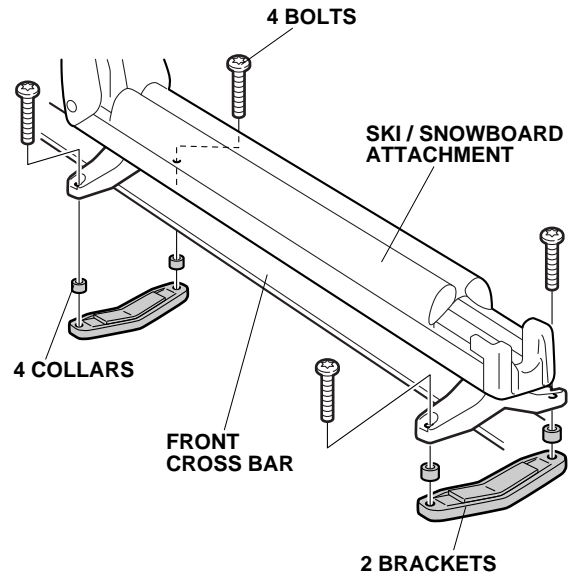

5. Repeat steps 1 through 4 to install the other ski/snowboard attachment on the rear crossbar.
6. Check the installation: Rock the ski/snowboard attachment in all directions to make sure it is installed securely without play and does not rattle. If you find play or rattling, check the tightness of the bolts.

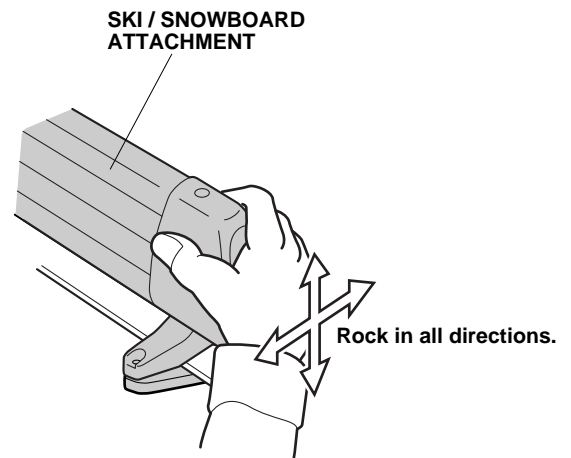


7. Write down the key number in the box below in case the key is lost or stolen.

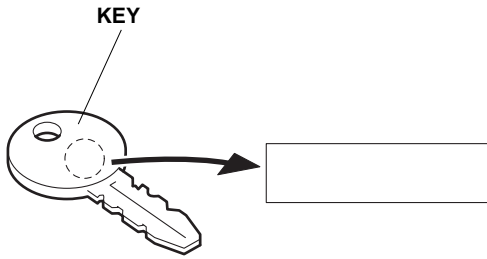


How to Load Skis on the Ski/Snowboard Attachment

8. Load the skis with the rear of the skis facing the front of the vehicle.

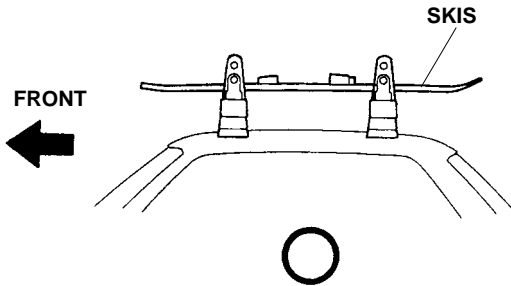


9. If the bindings cannot be positioned between the front and the rear attachments, install the skis with the rear bindings behind the rear attachment as shown.

ENOUGH SPAN

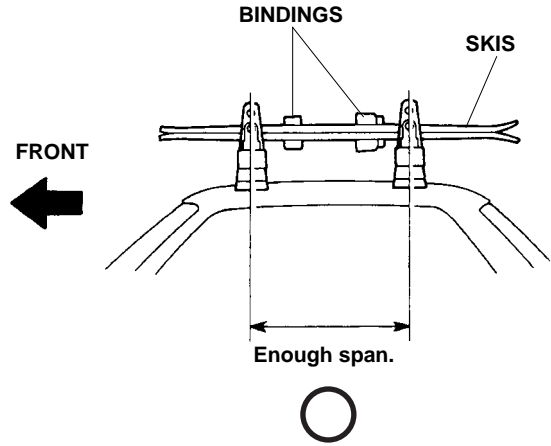


NOT ENOUGH SPAN

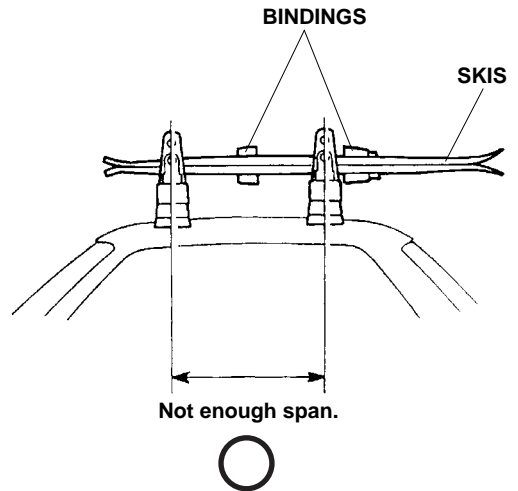


How to Load a Snowboard on the Ski/Snowboard Attachment

10. Load the snowboard with its bindings positioned between the front and the rear attachments.

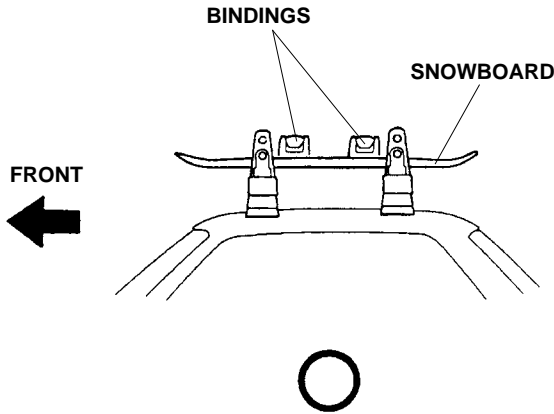

11. If the bindings cannot be positioned between the front and the rear attachments, install the snowboard with a binding behind the rear attachment as shown.

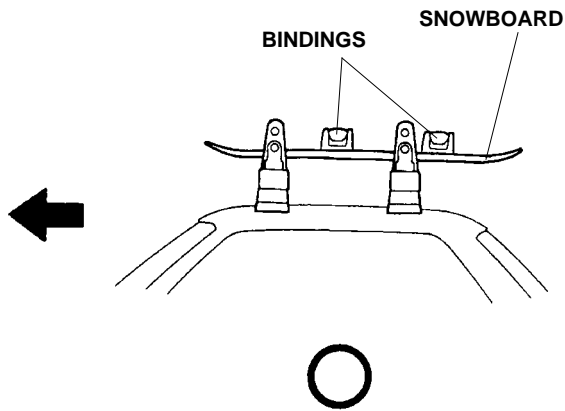

USE AND CARE

- Do not carry more than four pairs of skis or more than one snowboard on the attachment.
- The ski/snowboard attachment raises the overall height of the vehicle. Pay attention to overhead obstacles when driving with the ski/snowboard attachment.
- Before and after driving, or after loading skis or a snowboard on the attachment, check the security of the attachment mounts and retighten them as necessary.
- Avoid sudden starts or stops with the attachment on the vehicle. It may cause bolts and other fasteners to loosen.
- Obey local laws and regulations.
- Before driving, check that the attachment is locked securely regardless of whether or not skis or a snowboard is mounted on the attachment.
- Do not use the ski/snowboard attachment on vehicles other than those specified.