



INSTALLATION INSTRUCTIONS


Accessory
A-PILLAR DECORATIONS
P/N 08F34-SZT-100A

Application
2016 CR-Z


Publications No.
VERSION 1
Issue Date
OCT 2015

PARTS LIST

Left A-pillar decoration

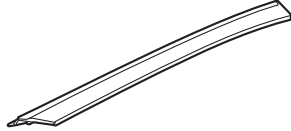

Right A-pillar decoration

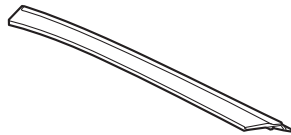


TOOL AND SUPPLIES REQUIRED

Masking tape

Clip puller

Illustration of the A-Pillar Decorations on the Vehicle

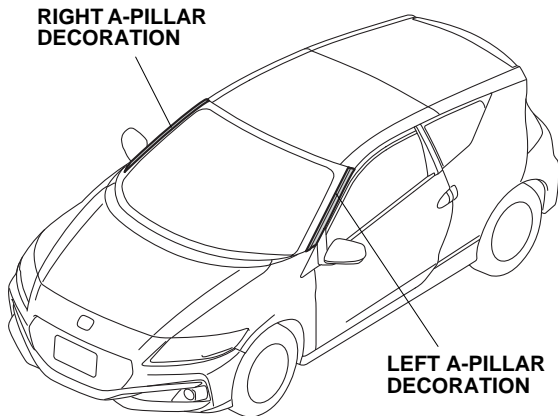


QE31724AG

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE: Do not damage the paint finish.

1. Remove the left front wind trim as shown.

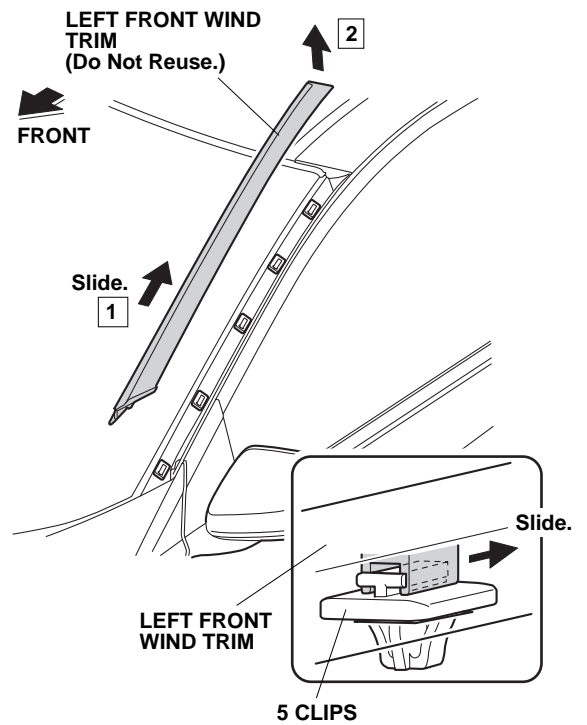


QE51304AB

- Turn the clips 90°, and remove the four clips.

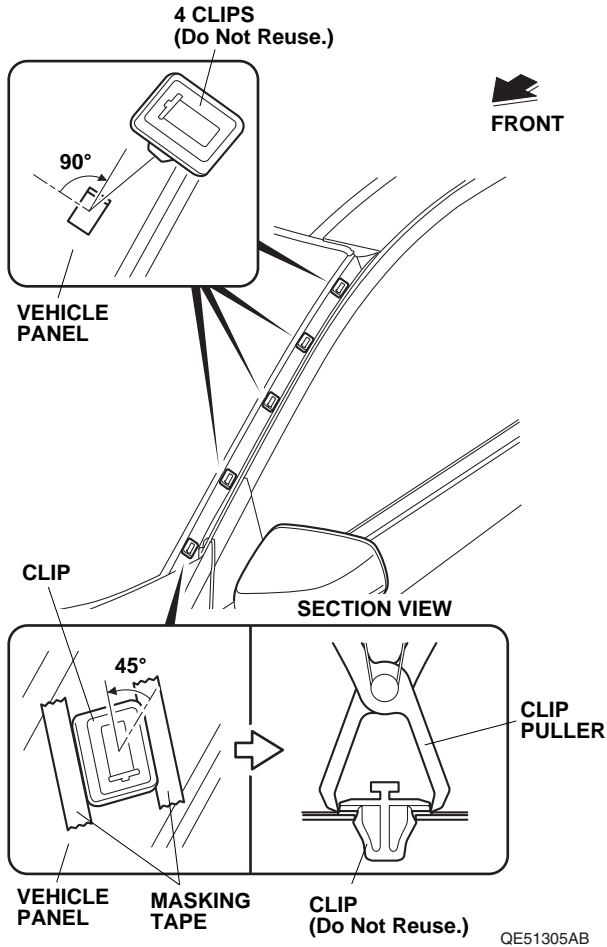

- Turn the remaining clip 45°. Apply masking tape to the vehicle panel as shown.
- Using a clip puller, remove the clip.
- Remove the masking tape attached in step 3.

- Install the left A-pillar decoration to the vehicle panel with five clips.

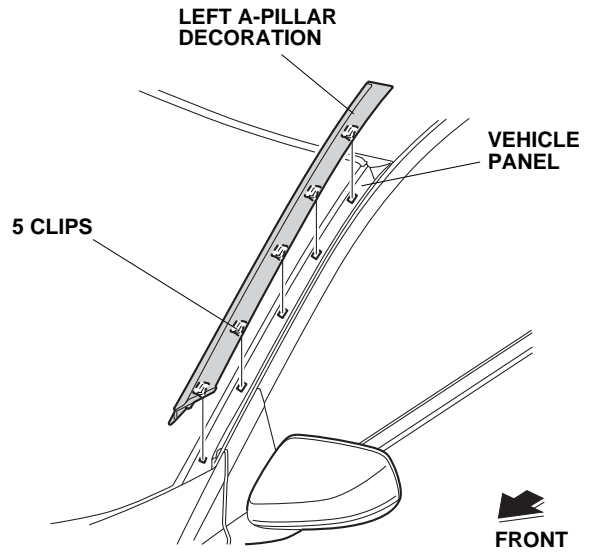

971504BX

- Repeat steps 1 through 6 on the right side.